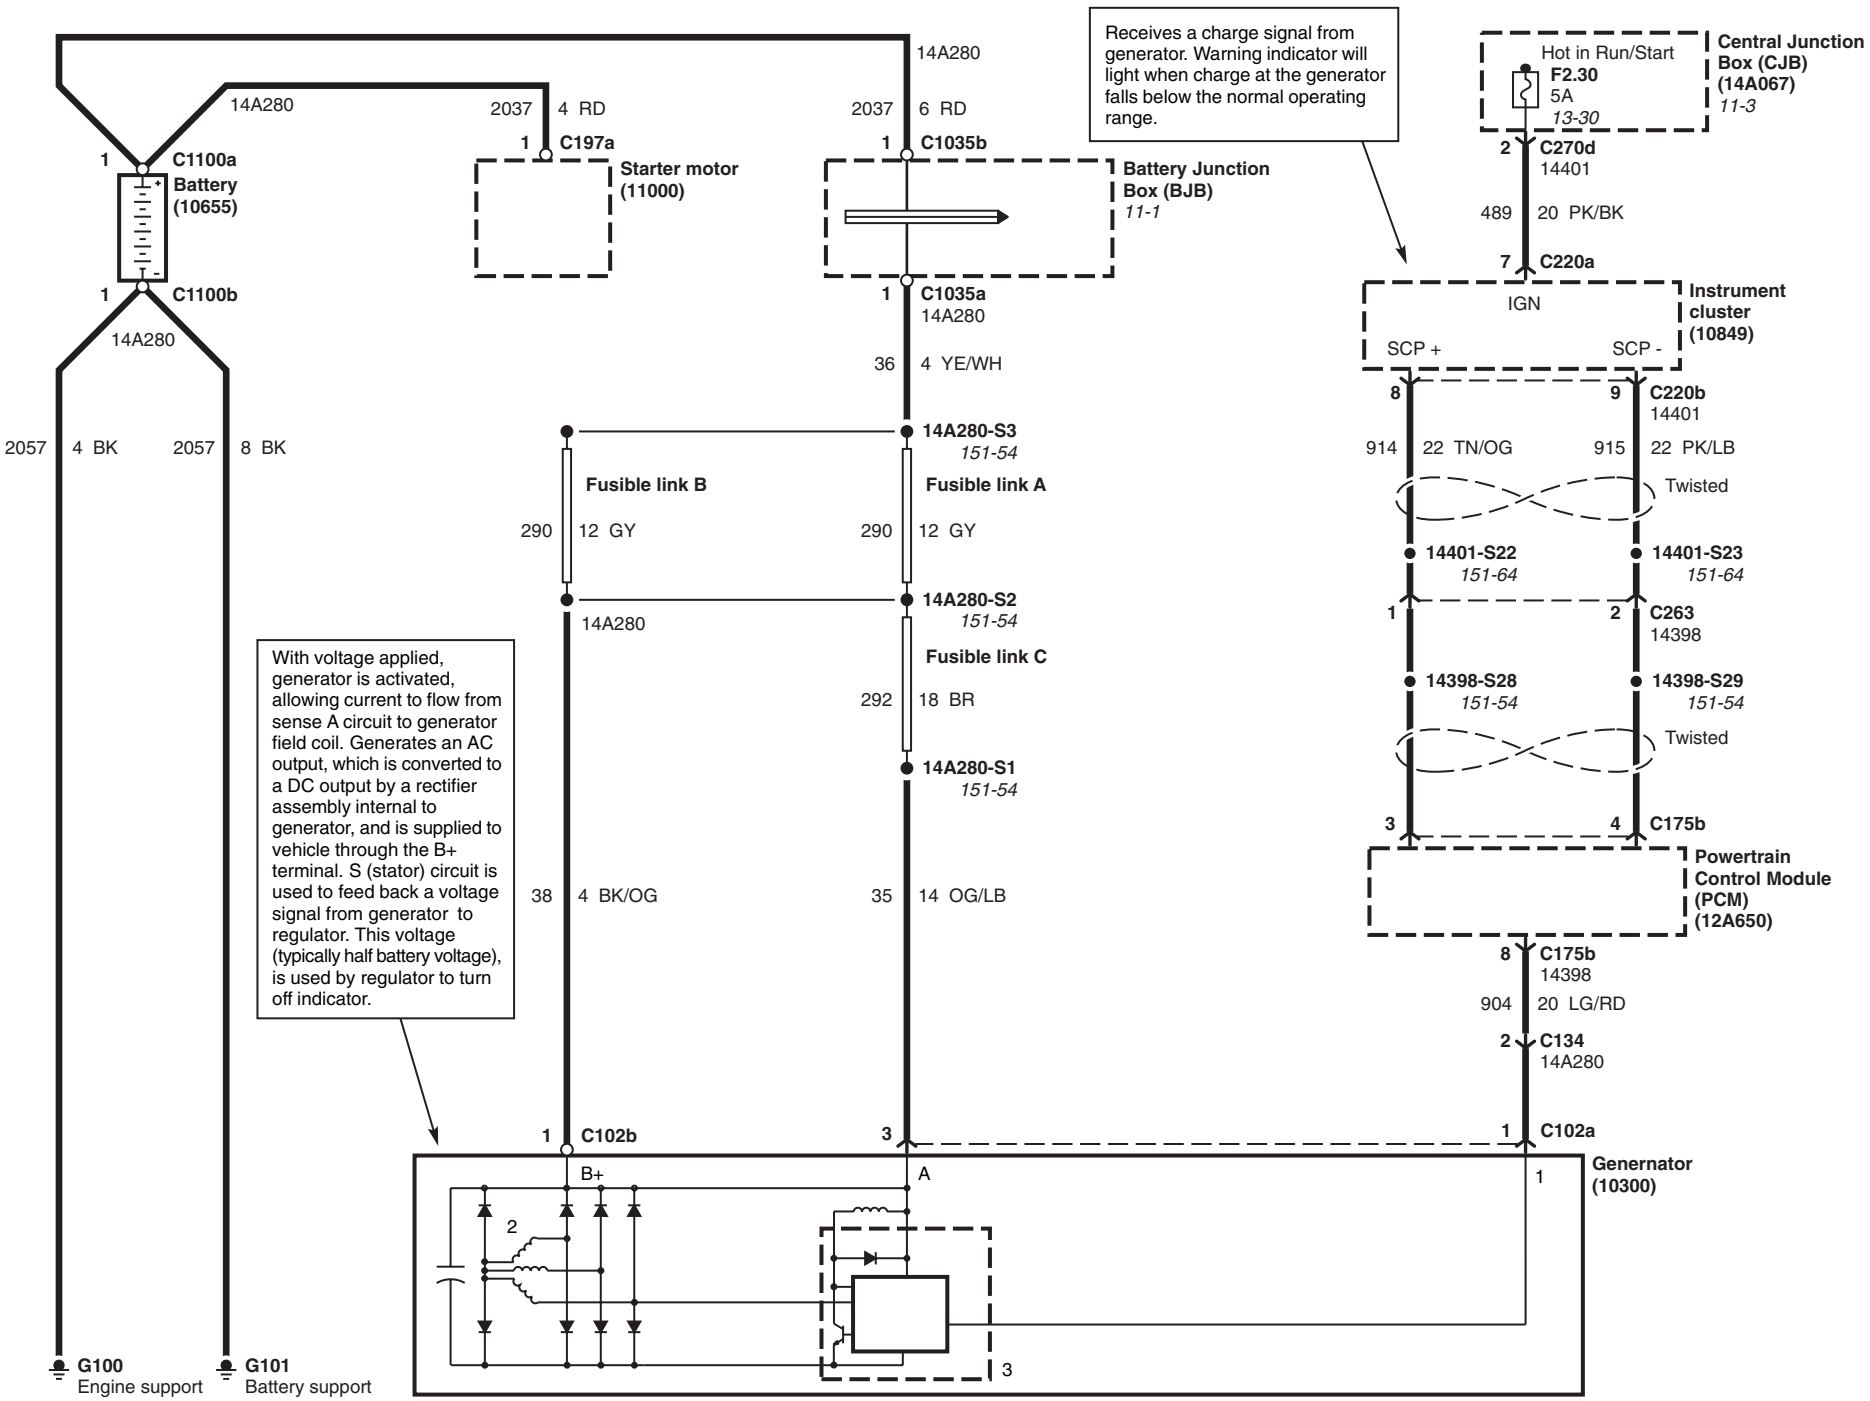
Receives a charge signal from generator. Warning indicator will light when charge at the generator falls below the normal operating range.
With voltage applied, generator is activated, allowing current to flow from sense A circuit to generator field coil. Generates an AC output, which is converted to a DC output by a rectifier assembly internal to generator, and is supplied to vehicle through the B+ terminal. S (stator) circuit is used to feed back a voltage signal from generator to regulator. This voltage (typically half battery voltage), is used by regulator to turn off indicator.
14A280
1 C1100a
Battery (10655)
1 C1100b
14A280
2057 4 BK
2057 8 BK
G100 Engine support
G101 Battery support
2057 4 RD
1 C197a
Starter motor (11000)
14A280
2037 6 RD
1 C1035b
Battery Junction Box (BJB) 11-1
1 C1035a
14A280
36 4 YE/WH
14A280-S3 151-54
Fusible link B
290 12 GY
Fusible link A
290 12 GY
14A280-S2 151-54
14A280
Fusible link C
292 18 BR
14A280-S1 151-54
38 4 BK/OG
35 14 OG/LB
1 C102b
3
B+
A
2
3
1 C102a
1
Generator (10300)
Hot in Run/Start
F2.30
5A
13-30
Central Junction Box (CJB) (14A067) 11-3
2 C270d
14401
489 20 PK/BK
7 C220a
IGN
Instrument cluster (10849)
SCP +
SCP -
8 9 C220b
14401
914 22 TN/OG
915 22 PK/LB
Twisted
14401-S22 151-64
14401-S23 151-64
1 2 C263
14398
14398-S28 151-54
14398-S29 151-54
Twisted
3 4 C175b
Powertrain Control Module (PCM) (12A650)
8 C175b
14398
904 20 LG/RD
2 C134
14A280