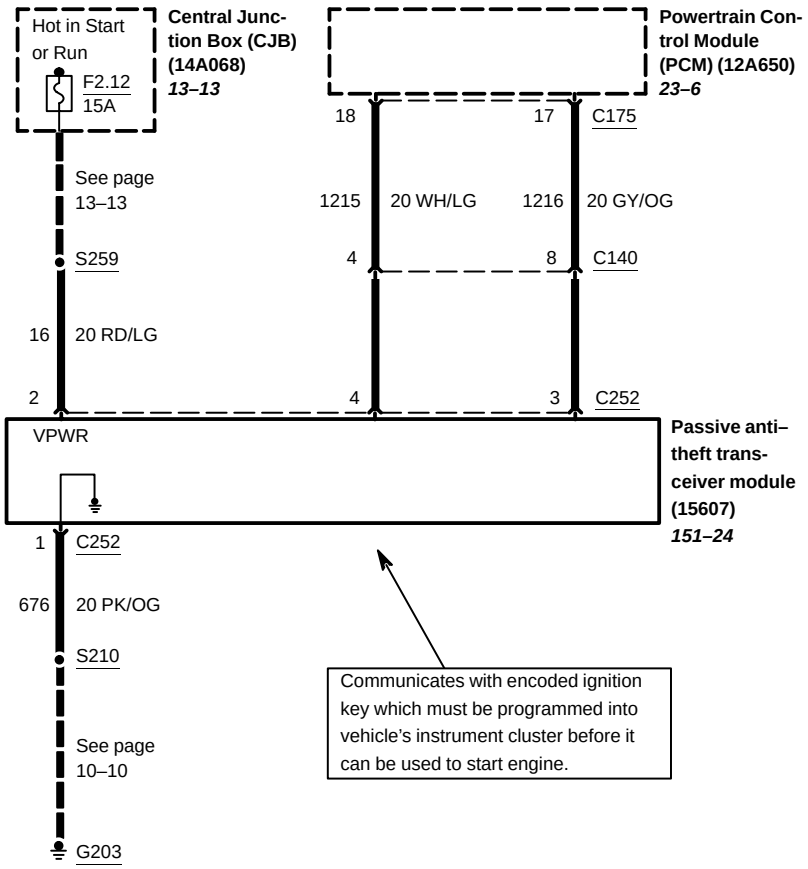
Hot in Start or Run
F2.12
15A
Central Junction Box (CJB) (14A068)
13–13
Powertrain Control Module (PCM) (12A650)
23–6
18
17
C175
See page 13–13
1215
20 WH/LG
1216
20 GY/OG
S259
4
8
C140
16
20 RD/LG
2
4
3
C252
VPWR
Passive anti–theft transceiver module (15607)
151–24
1
C252
676
20 PK/OG
S210
See page 10–10
G203
Communicates with encoded ignition key which must be programmed into vehicle's instrument cluster before it can be used to start engine.

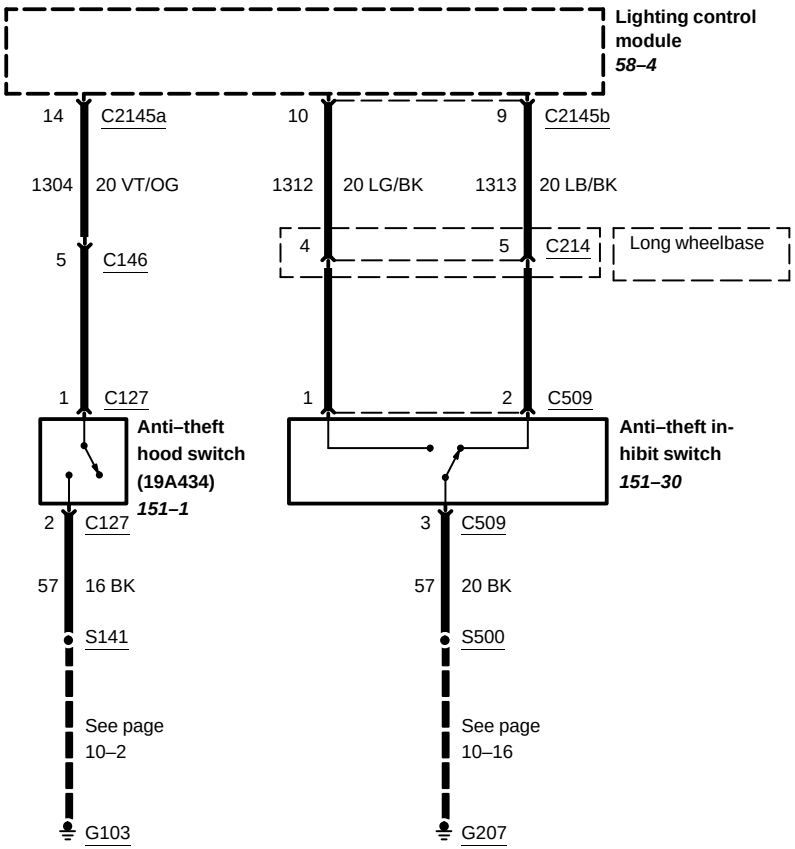
Lighting control module
58–4
14
C2145a
10
9
C2145b
1304
20 VT/OG
1312
20 LG/BK
1313
20 LB/BK
4
5
C214
Long wheelbase
5
C146
1
C127
1
2
C509
Anti–theft hood switch (19A434)
151–1
Anti–theft inhibit switch
151–30
2
C127
3
C509
57
16 BK
57
20 BK
S141
S500
See page 10–2
See page 10–16
G103
G207