C330

14B084

N217
Seat adjust switch,
passenger side front

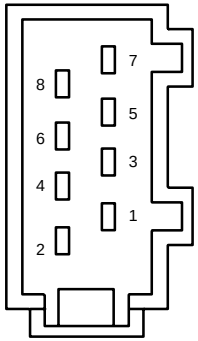

F08161

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	985 (RD/LB)	Seat adjust switch, to, rear, Tilt, Seat motor
3	986 (YE/WH)	Seat adjust switch, to, Passenger seat horizontal motor
4	988 (YE/LG)	Seat adjust switch, to, rear, Tilt, Seat motor
5	987 (RD/WH)	Seat adjust switch, to, Passenger seat horizontal motor
6	989 (RD/LG)	Seat adjust switch, to, rear, Tilt, Seat motor
7	1462 (RD/WH)	Fused battery feed
8	984 (YE/LB)	Seat adjust switch, to, rear, Tilt, Seat motor

C331

14B084

N446
Lumbar adjust
switch, right front

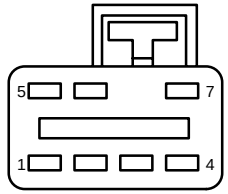

F07055

Pin	Circuit	Circuit function
1	1097 (BN)	Power lumbar switch, left, to, Front seat lumbar compressor motor
2	1462 (RD/WH)	Fused battery feed
3	570 (BK/WH)	Ground
4	–	not used
5	–	not used
6	57 (BK)	Ground
7	1094 (PK)	Power lumbar switch, left, to, Front seat lumbar compressor motor

C336

14B122

M235
Passenger seat
lumbar compressor
motor (65500)

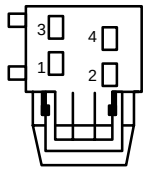

F04140

Pin	Circuit	Circuit function
1	1094 (PK)	Power lumbar switch, left, to, Front seat lumbar compressor motor
2	1097 (BN)	Power lumbar switch, left, to, Front seat lumbar compressor motor