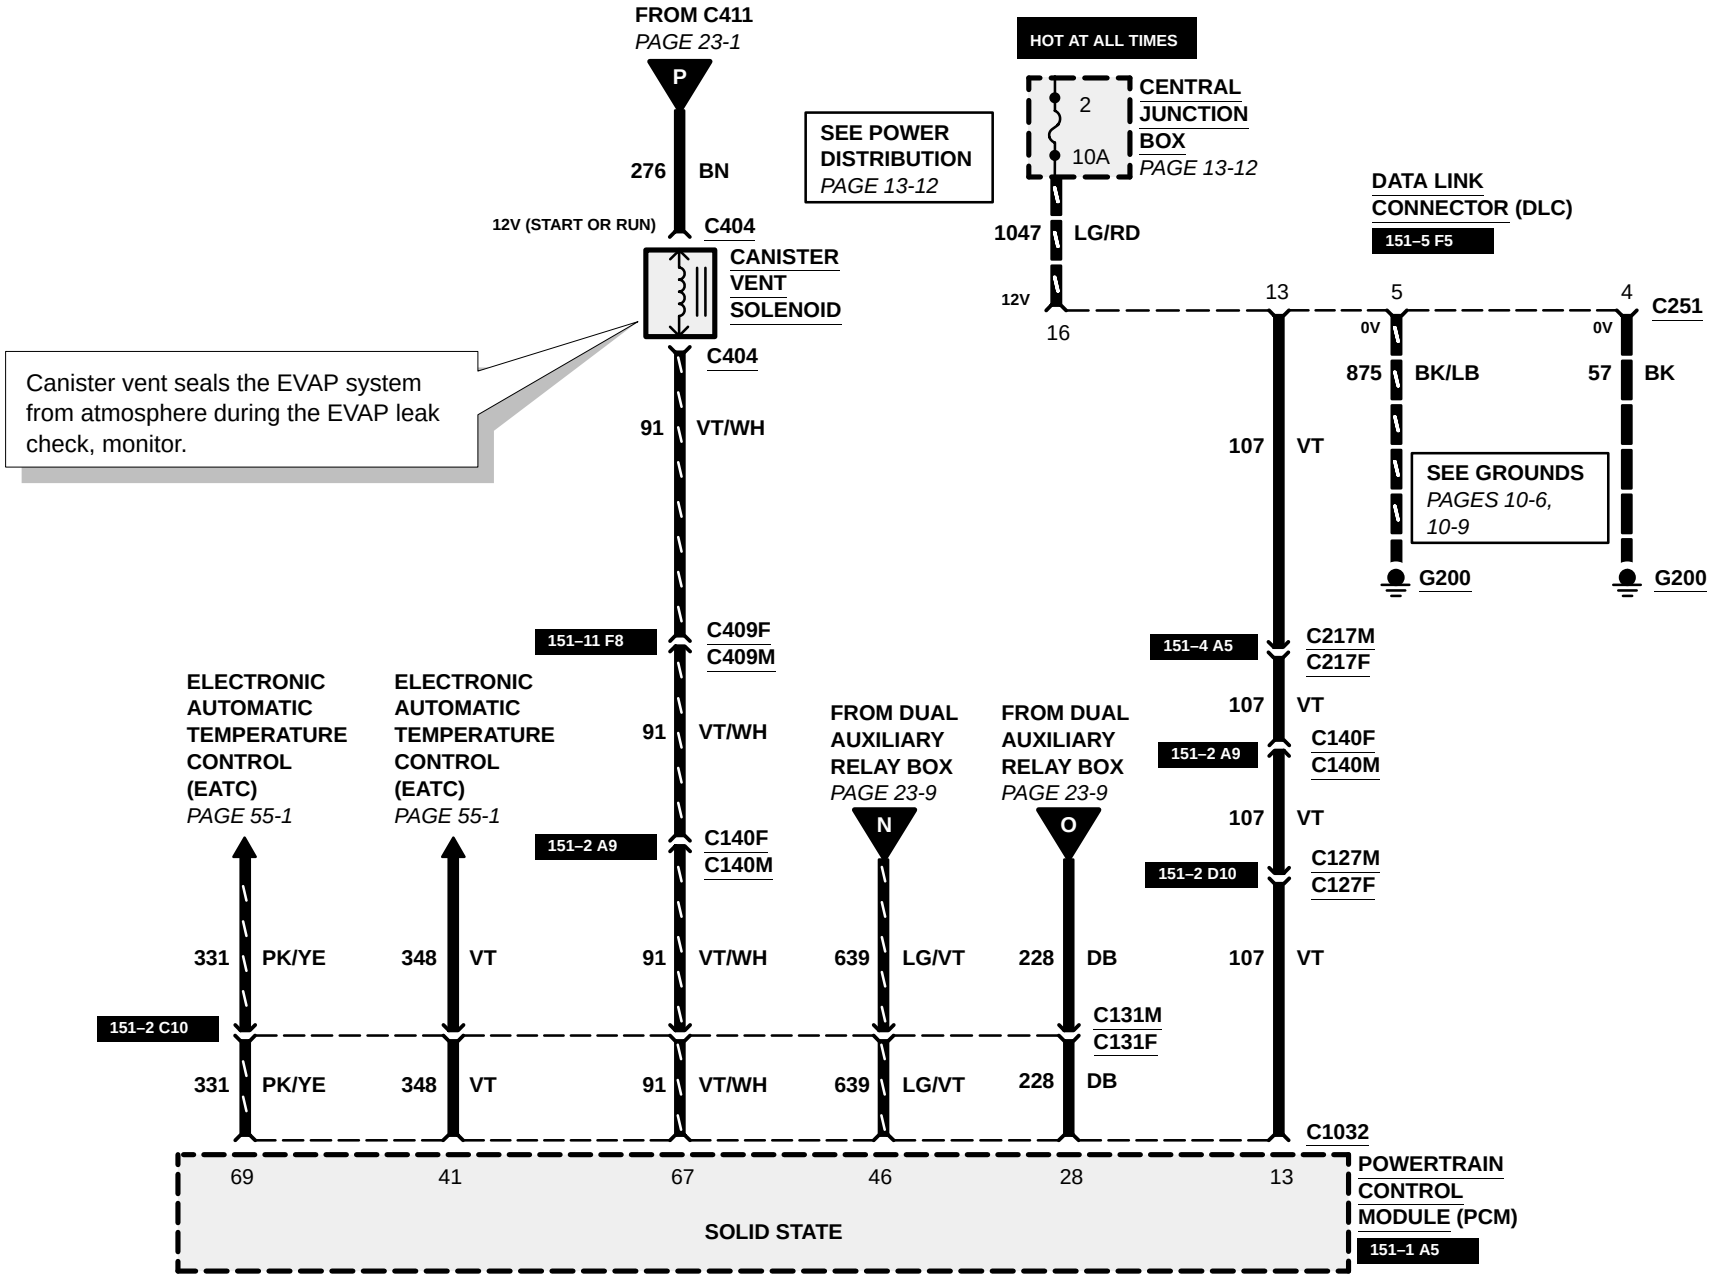
FROM C411
PAGE 23-1
P
276 BN
12V (START OR RUN)
C404
CANISTER VENT SOLENOID
C404
91 VT/WH
Canister vent seals the EVAP system from atmosphere during the EVAP leak check, monitor.
HOT AT ALL TIMES
2
10A
CENTRAL JUNCTION BOX
PAGE 13-12
SEE POWER DISTRIBUTION
PAGE 13-12
1047 LG/RD
12V
16
13
DATA LINK CONNECTOR (DLC)
151–5 F5
5
4
C251
0V
0V
875 BK/LB
57 BK
SEE GROUNDS
PAGES 10-6, 10-9
G200
G200
107 VT
151–11 F8
C409F
C409M
151–4 A5
C217M
C217F
107 VT
151–2 A9
C140F
C140M
107 VT
151–2 D10
C127M
C127F
107 VT
ELECTRONIC AUTOMATIC TEMPERATURE CONTROL (EATC)
PAGE 55-1
ELECTRONIC AUTOMATIC TEMPERATURE CONTROL (EATC)
PAGE 55-1
FROM DUAL AUXILIARY RELAY BOX
PAGE 23-9
N
FROM DUAL AUXILIARY RELAY BOX
PAGE 23-9
O
91 VT/WH
151–2 A9
C140F
C140M
331 PK/YE
348 VT
91 VT/WH
639 LG/VT
228 DB
151–2 C10
C131M
C131F
331 PK/YE
348 VT
91 VT
639 LG/VT
228 DB
C1032
69
41
67
46
28
13
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–1 A5