C185

12B637

Fuel injector 5
(9F593)

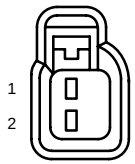

F02058

Pin	Circuit	Circuit function
1	559 (TN/BK)	Fuel injector 5, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C188

12B637

Fuel injector 8
(9F593)

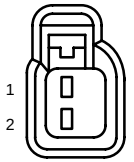

F02058

Pin	Circuit	Circuit function
1	562 (LB)	Fuel injector 8, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C186

12B637

Fuel injector 6
(9F593)

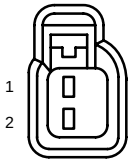

F02058

Pin	Circuit	Circuit function
1	560 (LG/OG)	Fuel injector 6, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C192

14290

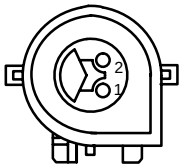

F02469

14B060

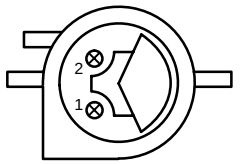

F02046

(1)
(2) 113 (YE/LB)

C187

12B637

Fuel injector 7
(9F593)

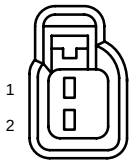

F02058

Pin	Circuit	Circuit function
1	561 (TN/RD)	Fuel injector 7, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C197a

14B060

Starter motor
(11002)



F01085

Pin	Circuit	Circuit function
1	2037 (RD)	Battery cable +