## C612

### 14A005

Y18
Speaker, right front
(18808)

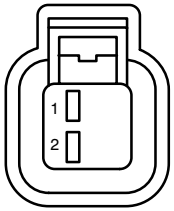


F02069

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 8-MD17 (WH/RD) | Speaker, right front (18808) (+) |
| 2 | 10-MD17 (GY/RD) | Speaker, right front (18808) (–) |

## C929

### 14A005

E238
Interior/map lamps
assembly, front

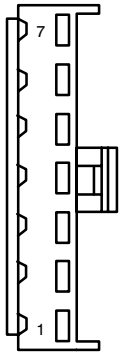


F07075

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | – | not used |
| 2 | 31-LB19 (BK/BU) | Ground |
| 3 | – | not used |
| 4 | – | not used |
| 5 | – | not used |
| 6 | 9-LB14 (BN/BU) | Sensor signal return (reference/ground) |
| 7 | 29-LB22 (OG/GN) | Voltage supplied at all times (overload protected) |

## C1001

### 14290

K316
Wiper high/low relay

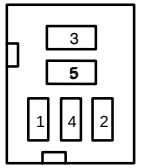


F05064

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | – | not used |
| 2 | 91S-KA16 (BK/GN) | Ground, Switched |
| 3 | 30S-KA12 (RD/WH) | Voltage: Ignition switch in Accessory or Run, Switched |
| 4 | 30S-KA10 (RD/GN) | Voltage: Ignition switch in Accessory or Run, Switched |
| 5 | 30S-KA11 (RD/BK) | Voltage: Ignition switch in Accessory or Run, Switched |