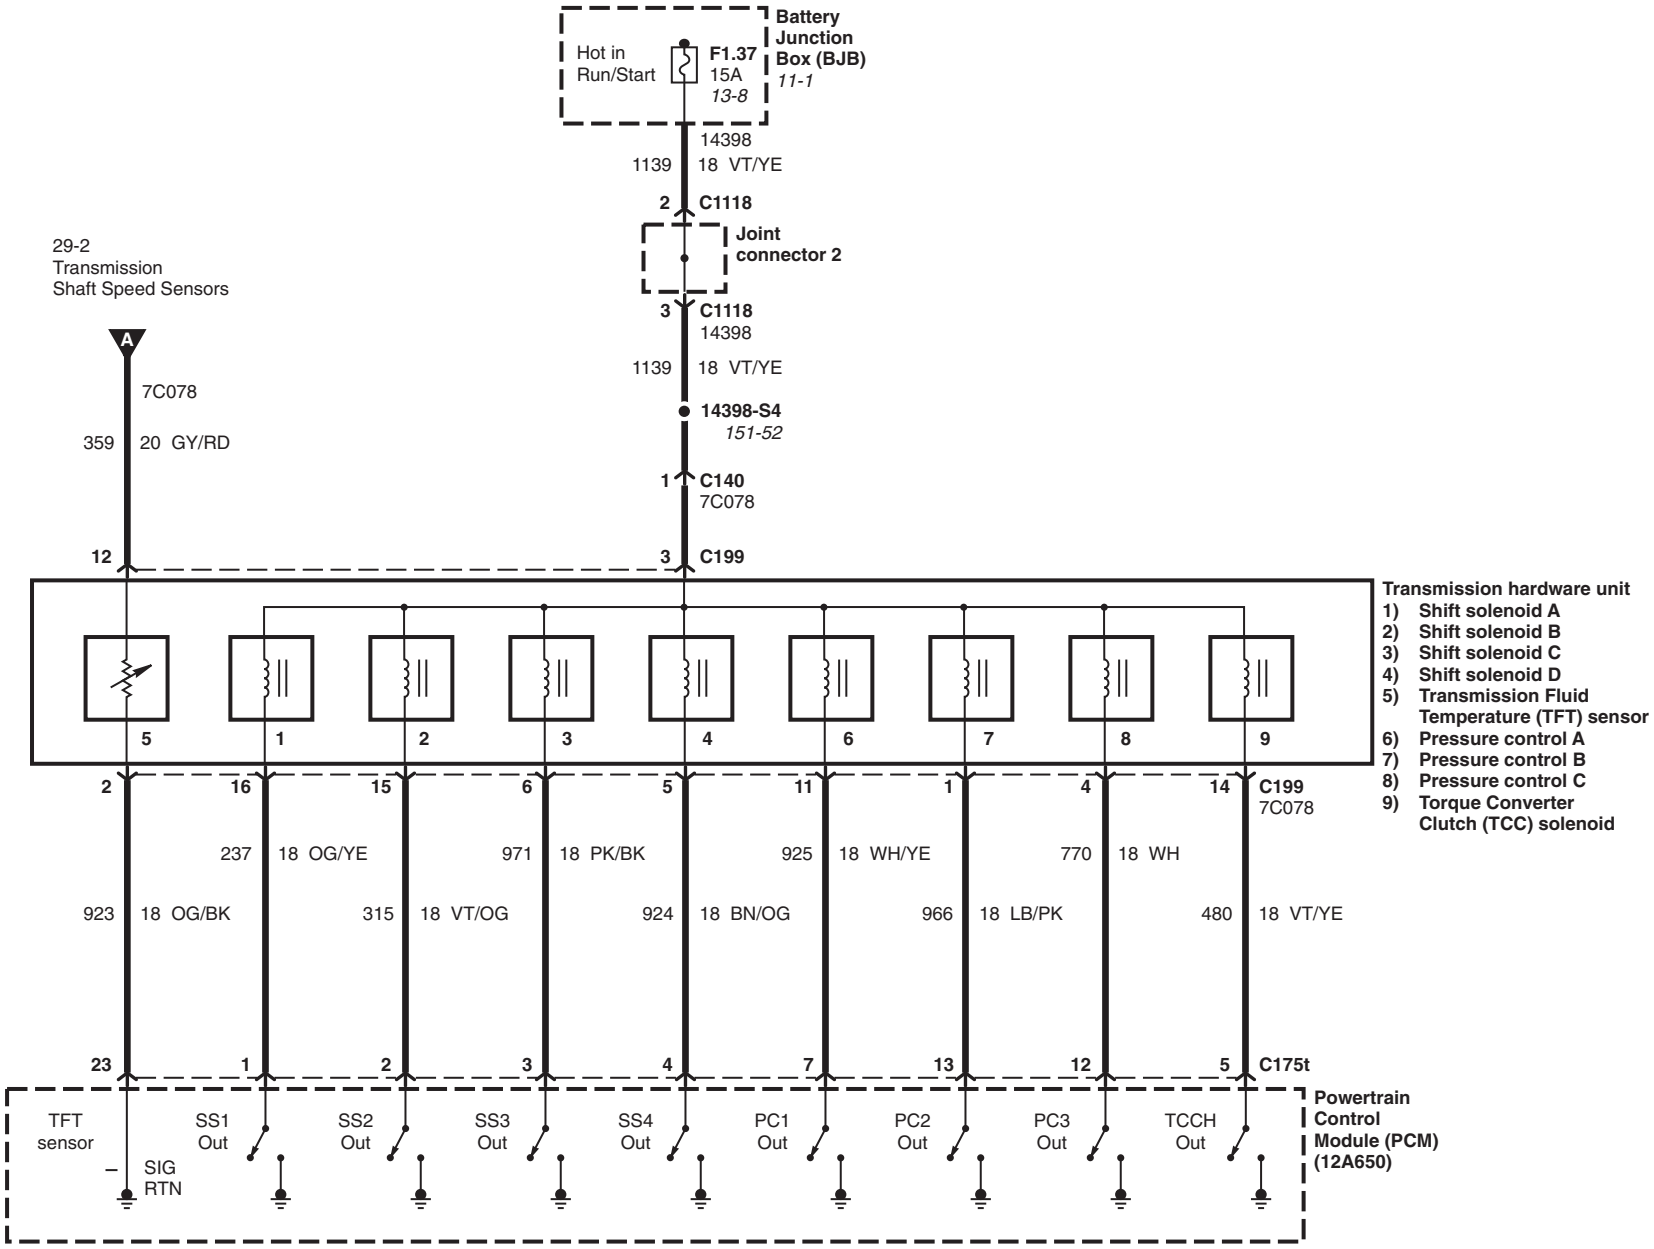
Battery Junction Box (BJB)
Hot in Run/Start
F1.37 15A
13-8
11-1
14398
1139 18 VT/YE
2 C1118
Joint connector 2
29-2 Transmission Shaft Speed Sensors
A
3 C1118
14398
1139 18 VT/YE
14398-S4
151-52
7C078
359 20 GY/RD
1 C140
7C078
12
3 C199
Transmission hardware unit
1) Shift solenoid A
2) Shift solenoid B
3) Shift solenoid C
4) Shift solenoid D
5) Transmission Fluid Temperature (TFT) sensor
6) Pressure control A
7) Pressure control B
8) Pressure control C
9) Torque Converter Clutch (TCC) solenoid
5 1 2 3 4 6 7 8 9
2 16 15 6 5 11 1 4 14 C199
7C078
237 18 OG/YE
971 18 PK/BK
925 18 WH/YE
770 18 WH
923 18 OG/BK
315 18 VT/OG
924 18 BN/OG
966 18 LB/PK
480 18 VT/YE
23 1 2 3 4 7 13 12 5 C175t
TFT sensor
SIG RTN
SS1 Out
SS2 Out
SS3 Out
SS4 Out
PC1 Out
PC2 Out
PC3 Out
TCCH Out
Powertrain Control Module (PCM) (12A650)