C128

14290

B22
Mass Air Flow
(MAF) sensor
(12B579)

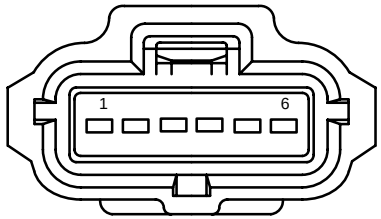

F06077

Pin	Circuit	Circuit function
1	–	not used
2	15S-RJ22 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), Switched
3	31-RJ22 (BK/OG)	Ground
4	9-RJ22 (BN/BU)	Sensor signal return (reference/ground)
5	8-RJ22 (WH/BU)	Sensor signal
6	–	not used

C129

14290

B213
Intake Air Temperature (IAT) sensor
(12A697)

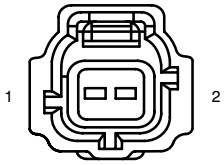

F02103

Pin	Circuit	Circuit function
1	8-RJ17 (WH/VT)	Sensor signal
2	9-RJ17 (BN/WH)	Sensor signal return (reference/ground)

C131

14290

H1
Horn (13832)

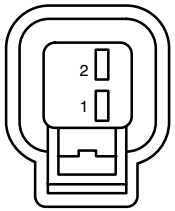

F02069

Pin	Circuit	Circuit function
1	30S-GJ6 (RD/YE)	Voltage supplied at all times (not overload protected), Switched
2	31-GJ6 (BK/YE)	Ground

C132

14290

B203
Ambient air temperature sensor
(19E702)

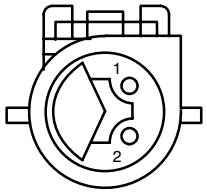

F02117

Pin	Circuit	Circuit function
1	8-FA49 (WH/VT)	Sensor signal
2	9-FA49 (BN/WH)	Sensor signal return (reference/ground)