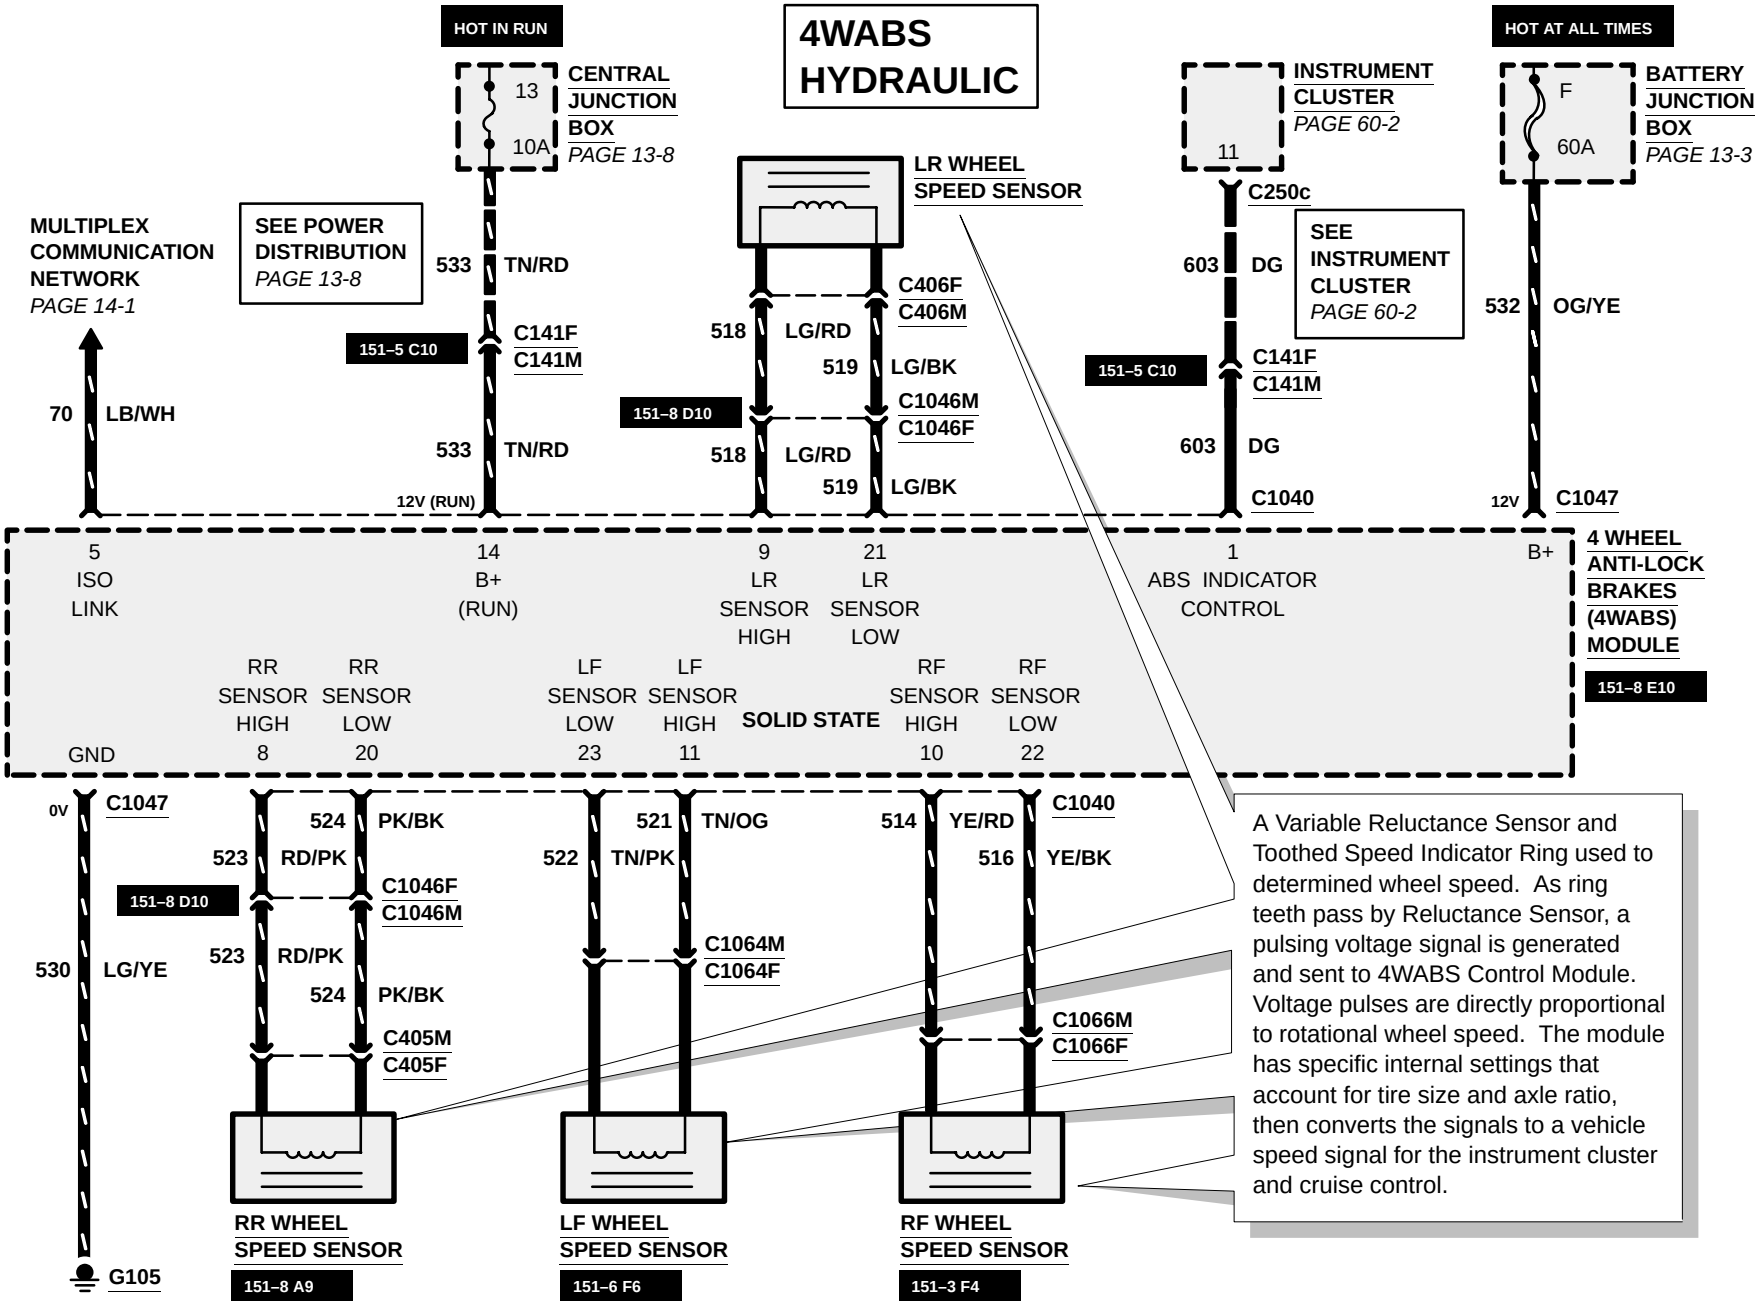
4WABS HYDRAULIC
HOT IN RUN
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
PAGE 13-8
13
10A
INSTRUMENT CLUSTER
PAGE 60-2
11
BATTERY JUNCTION BOX
PAGE 13-3
F
60A
LR WHEEL SPEED SENSOR
MULTIPLEX COMMUNICATION NETWORK
PAGE 14-1
SEE POWER DISTRIBUTION
PAGE 13-8
SEE INSTRUMENT CLUSTER
PAGE 60-2
C250c
533 TN/RD
C406F
C406M
603 DG
532 OG/YE
151–5 C10
C141F
C141M
518 LG/RD
519 LG/BK
151–8 D10
C1046M
C1046F
70 LB/WH
533 TN/RD
518 LG/RD
519 LG/BK
603 DG
12V (RUN)
C1040
12V
C1047
4 WHEEL ANTI-LOCK BRAKES (4WABS) MODULE
151–8 E10
5 ISO LINK
14 B+ (RUN)
9 LR SENSOR HIGH
21 LR SENSOR LOW
1 ABS INDICATOR CONTROL
B+
RR SENSOR HIGH
RR SENSOR LOW
LF SENSOR LOW
LF SENSOR HIGH
SOLID STATE
RF SENSOR HIGH
RF SENSOR LOW
GND
8
20
23
11
10
22
0V
C1047
524 PK/BK
521 TN/OG
514 YE/RD
C1040
523 RD/PK
522 TN/PK
516 YE/BK
151–8 D10
C1046F
C1046M
530 LG/YE
523 RD/PK
C1064M
C1064F
524 PK/BK
C1066M
C1066F
C405M
C405F
G105
RR WHEEL SPEED SENSOR
151–8 A9
LF WHEEL SPEED SENSOR
151–6 F6
RF WHEEL SPEED SENSOR
151–3 F4
A Variable Reluctance Sensor and Toothed Speed Indicator Ring used to determined wheel speed. As ring teeth pass by Reluctance Sensor, a pulsing voltage signal is generated and sent to 4WABS Control Module. Voltage pulses are directly proportional to rotational wheel speed. The module has specific internal settings that account for tire size and axle ratio, then converts the signals to a vehicle speed signal for the instrument cluster and cruise control.