C489

14A584

F07056

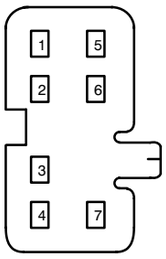

N300
Window operating switch, driver side front (multiple)

Pin	Circuit	Circuit Function
1	33-AJ17 (YE/VT)	Switched between: Battery voltage, Ground or Open
2	15-AJ18 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)
3	32-AJ18 (WH/VT)	Switched between: Battery voltage, Ground or Open
4	31-LH (BK)	Ground
5	–	not used
6	33-AJ18 (YE/VT)	Switched between: Battery voltage, Ground or Open
7	32-AJ17 (WH/VT)	Switched between: Battery voltage, Ground or Open

C490 (BK)

14A584

N298
Window operating switch, left rear

N299
Window operating switch, right rear

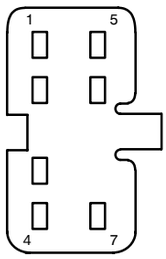

F07016

Pin	Circuit	Circuit Function
1	33-AJ31 (YE/RD)	Switched between: Battery voltage, Ground or Open
2	15S-AJ32 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched
3	32-AJ32 (WH/BU)	Switched between: Battery voltage, Ground or Open
4	31-LH36 (BK)	Ground
5	–	not used
6	33-AJ32 (YE/BU)	Switched between: Battery voltage, Ground or Open
7	32-AJ31 (WH/RD)	Switched between: Battery voltage, Ground or Open

C493

14401

E69
Heater panel illumination lamp

F02003

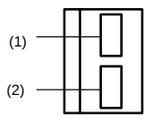

Pin	Circuit	Circuit Function
1	29-LH27 (OG/GN)	Voltage supplied at all times (overload protected), switched
2	31-LH27 (BK)	Ground