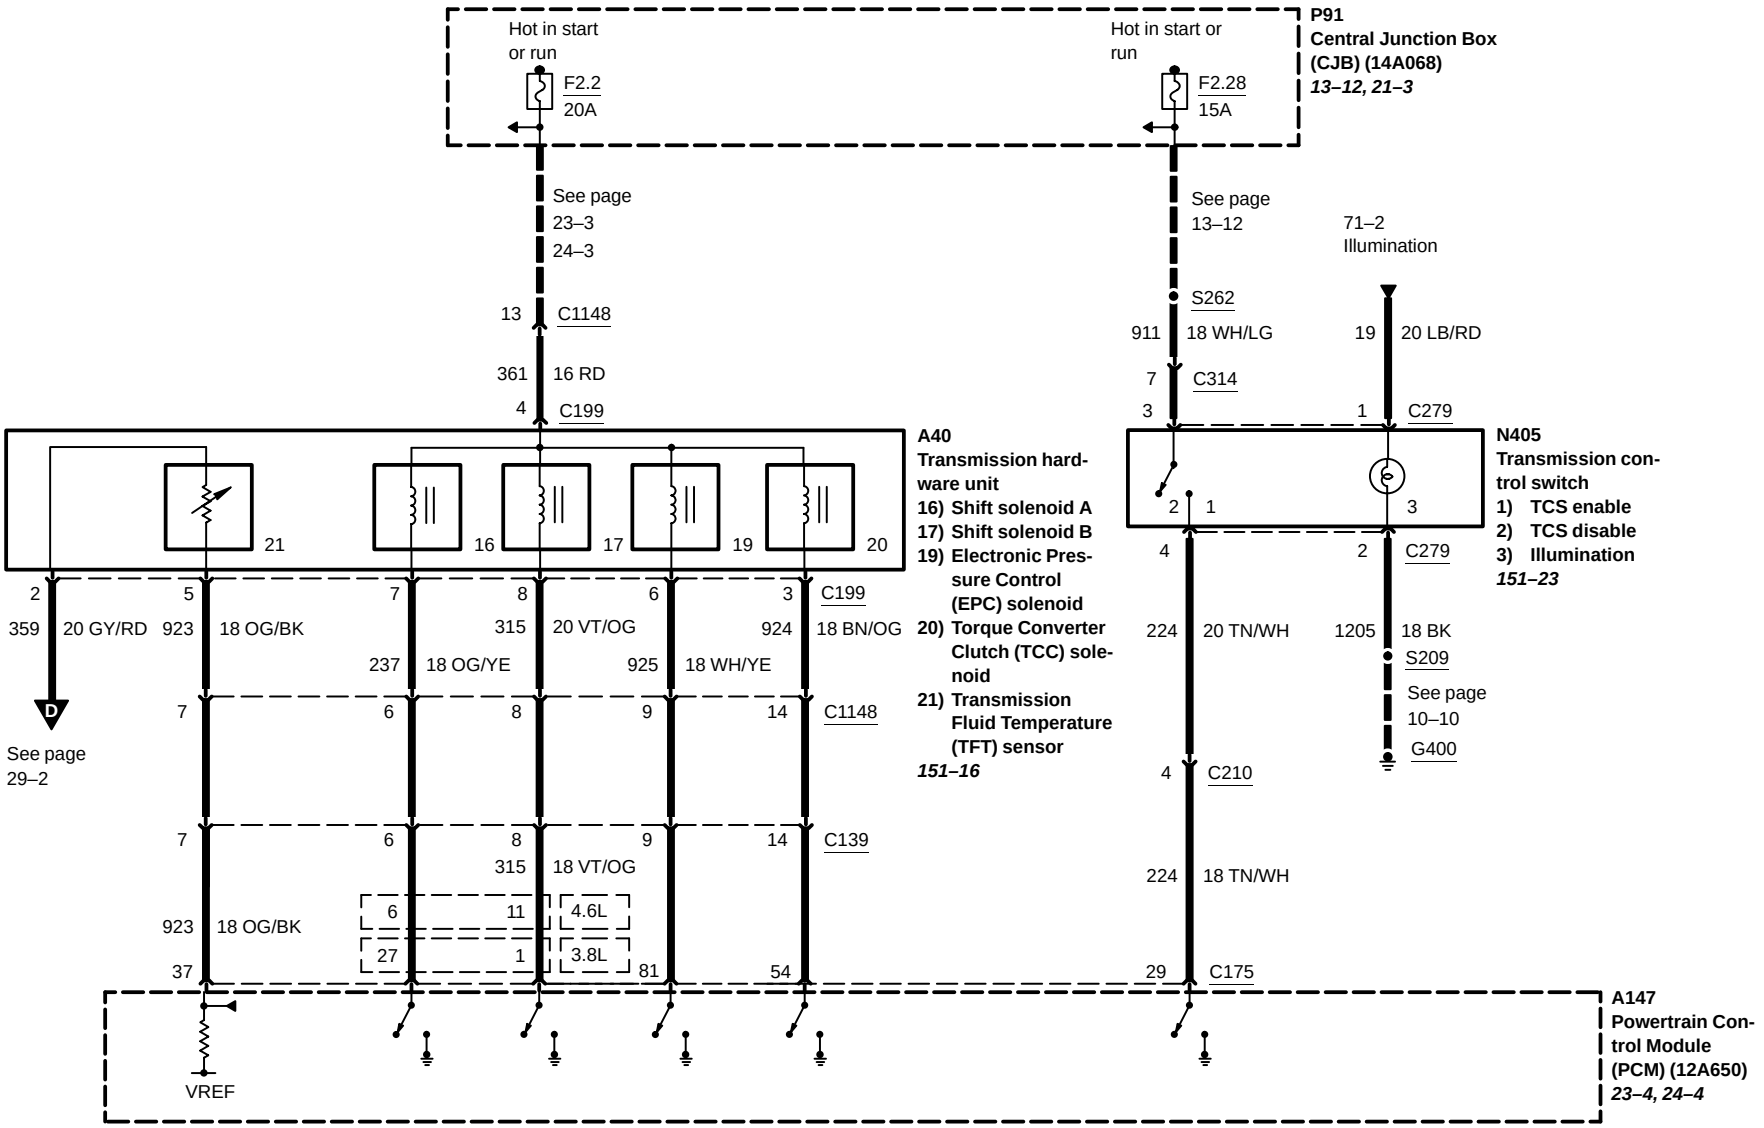
Hot in start or run
F2.2
20A
Hot in start or run
F2.28
15A
P91
Central Junction Box (CJB) (14A068)
13–12, 21–3
See page 23–3
24–3
See page 13–12
71–2 Illumination
13
C1148
361
16 RD
4
C199
911
18 WH/LG
S262
7
C314
19
20 LB/RD
3
1
C279
A40
Transmission hardware unit
16) Shift solenoid A
17) Shift solenoid B
19) Electronic Pressure Control (EPC) solenoid
20) Torque Converter Clutch (TCC) solenoid
21) Transmission Fluid Temperature (TFT) sensor
151–16
N405
Transmission control switch
1) TCS enable
2) TCS disable
3) Illumination
151–23
21
16
17
19
20
2
1
3
4
2
C279
2
359
20 GY/RD
5
923
18 OG/BK
7
237
18 OG/YE
8
315
20 VT/OG
6
925
18 WH/YE
3
924
18 BN/OG
C199
224
20 TN/WH
1205
18 BK
S209
See page 10–10
G400
See page 29–2
7
6
8
9
14
C1148
4
C210
7
6
8
315
9
14
C139
18 VT/OG
224
18 TN/WH
6
11
4.6L
27
1
3.8L
923
18 OG/BK
37
81
54
29
C175
A147
Powertrain Control Module (PCM) (12A650)
23–4, 24–4
VREF