C602

19A041/14630

N85
Door ajar switch, right front

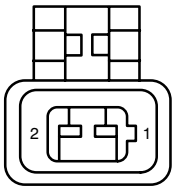

F02117

Pin	Circuit	Circuit Function
1	761 (GY/RD)	Door ajar switch, right front
2	57 (BK)	Ground

C603

14630

M242
Door lock actuator, right front

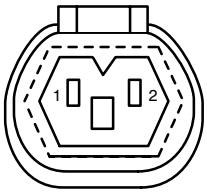

F02227

Pin	Circuit	Circuit Function
1	118 (PK/OG)	Door unlock, output
2	117 (PK/BK)	Door lock, output

C604

14630

N105
Window adjust switch, passenger side

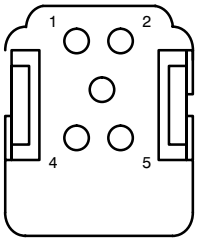

F05013

Pin	Circuit	Circuit Function
1	333 (YE/RD)	Window motor, feed, Up
2	314 (TN/LB)	Window switch, feed, right front, Down
3	400 (LB/BK)	Accessory relay, switched power, output
4	313 (WH/YE)	Window switch, feed, right front, Up
5	334 (RD/YE)	Window motor, feed, Down

C605

14630

N205
Door lock switch, passenger side

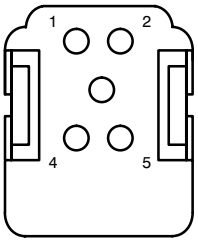

F05013

Pin	Circuit	Circuit Function
1	120 (PK/LG)	Door unlock relay, control
2	–	not used
3	57 (BK)	Ground
4	–	not used
5	119 (PK/YE)	Door lock relay, control

C608

14630

M79
Power window motor, passenger side front



F02073

Pin	Circuit	Circuit Function
1	333 (YE/RD)	Window motor, feed, Up
2	334 (RD/YE)	Window motor, feed, Down

C612

19A041/14630

Y18
Speaker, right front

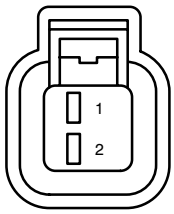

F02069

Pin	Circuit	Circuit Function
1	805 (WH/LG)	Speaker, right front +
2	811 (DG/OG)	Speaker, right front –