C940 (BK)

14014, 14A584

Y19
Speaker, right rear



F02058

Pin	Circuit	Circuit Function
1	8-MD18 (WH)	Sensor signal
	8-MD29 (WH/VT)	Sensor signal
	8-MD29 (WH/GN)	Sensor signal
2	10-MD18 (GY)	Signal 2 (Y–direction, reverse, downward)
	10-MD29 (GY/WH)	Signal 2 (Y–direction, reverse, downward)

C946

14405

F01005

R19
Rear window defrost grid

Pin	Circuit	Circuit Function
1	31-HB19 (BK)	Ground

C947

14405

F01005

R19
Rear window defrost grid

Pin	Circuit	Circuit Function
1	31-HB19 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)

C949 (BK)

14014



F01013

R19
Rear window defrost grid

Pin	Circuit	Circuit Function
1	15S-HB19 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched

C950

14405



F01013

R19
Rear window defrost grid

Pin	Circuit	Circuit Function
1	15S-HB19 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched

C951 (BK)

14405, 14A584



F01013

R19
Rear window defrost grid

Pin	Circuit	Circuit Function
1	31–HB19 (BK)	Ground

C954 (BK)

9H589

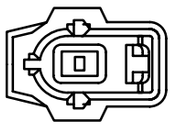

F01016

N17
Oil pressure switch

Pin	Circuit	Circuit Function
1	31S-GC20 (BK/OG)	Ground, switched