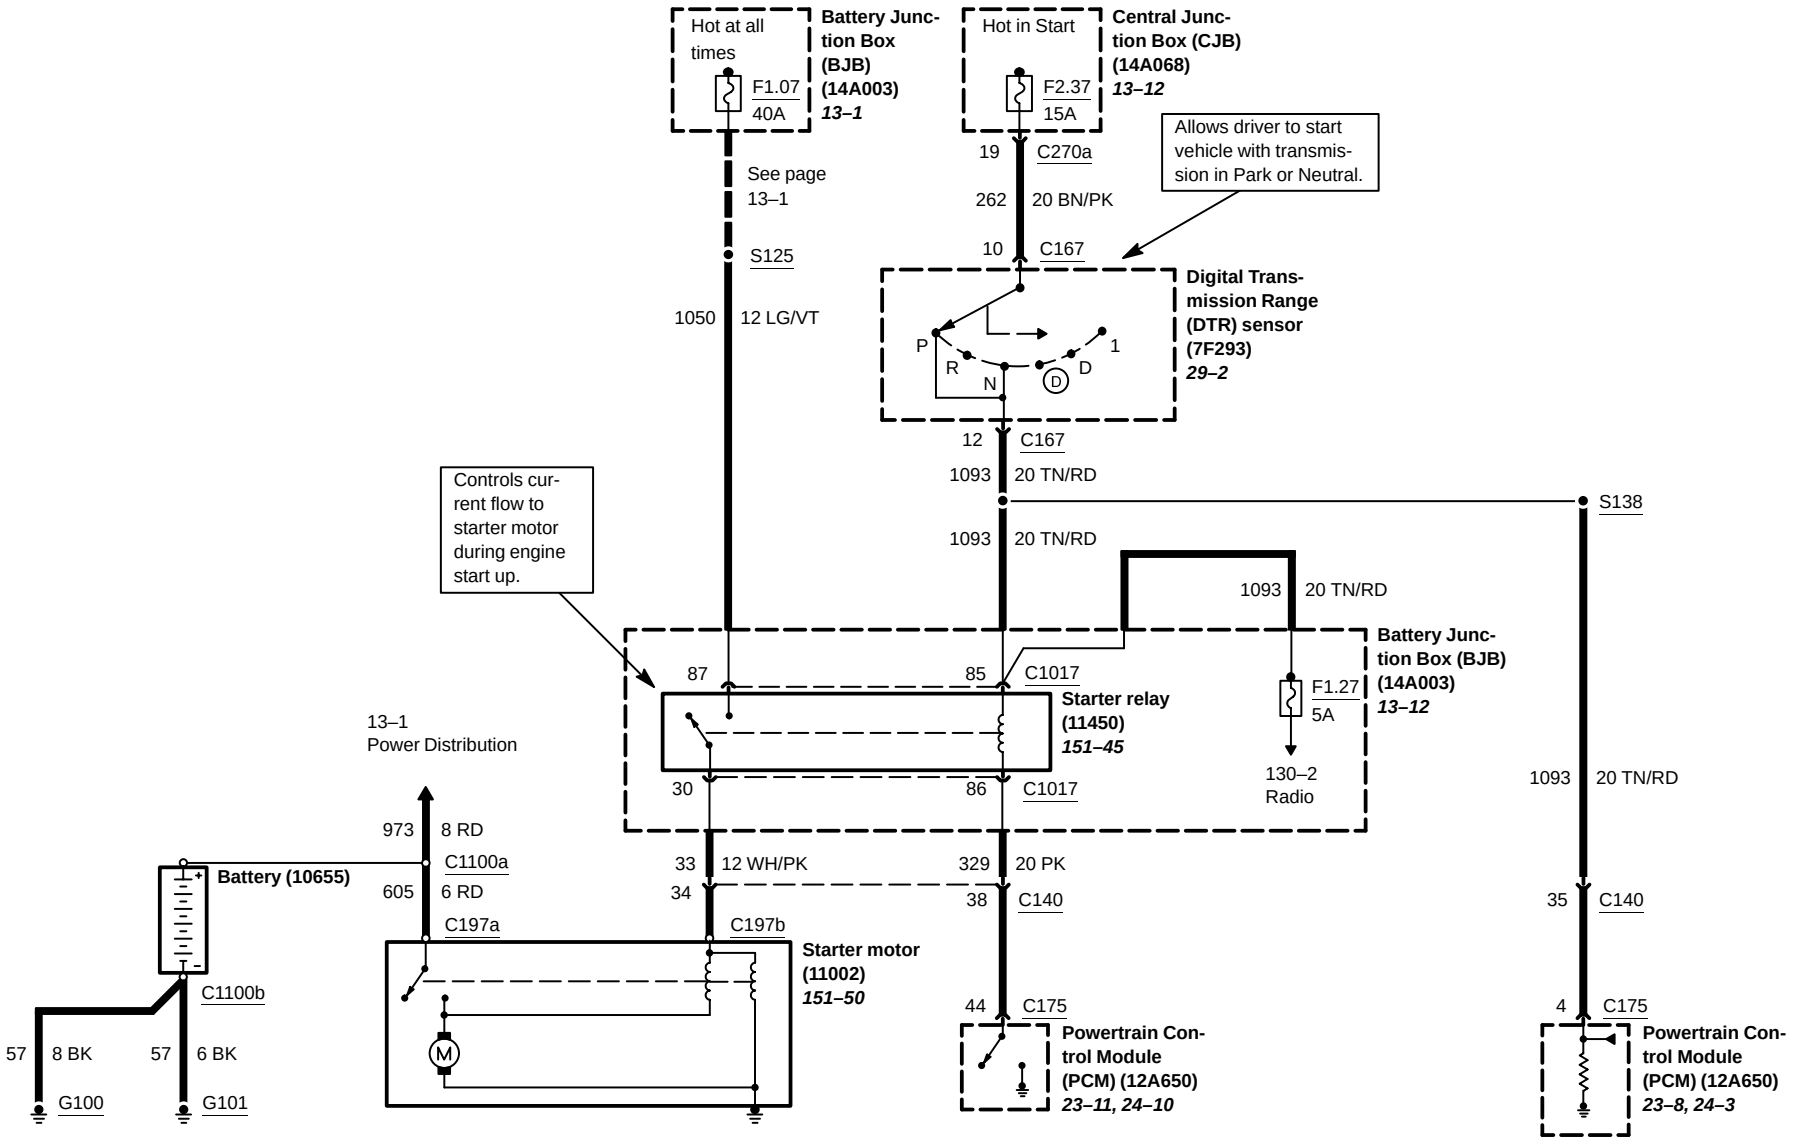
Hot at all times
Battery Junction Box (BJB) (14A003) 13–1
F1.07
40A
Hot in Start
Central Junction Box (CJB) (14A068) 13–12
F2.37
15A
19 C270a
262 20 BN/PK
10 C167
Allows driver to start vehicle with transmission in Park or Neutral.
See page 13–1
S125
1050 12 LG/VT
Digital Transmission Range (DTR) sensor (7F293) 29–2
P
R
N
D
1
12 C167
1093 20 TN/RD
Controls current flow to starter motor during engine start up.
S138
1093 20 TN/RD
1093 20 TN/RD
Battery Junction Box (BJB) (14A003) 13–12
87
85 C1017
Starter relay (11450) 151–45
F1.27
5A
130–2 Radio
13–1 Power Distribution
30
86 C1017
1093 20 TN/RD
973 8 RD
C1100a
605 6 RD
C197a
33 12 WH/PK
34
C197b
329 20 PK
38 C140
35 C140
Battery (10655)
C1100b
57 8 BK
G100
57 6 BK
G101
Starter motor (11002) 151–50
M
44 C175
Powertrain Control Module (PCM) (12A650) 23–11, 24–10
4 C175
Powertrain Control Module (PCM) (12A650) 23–8, 24–3