* W/RKE

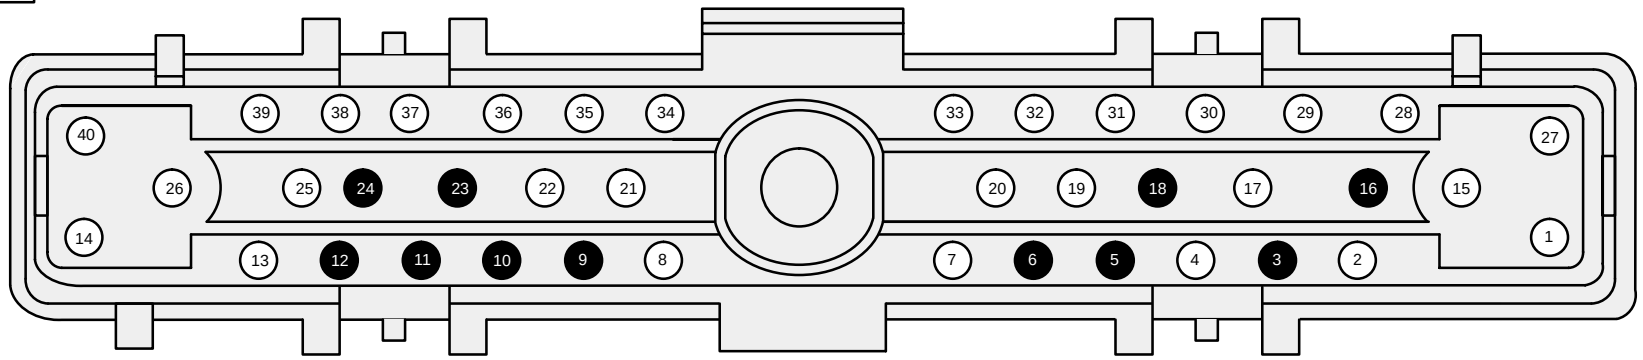

C386
ANTI-LOCK BRAKE CONTROL MODULE

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	57 (BK)	Ground	21	915 (RD/BU)	Left Rear Anti-Lock Brake Sensor
2	351 (GN)	Brake Pedal Position (BPP) Switch	22	914 (PK/BU)	Right Rear Anti-Lock Brake Sensor
3	–	NOT USED	23	–	NOT USED
4	908 (RD/YE)	ABS Main Relay Control	24	–	NOT USED
5	–	NOT USED	25	907 (YE)	Power (ABS Relay)
6	–	NOT USED	26	906 (RD/YE)	Hydraulic Pump Motor Control
7	57 (BK)	Ground	27	57 (BK)	Ground
8	710 (WH)	Power (Hot in Start or Run)	28	923 (GY/RD)	Right Rear Solenoid Valve Control
9	–	NOT USED	29	921 (PK/GN)	Left Rear Solenoid Valve Control
10	–	NOT USED	30	922 (VT/WH)	Right Rear Solenoid Valve Control
11	–	NOT USED	31	920 (LG/BK)	Left Rear Solenoid Valve Control
12	–	NOT USED	32	911 (GN)	Left Front Anti-Lock Brake Sensor
13	*529 (OG)	Data Link Connector (DLC)	33	910 (BK/PK)	Right Front Anti-Lock Brake Sensor
	529 (OG/BU)	Data Link Connector (DLC)	34	916 (BK/RD)	Left Rear Anti-Lock Brake Sensor
14	57 (BK)	Ground	35	913 (GY/BU)	Right Rear Anti-Lock Brake Sensor
15	57 (BK)	Ground	36	902 (BN)	Left Front Solenoid Valve Control
16	–	NOT USED	37	904 (VT)	Right Front Solenoid Valve Control
17	918 (YE/RD)	Anti-Lock Brake Indicator	38	903 (PK)	Left Front Solenoid Valve Control
18	–	NOT USED	39	905 (BU/OG)	Right Front Solenoid Valve Control
19	912 (RD)	Left Front Anti-Lock Brake Sensor	40	906 (RD/YE)	Hydraulic Pump Motor Control
20	909 (OG)	Right Front Anti-Lock Brake Sensor			