## Excursion

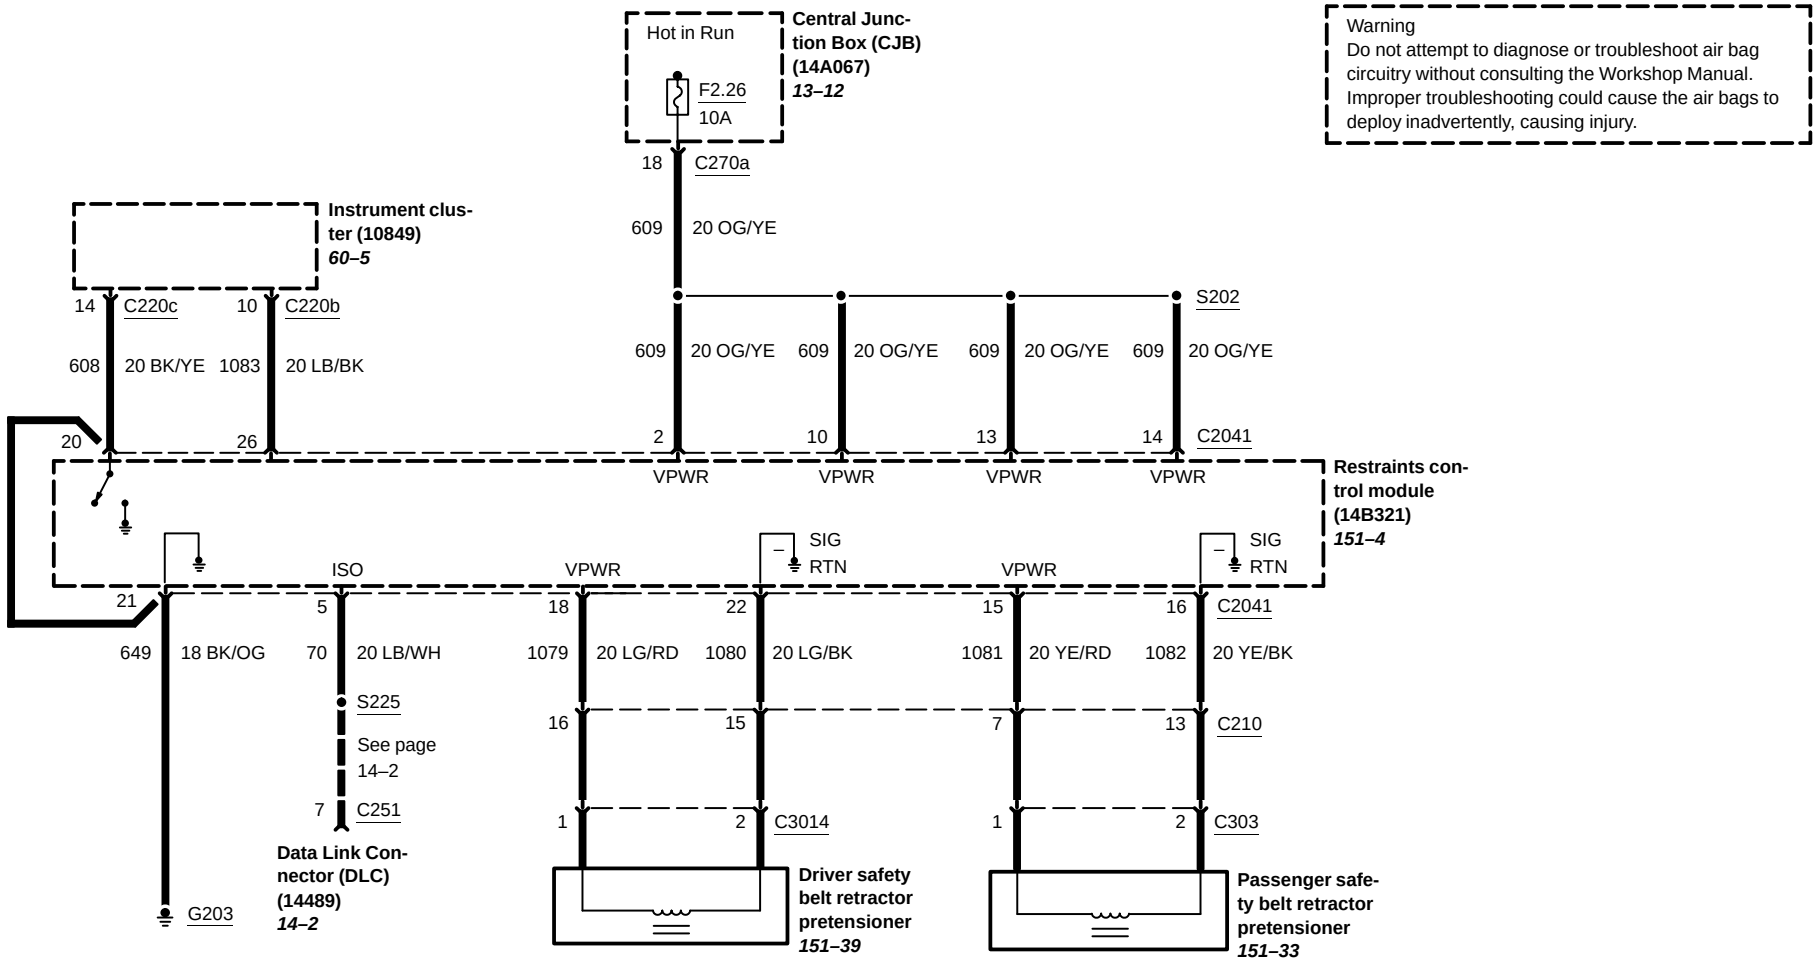
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
Hot in Run
F2.26
10A
Central Junction Box (CJB) (14A067) 13–12
18 C270a
609 20 OG/YE
Instrument cluster (10849) 60–5
14 C220c
608 20 BK/YE
10 C220b
1083 20 LB/BK
S202
609 20 OG/YE
609 20 OG/YE
609 20 OG/YE
609 20 OG/YE
20
26
2
10
13
14 C2041
VPWR
VPWR
VPWR
VPWR
Restraints control module (14B321) 151–4
21
649 18 BK/OG
ISO
5
70 20 LB/WH
VPWR
18
1079 20 LG/RD
SIG RTN
22
1080 20 LG/BK
VPWR
15
1081 20 YE/RD
SIG RTN
16
1082 20 YE/BK
C2041
S225
See page 14–2
7 C251
16
15
7
13 C210
1
2 C3014
1
2 C303
G203
Data Link Connector (DLC) (14489) 14–2
Driver safety belt retractor pretensioner 151–39
Passenger safety belt retractor pretensioner 151–33