C342

13K702

N28
Right front seat heater switch

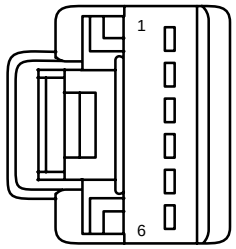

F06179

Pin	Circuit	Circuit function
1	31S-HC18 (GN/YE)	Ground, Switched
2	–	not used
3	20-HC9 (OG/GN)	Voltage, hot in run only
4	20S-HC22 (DB/GN)	Voltage, hot in run only, Switched
5	31-HC9 (WH/OG)	Ground
6	64S-HC9 (OG/BK)	Variable DC voltage (not overload protected), Switched

C344

13K702

N27
Left front seat heater switch

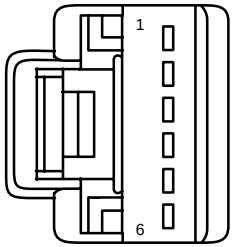

F06179

Pin	Circuit	Circuit function
1	31S-HC15 (WH/VT)	Ground, Switched
2	–	not used
3	20-HC6 (OG/GN)	Voltage, hot in run only
4	20S-HC21 (BK/YE)	Voltage, hot in run only, Switched
5	31-HC6 (WH/OG)	Ground
6	64S-HC6 (OG/BK)	Variable DC voltage (not overload protected), Switched