-4

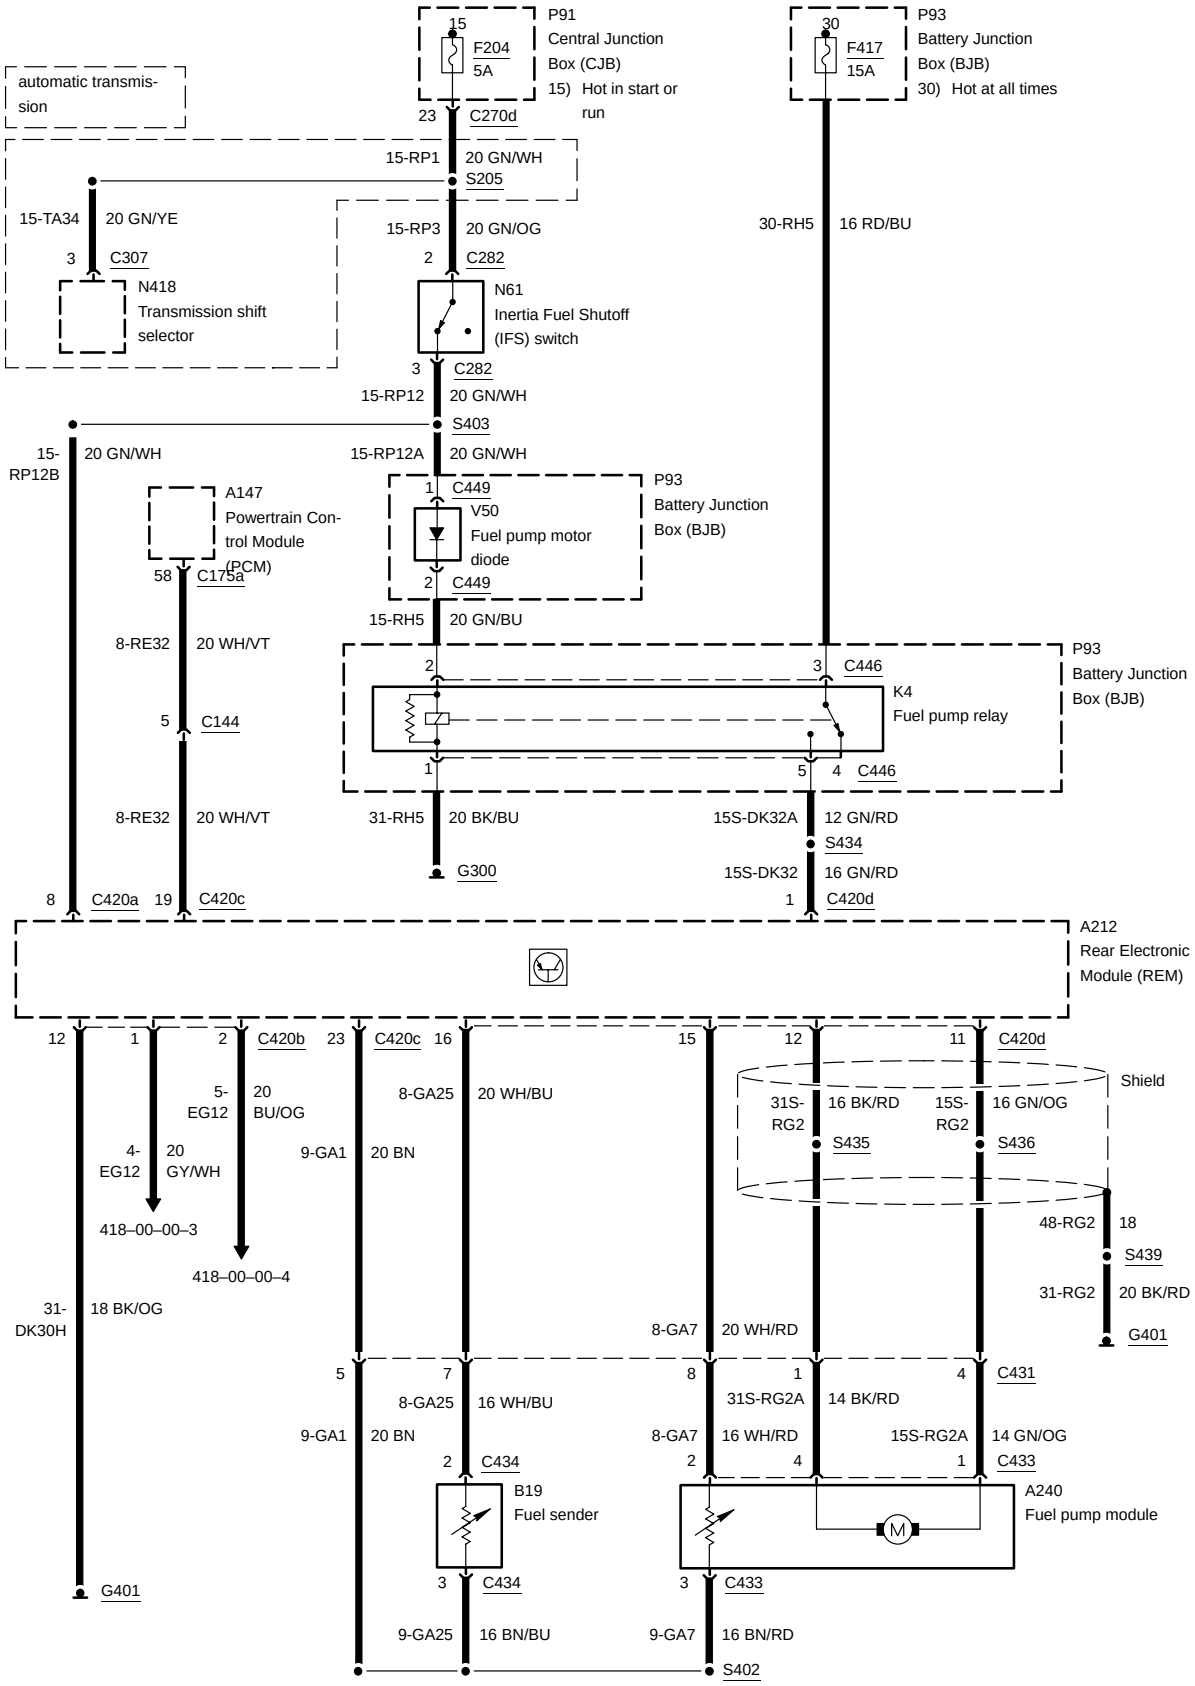
automatic transmis-
sion
15
F204
5A
P91
Central Junction
Box (CJB)
15) Hot in start or
run
30
F417
15A
P93
Battery Junction
Box (BJB)
30) Hot at all times
23 C270d
15-RP1 20 GN/WH
S205
15-TA34 20 GN/YE
3 C307
N418
Transmission shift
selector
15-RP3 20 GN/OG
2 C282
N61
Inertia Fuel Shutoff
(IFS) switch
30-RH5 16 RD/BU
3 C282
15-RP12 20 GN/WH
S403
15-
RP12B
20 GN/WH
15-RP12A 20 GN/WH
A147
Powertrain Con-
trol Module
(PCM)
1 C449
V50
Fuel pump motor
diode
2 C449
P93
Battery Junction
Box (BJB)
58 C175a
15-RH5 20 GN/BU
8-RE32 20 WH/VT
2
3 C446
K4
Fuel pump relay
P93
Battery Junction
Box (BJB)
5 C144
1
5 4 C446
8-RE32 20 WH/VT
31-RH5 20 BK/BU
G300
15S-DK32A 12 GN/RD
S434
15S-DK32 16 GN/RD
8 C420a 19 C420c
1 C420d
A212
Rear Electronic
Module (REM)
12 1 2 C420b 23 C420c 16 15 12 11 C420d
5-
EG12
20
BU/OG
8-GA25 20 WH/BU
Shield
31S-
RG2
16 BK/RD
15S-
RG2
16 GN/OG
S435
S436
4-
EG12
20
GY/WH
9-GA1 20 BN
48-RG2 18
S439
31-RG2 20 BK/RD
418–00–00–3
418–00–00–4
31-
DK30H
18 BK/OG
8-GA7 20 WH/RD
G401
5 7 8 1 4 C431
8-GA25 16 WH/BU
31S-RG2A 14 BK/RD
9-GA1 20 BN
8-GA7 16 WH/RD
15S-RG2A 14 GN/OG
2 C434
2 4 1 C433
B19
Fuel sender
A240
Fuel pump module
M
3 C434
3 C433
G401
9-GA25 16 BN/BU
9-GA7 16 BN/RD
S402