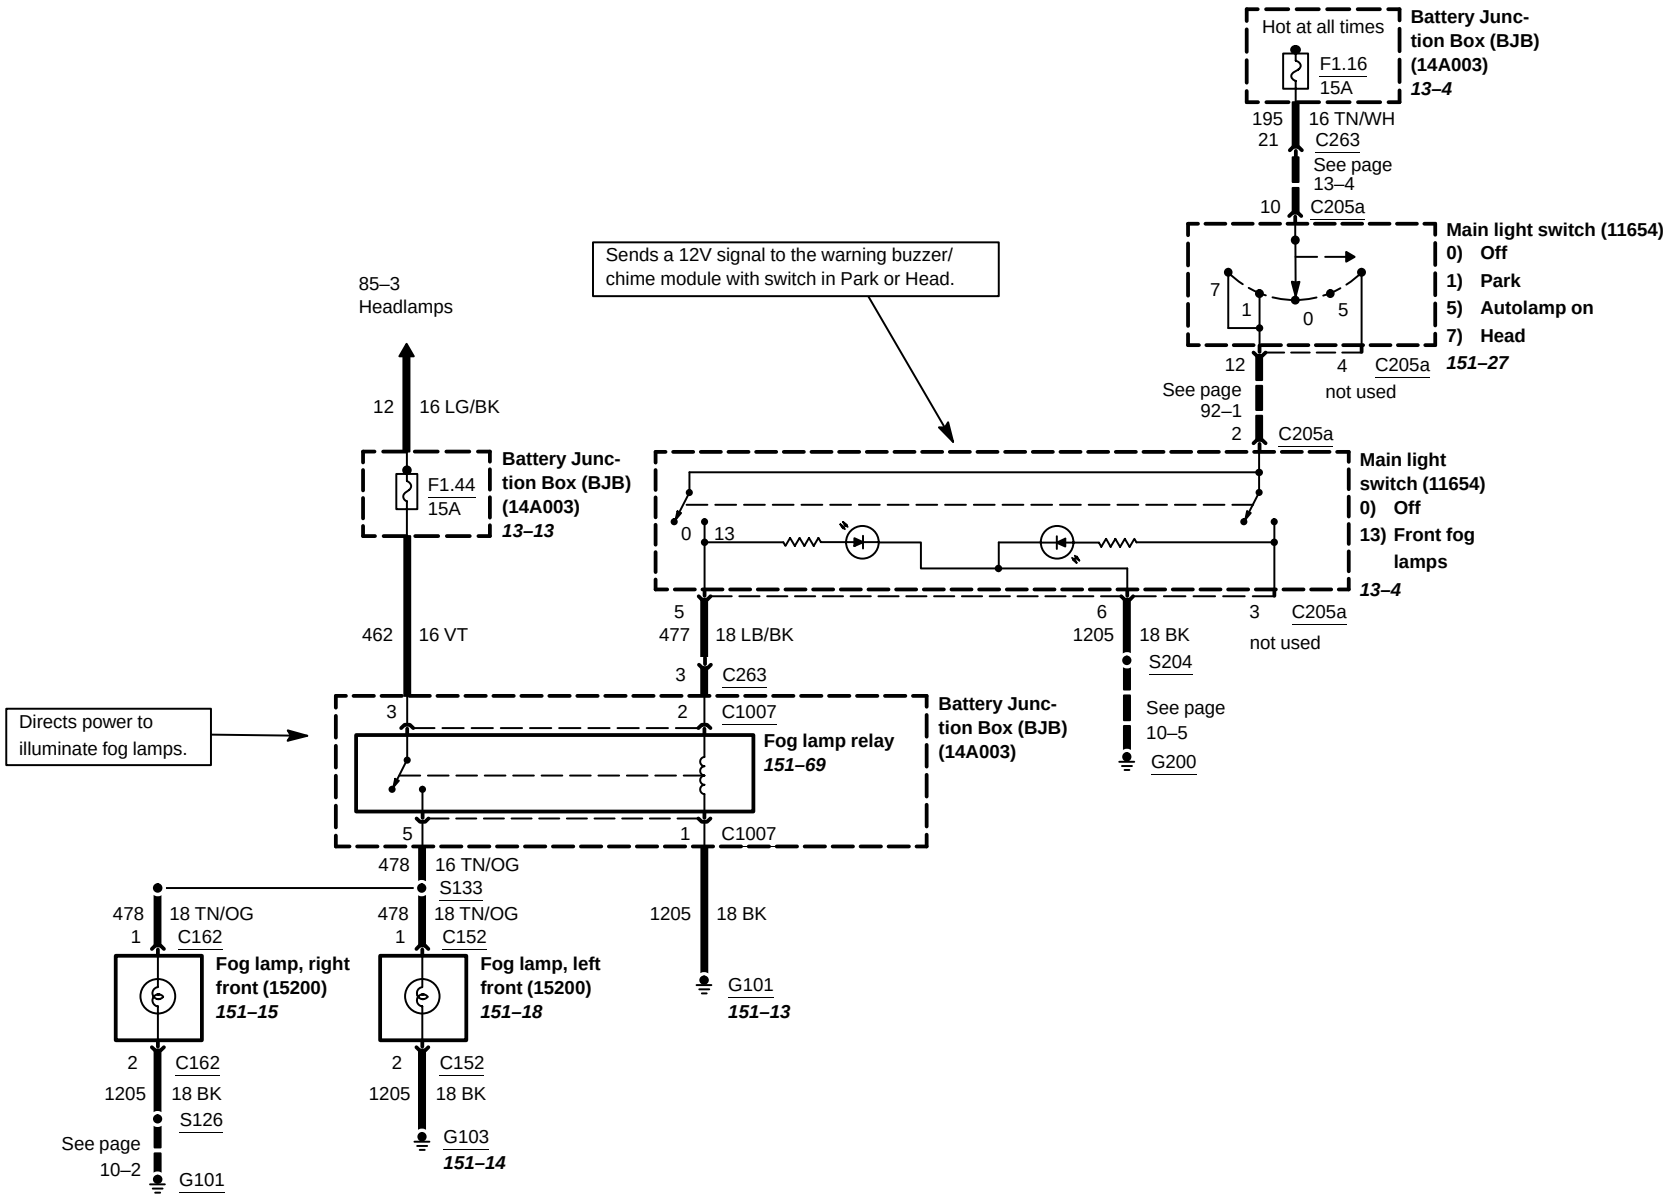
Hot at all times
F1.16
15A
Battery Junction Box (BJB)
(14A003)
13–4
195
21
16 TN/WH
C263
See page 13–4
10
C205a
Main light switch (11654)
0) Off
1) Park
5) Autolamp on
7) Head
151–27
12
4
C205a
not used
See page 92–1
2
C205a
Sends a 12V signal to the warning buzzer/ chime module with switch in Park or Head.
85–3
Headlamps
12
16 LG/BK
F1.44
15A
Battery Junction Box (BJB)
(14A003)
13–13
0
13
Main light switch (11654)
0) Off
13) Front fog lamps
13–4
5
477
18 LB/BK
6
1205
18 BK
3
C205a
not used
462
16 VT
3
C263
S204
See page 10–5
G200
Directs power to illuminate fog lamps.
3
2
C1007
Battery Junction Box (BJB)
(14A003)
Fog lamp relay
151–69
5
1
C1007
478
16 TN/OG
S133
478
1
18 TN/OG
C162
Fog lamp, right front (15200)
151–15
478
1
18 TN/OG
C152
Fog lamp, left front (15200)
151–18
1205
18 BK
G101
151–13
2
C162
1205
18 BK
S126
See page 10–2
G101
2
C152
1205
18 BK
G103
151–14