C488

14A584

N300
Window operating switch, driver side front (multiple)

as of 08/2000

F10042 (GY)

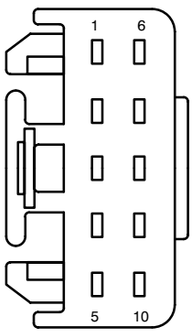

Pin	Circuit	Circuit Function
1	31-AJ7 (BK)	Ground
2	–	not used
3	32-AJ18 (WH/VT)	Switched between: Battery voltage, Ground or Open
4	–	not used
5	33-AJ18 (YE/VT)	Switched between: Battery voltage, Ground or Open
6	32-AJ26 (WH)	Switched between: Battery voltage, Ground or Open
7	–	not used
8	33-AJ26 (YE)	Switched between: Battery voltage, Ground or Open
9	–	not used
10	15-AJ7 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)

C490a (BK)

14A584

N298
Window operating switch, left rear

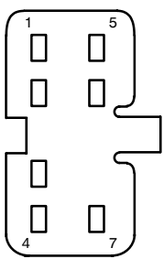

F07016

Pin	Circuit	Circuit Function
1	33-AJ31 (YE/RD)	Switched between: Battery voltage, Ground or Open
2	15S-AJ32 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched
3	32-AJ32 (WH/BU)	Switched between: Battery voltage, Ground or Open
4	31-LH36 (BK)	Ground
5	–	not used
6	33-AJ32 (YE/BU)	Switched between: Battery voltage, Ground or Open
7	32-AJ31 (WH/RD)	Switched between: Battery voltage, Ground or Open

C490b (BK)

14A584

N299
Window operating switch, right rear

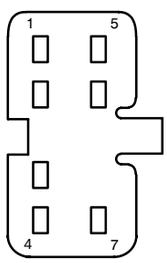

F07016

Pin	Circuit	Circuit Function
1	33-AJ31 (YE/RD)	Switched between: Battery voltage, Ground or Open
2	15S-AJ32 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched
3	32-AJ32 (WH/BU)	Switched between: Battery voltage, Ground or Open
4	31-LH36 (BK)	Ground
5	–	not used
6	33-AJ32 (YE/BU)	Switched between: Battery voltage, Ground or Open
7	32-AJ31 (WH/RD)	Switched between: Battery voltage, Ground or Open