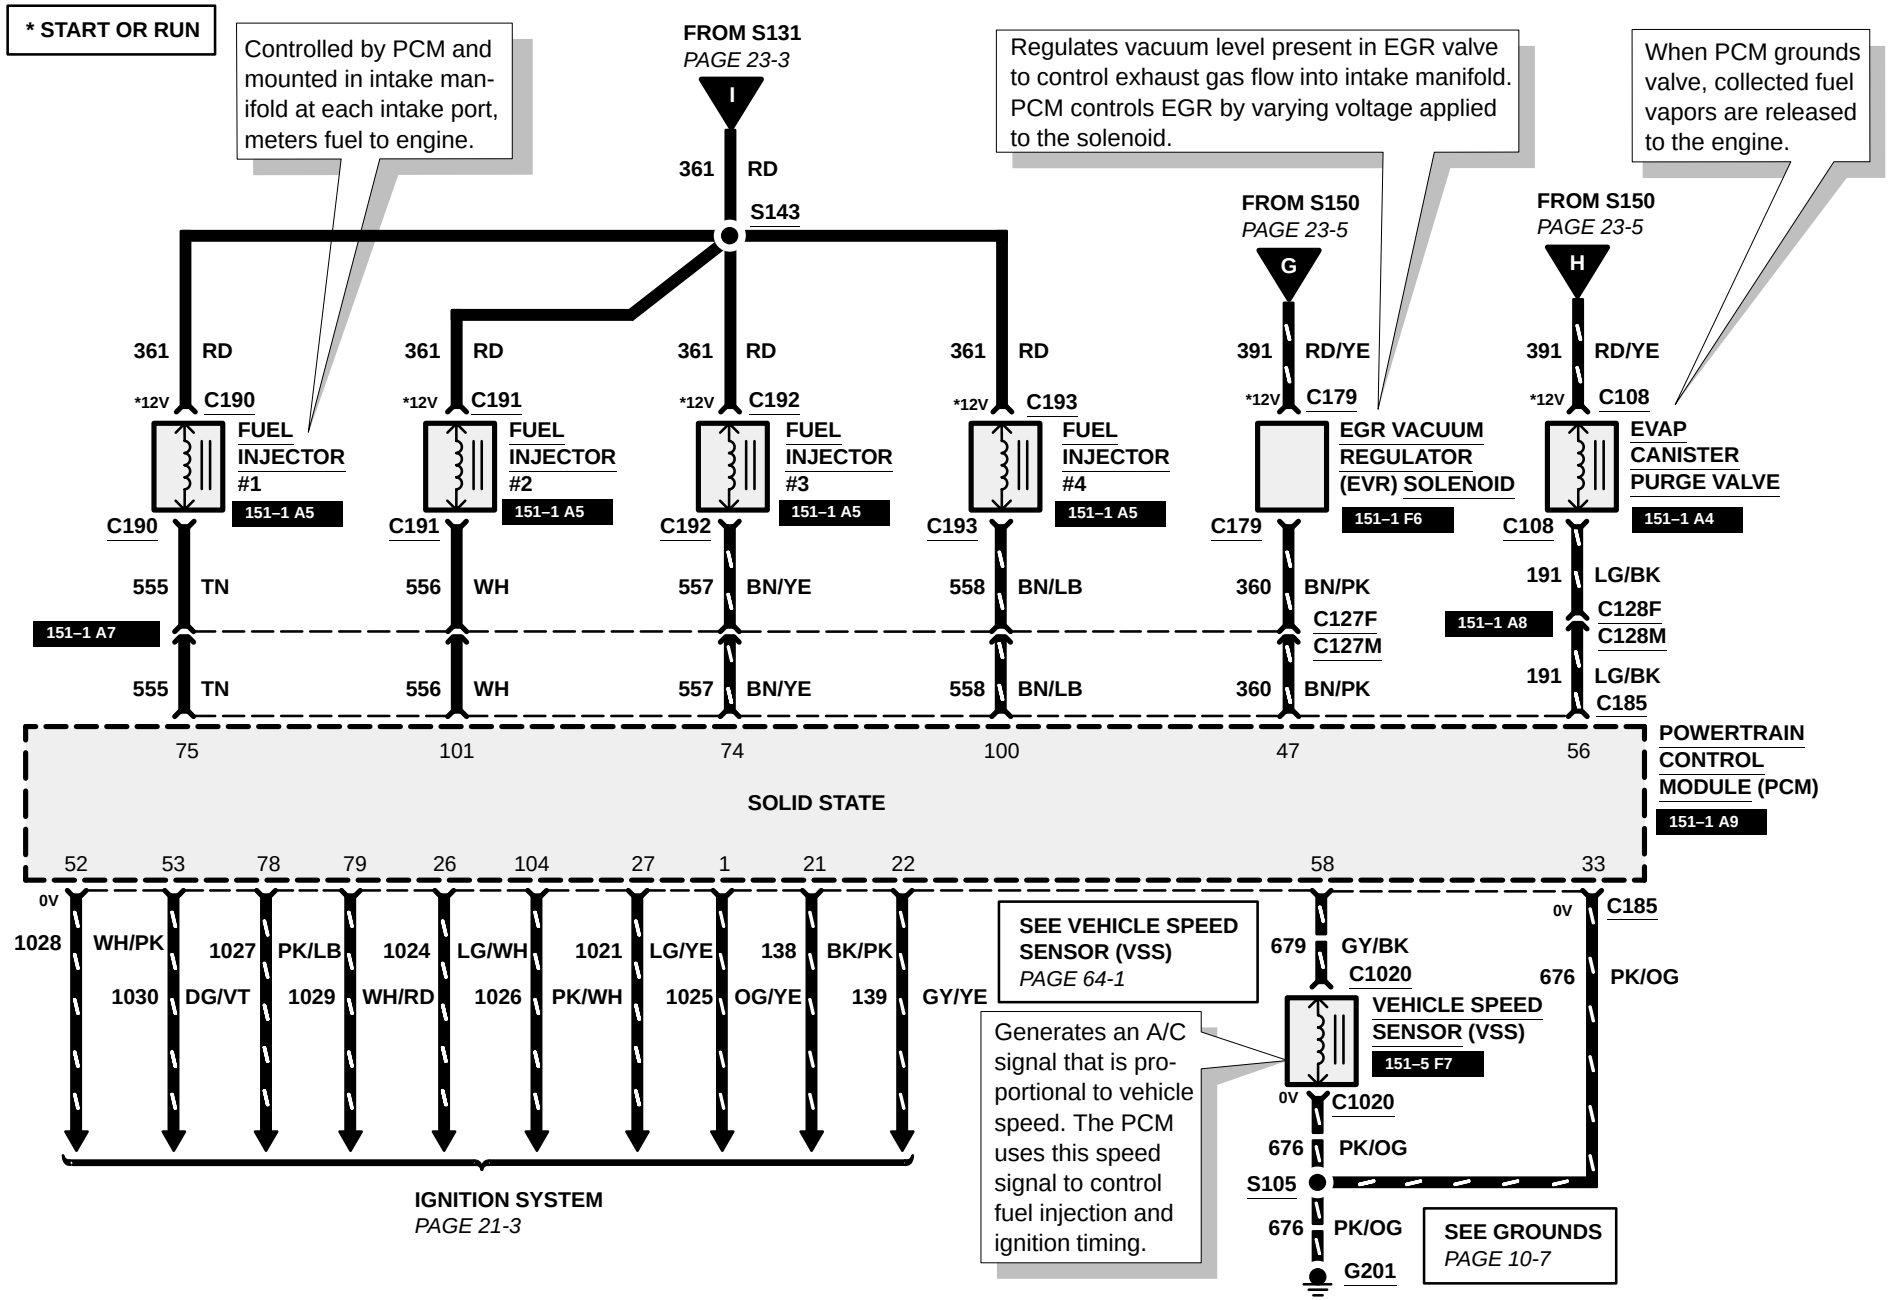
* START OR RUN
Controlled by PCM and mounted in intake manifold at each intake port, meters fuel to engine.
FROM S131
PAGE 23-3
I
361 RD
S143
Regulates vacuum level present in EGR valve to control exhaust gas flow into intake manifold. PCM controls EGR by varying voltage applied to the solenoid.
FROM S150
PAGE 23-5
G
When PCM grounds valve, collected fuel vapors are released to the engine.
FROM S150
PAGE 23-5
H
361 RD *12V C190 FUEL INJECTOR #1 151–1 A5
361 RD *12V C191 FUEL INJECTOR #2 151–1 A5
361 RD *12V C192 FUEL INJECTOR #3 151–1 A5
361 RD *12V C193 FUEL INJECTOR #4 151–1 A5
391 RD/YE *12V C179 EGR VACUUM REGULATOR (EVR) SOLENOID 151–1 F6
391 RD/YE *12V C108 EVAP CANISTER PURGE VALVE 151–1 A4
C190 555 TN
C191 556 WH
C192 557 BN/YE
C193 558 BN/LB
C179 360 BN/PK
C108 191 LG/BK
151–1 A7
151–1 A8
C127F C127M
C128F C128M
555 TN
556 WH
557 BN/YE
558 BN/LB
360 BN/PK
191 LG/BK C185
POWERTRAIN CONTROL MODULE (PCM) 151–1 A9
75 101 74 100 47 56
SOLID STATE
52 53 78 79 26 104 27 1 21 22 58 33
0V 1028 WH/PK 1030 DG/VT 1027 PK/LB 1029 WH/RD 1024 LG/WH 1026 PK/WH 1021 LG/YE 1025 OG/YE 138 BK/PK 139 GY/YE
IGNITION SYSTEM
PAGE 21-3
SEE VEHICLE SPEED SENSOR (VSS)
PAGE 64-1
679 GY/BK C1020
VEHICLE SPEED SENSOR (VSS) 151–5 F7
0V C1020
676 PK/OG
0V C185
676 PK/OG
Generates an A/C signal that is proportional to vehicle speed. The PCM uses this speed signal to control fuel injection and ignition timing.
S105
676 PK/OG
G201
SEE GROUNDS
PAGE 10-7