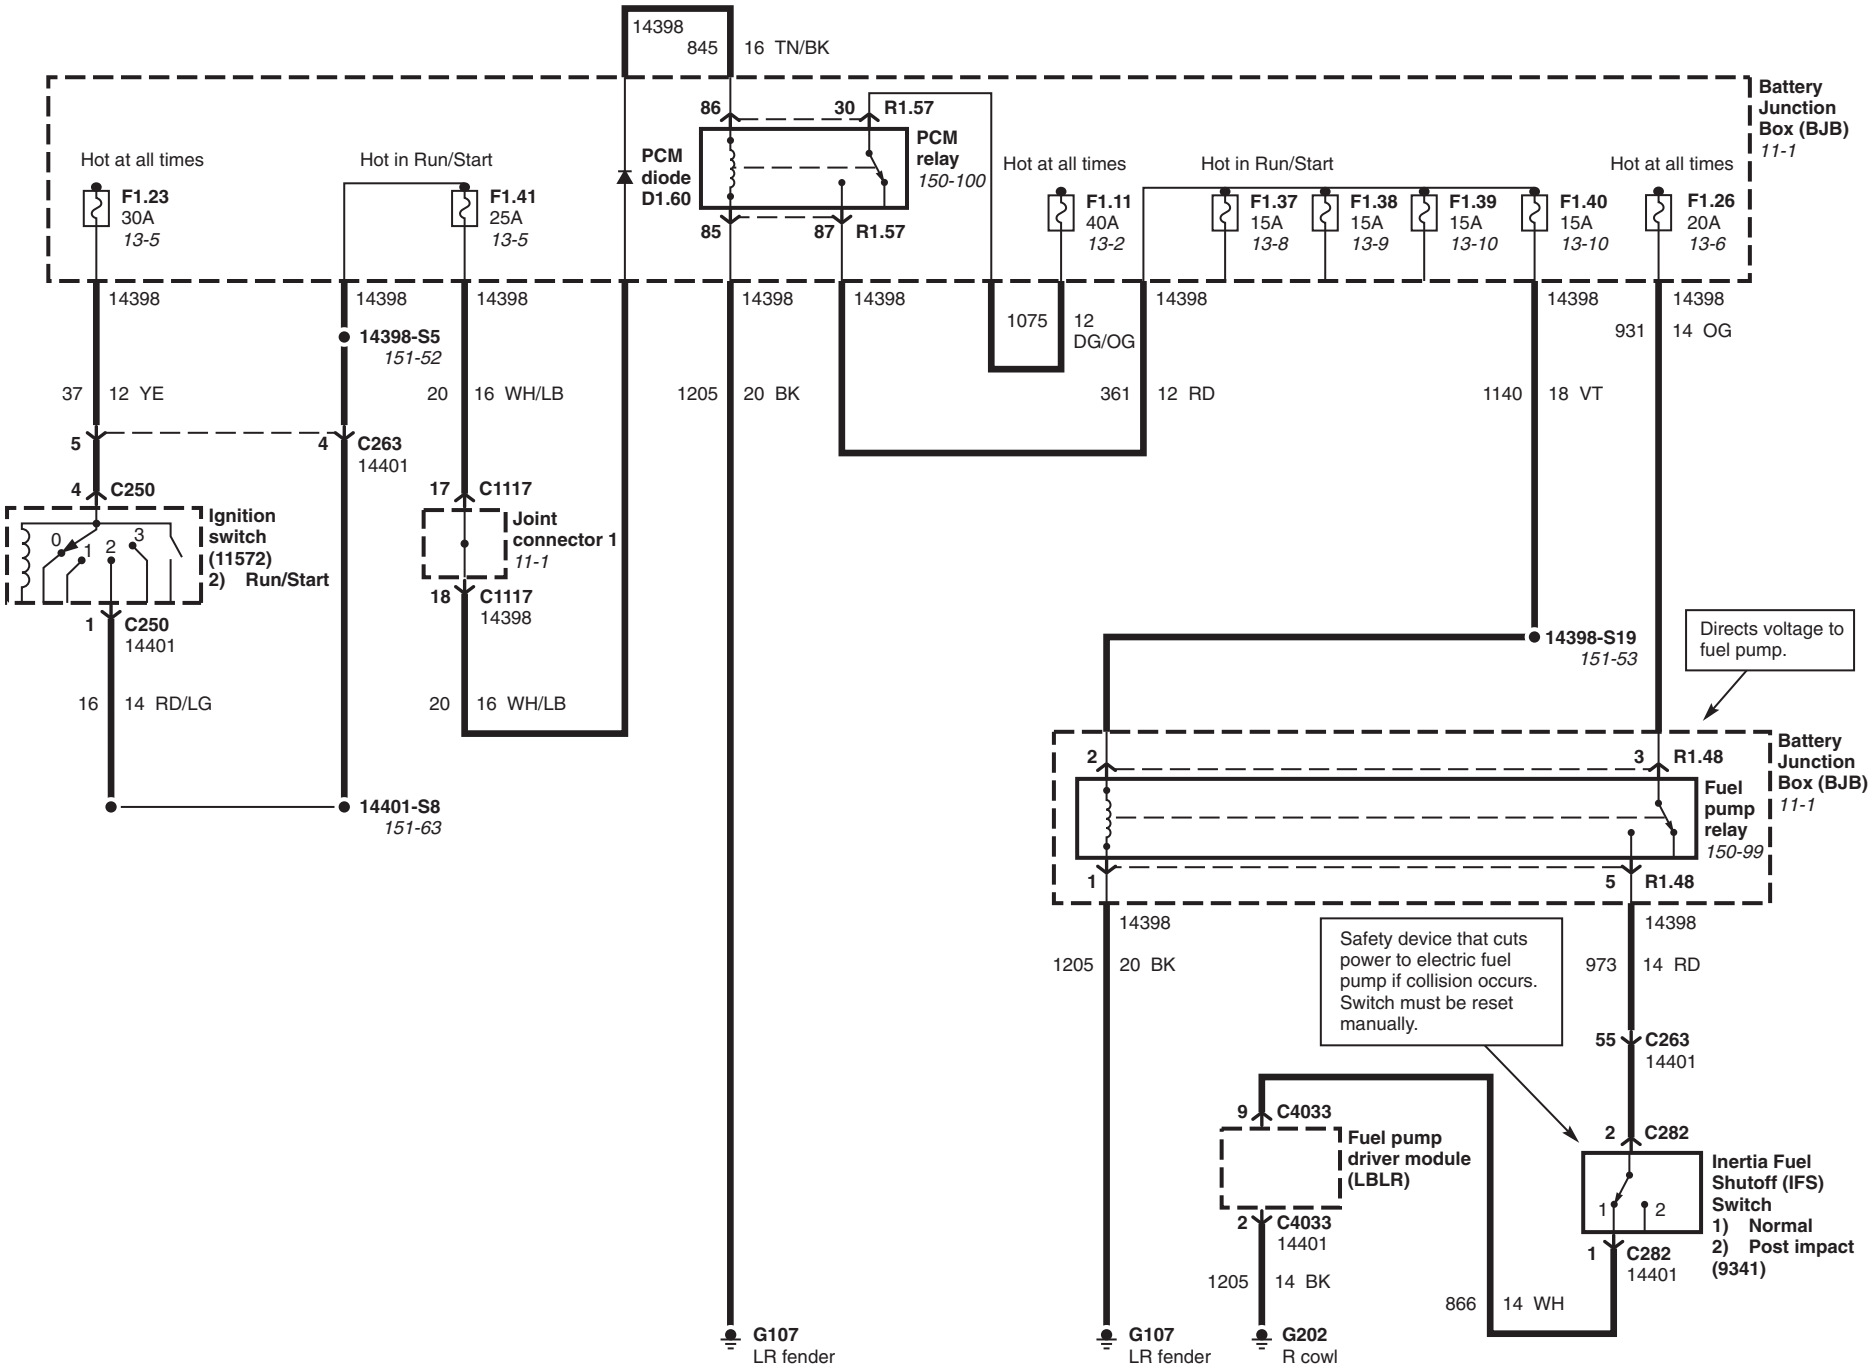
14398
845 16 TN/BK
Battery Junction Box (BJB) 11-1
Hot at all times
Hot in Run/Start
Hot at all times
Hot in Run/Start
Hot at all times
F1.23 30A 13-5
F1.41 25A 13-5
PCM diode D1.60
86
30
R1.57
PCM relay 150-100
85
87
R1.57
F1.11 40A 13-2
F1.37 15A 13-8
F1.38 15A 13-9
F1.39 15A 13-10
F1.40 15A 13-10
F1.26 20A 13-6
14398
14398-S5 151-52
37 12 YE
20 16 WH/LB
1205 20 BK
1075 12 DG/OG
361 12 RD
1140 18 VT
931 14 OG
5
4 C263 14401
4 C250
17 C1117
Joint connector 1 11-1
18 C1117 14398
Ignition switch (11572)
2) Run/Start
0 1 2 3
1 C250 14401
16 14 RD/LG
20 16 WH/LB
14401-S8 151-63
14398-S19 151-53
Directs voltage to fuel pump.
2
3 R1.48
Fuel pump relay 150-99
1
5 R1.48
Battery Junction Box (BJB) 11-1
1205 20 BK
973 14 RD
Safety device that cuts power to electric fuel pump if collision occurs. Switch must be reset manually.
55 C263 14401
9 C4033
Fuel pump driver module (LBLR)
2 C4033 14401
1205 14 BK
2 C282
Inertia Fuel Shutoff (IFS) Switch
1) Normal
2) Post impact (9341)
1 2
1 C282 14401
866 14 WH
G107 LR fender
G107 LR fender
G202 R cowl