C711

14K024

Y32
Key removal inhibit solenoid

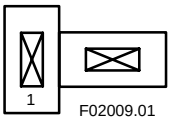

F02009.01

Pin	Circuit	Circuit Function
1	29S-TA32 (OG/WH)	Voltage supplied at all times (overload protected), switched
2	31-TA32 (BK)	Ground
	31-LG25 (BK) + 31-TA32 (BK)	Ground

C717

14K024

N83
Traction Control System (TCS) disable switch

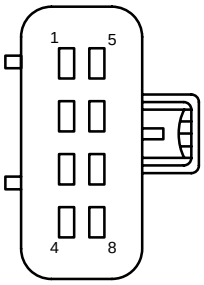

F08060

Pin	Circuit	Circuit Function
1	31S-CF54 (BK/WH)	Ground, switched
2	91-CF54 (BK/WH)	Ground
	91-GH9 (BK/OG)	Ground
3	–	not used
4	31S-CF45A (BK/GN)	Ground, switched
5	–	not used
6	15-CF45 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
7	31-LH45 (BK) + 31S-LB9 (BK)	Ground
8	64S-LH45 (BU/OG) + 64S-LK40 (BU/RD)	Variable D.C. voltage (not overload protected), switched

C732

14014

A31
Fuel tank unit

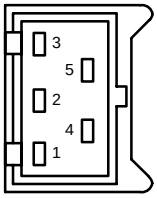

F05012

Pin	Circuit	Circuit Function
1	9-RE31 (BN/YE)	Sensor signal return (reference/ground)
2	31-DA9 (BK)	Ground
3	8-RE31 (WH/BK)	Sensor signal
4	91-GA7 (BK/BU)	Ground
5	8-GA7 (WH/RD)	Sensor signal

C738

14A584

K50
One–touch window relay

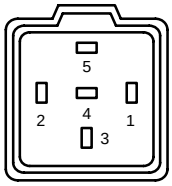

F05065

Pin	Circuit	Circuit Function
1	31-AJ16 (BK)	Ground
2	15-AJ16 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected)
3	33-AJ15 (YE/GN)	Switched between: Battery voltage, Ground or Open
4	–	not used
5	33-AJ6 (YE)	Switched between: Battery voltage, Ground or Open