C701

14A511

N111
Window adjust switch, left rear (14A412)

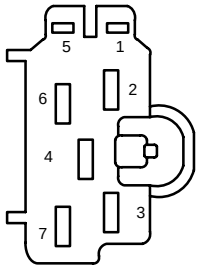

F07044

Pin	Circuit	Circuit function
1	–	not used
2	333 (YE/RD)	Window motor, feed, Up
3	316 (YE/LB)	Window switch, feed, left rear, Up
4	170 (RD/LB)	Window lockout, switched power, output
5	–	not used
6	334 (RD/YE)	Window motor, feed, Down
7	317 (GY/OG)	Window switch, feed, left rear, Down

C702

14A005

Y17
Speaker, left rear (18808)

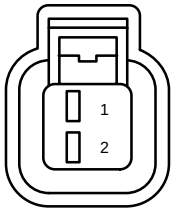

F02069

Pin	Circuit	Circuit function
1	800 (GY/LB)	Speaker, left rear (18808) +
2	801 (TN/YE)	Speaker, left rear (18808) –

C703

14A005

M116
Power window motor, left rear (23394)



F02387

Pin	Circuit	Circuit function
1	334 (RD/YE)	Window motor, feed, Down
2	333 (YE/RD)	Window motor, feed, Up

C705

14A005

A275
Door lock unit, left rear

F02116

Pin	Circuit	Circuit function
1	117 (PK/BK)	Door lock, output
2	118 (PK/OG)	Door unlock, output