Power seat switch, left

Schematic

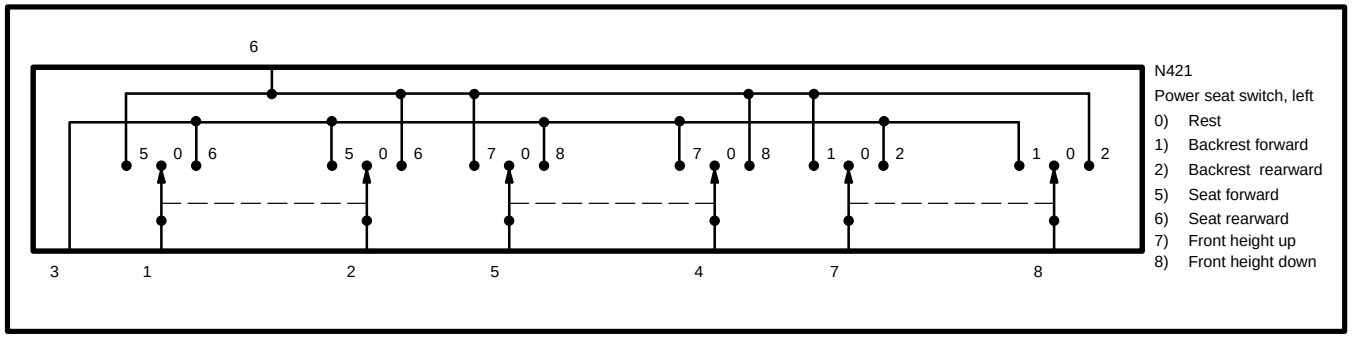
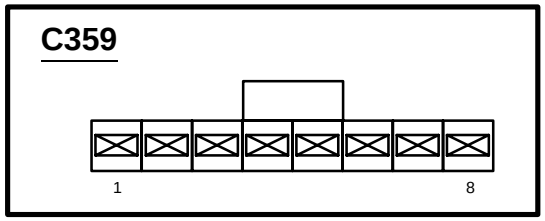
Terminal locations