C4026

14A488

Joint connector 3

F11033

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
	–	not used
2	1205 (BK)	Ground
3	–	not used
4	1205 (BK)	Ground
5	1205 (BK)	Ground
6	1205 (BK)	Ground
7	1205 (BK)	Ground
8	1205 (BK)	Ground
9	–	not used
10	1205 (BK)	Ground
11	1205 (BK)	Ground

C4033 (GY)

14407

Fuel tank unit
(9H307)

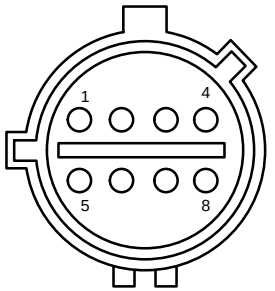

F08048

Pin	Circuit	Circuit function
1	351 (BN/WH)	Reference, voltage
2	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
3	787 (PK/BK)	Fuel pump, Power
4	1357 (LB/YE)	Fuel pump/fuel gauge sender, return
5	791 (RD/PK)	Fuel tank pressure transducer sensor (9C968)
6	359 (GY/RD)	signal, return
7	1205 (BK)	Ground
8	1356 (LG/VT)	Fuel pump/fuel gauge sender, feed

C4032 (BK)

13A409

Park/stop/turn lamp,
right rear

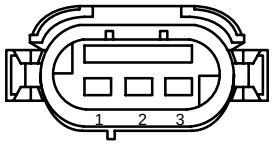

F03099

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	14 (BN)	Power, Exterior lamps
3	378 (BN/YE)	Turn lamps, feed, right rear

C4034 (BK)

13A409

Park/stop/turn lamp,
right rear

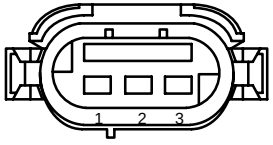

F03099

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	14 (BN)	Power, Exterior lamps
3	378 (BN/YE)	Turn lamps, feed, right rear