C227

14401

M223
Steering column
position motor

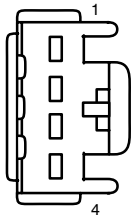

F04155

Pin	Circuit	Circuit Function
1	33-AL6 (YE/BU)	Switched between: Battery voltage, Ground or Open
2	32-AL6 (WH/BU)	Switched between: Battery voltage, Ground or Open
3	35-AL7 (VT/BK)	Switched between: Battery voltage, Ground or Open
4	34-AL7 (BU/BK)	Switched between: Battery voltage, Ground or Open