C220a (BK)

* Navigator

14401

Instrument cluster

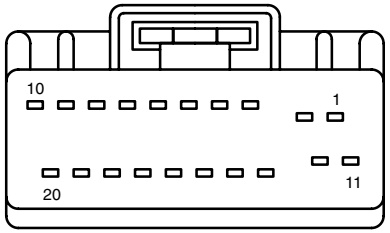

F20020

Pin	Circuit	Circuit function
1	3 LG/WH)	Turn lamps, feed, left front
2	396 (BK/OG)	Fuel sender, logic ground
3	608 (BK/YE)	Air bag indicator, control
4	29 (YE/WH)	Fuel pump/fuel gauge sender
5	31 (WH/RD)	Engine oil pressure indicator, control
6	1411 (GY/OG)	Message center switch, input
7	1906 (VT)	UBP Bus
8	914 (TN/OG)	SCP Bus +
9	915 (PK/LB)	SCP Bus –
10	767 (LB/OG)	Ambient air temperature sensor (19E702), signal
11	57 (BK)	Ground
12	19 (LB/RD)	Illumination, Power
	*505 (GY/YE)	Illumination, Pulsed power feed
13	1718 (RD/PK)	Hot with High Beams on
14	1436 (VT/OG)	Parking aid, indicator, control
15	158 (BK/PK)	Key warning switch (11A127), input
16	703 (WH/OG)	Compass data (–)
17	702 (WH/BK)	Compass data (+)
18	1002 (BK/PK)	Voltage in Run or Accessory (overload protected)
19	470 (PK/BK)	Sensor signal return (reference/ground)
	*1794 (WH)	Electronic park brake reset relay, control
20	–	not used

C220b (BK)

* Navigator
** Late production, Expedition

14401

Instrument cluster

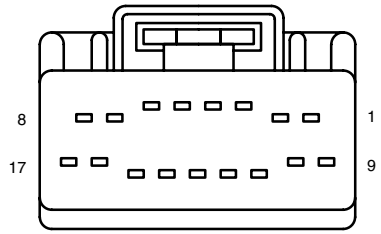

F17006

Pin	Circuit	Circuit function
1	3049 (BK/LG)	Voltage supplied at all times (overload protected)
2	676 (PK/OG)	Ground
3	81 (RD/LG)	Washer fluid level switch
4	1009 (OG/YE)	Rear window defrost relay, control
5	1332 (LB)	Accessory delay relay, control
6	1005 (VT/OG)	Battery saver relay, control
7	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
8	1396 (VT/WH)	Message center switch, return
9	*1795 (GY)	Electronic park brake release relay, control
	**1435 (DG/VT)	Parking aid, defeat, switch, signal
10	53 (BK/LB)	Interior lamp relay, switched power, output
11	402 (OG/LG)	Interior lamp relay, control
12	1405 (LB/BK)	Interior lamp, defeat, signal
13	1083 (LB/BK)	Air bag/safety belt status tone control
14	162 (LG/RD)	Parking brake switch (15A851)
15	1010 (DB/OG)	Rear window defrost switch (18578), input
16	2 (WH/LB)	Turn lamps, feed, right front
17	–	not used