C504b

14A005

N447
Master window adjust switch (14529)

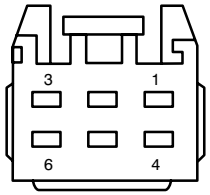

F06303

Pin	Circuit	Circuit function
1	193 (YE/LG)	Window safety relay, switched output
2	57 (BK)	Ground
3	319 (YE/BK)	Window switch, feed, right rear, +/–
4	400 (LB/BK)	Accessory relay, switched power, output
5	317 (GY/OG)	Window switch, feed, left rear, +/–
6	316 (YE/LB)	Window switch, feed, right rear, +/–

C505

14A005

N204
Door lock switch, driver side (14028)

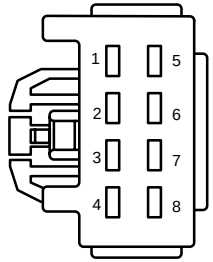

F08193

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	120 (PK/LG)	Door unlock, switch, input
4	57 (BK)	Ground
5	19 (LB/RD)	Instrument illumination, feed
6	–	not used
7	119 (PK/YE)	Door lock switch, input
8	–	not used

C506

14A005

E177
Door entry lamp, left front (13776)

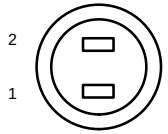

F02063

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	53 (BK/LB)	Interior lamp relay, switched power