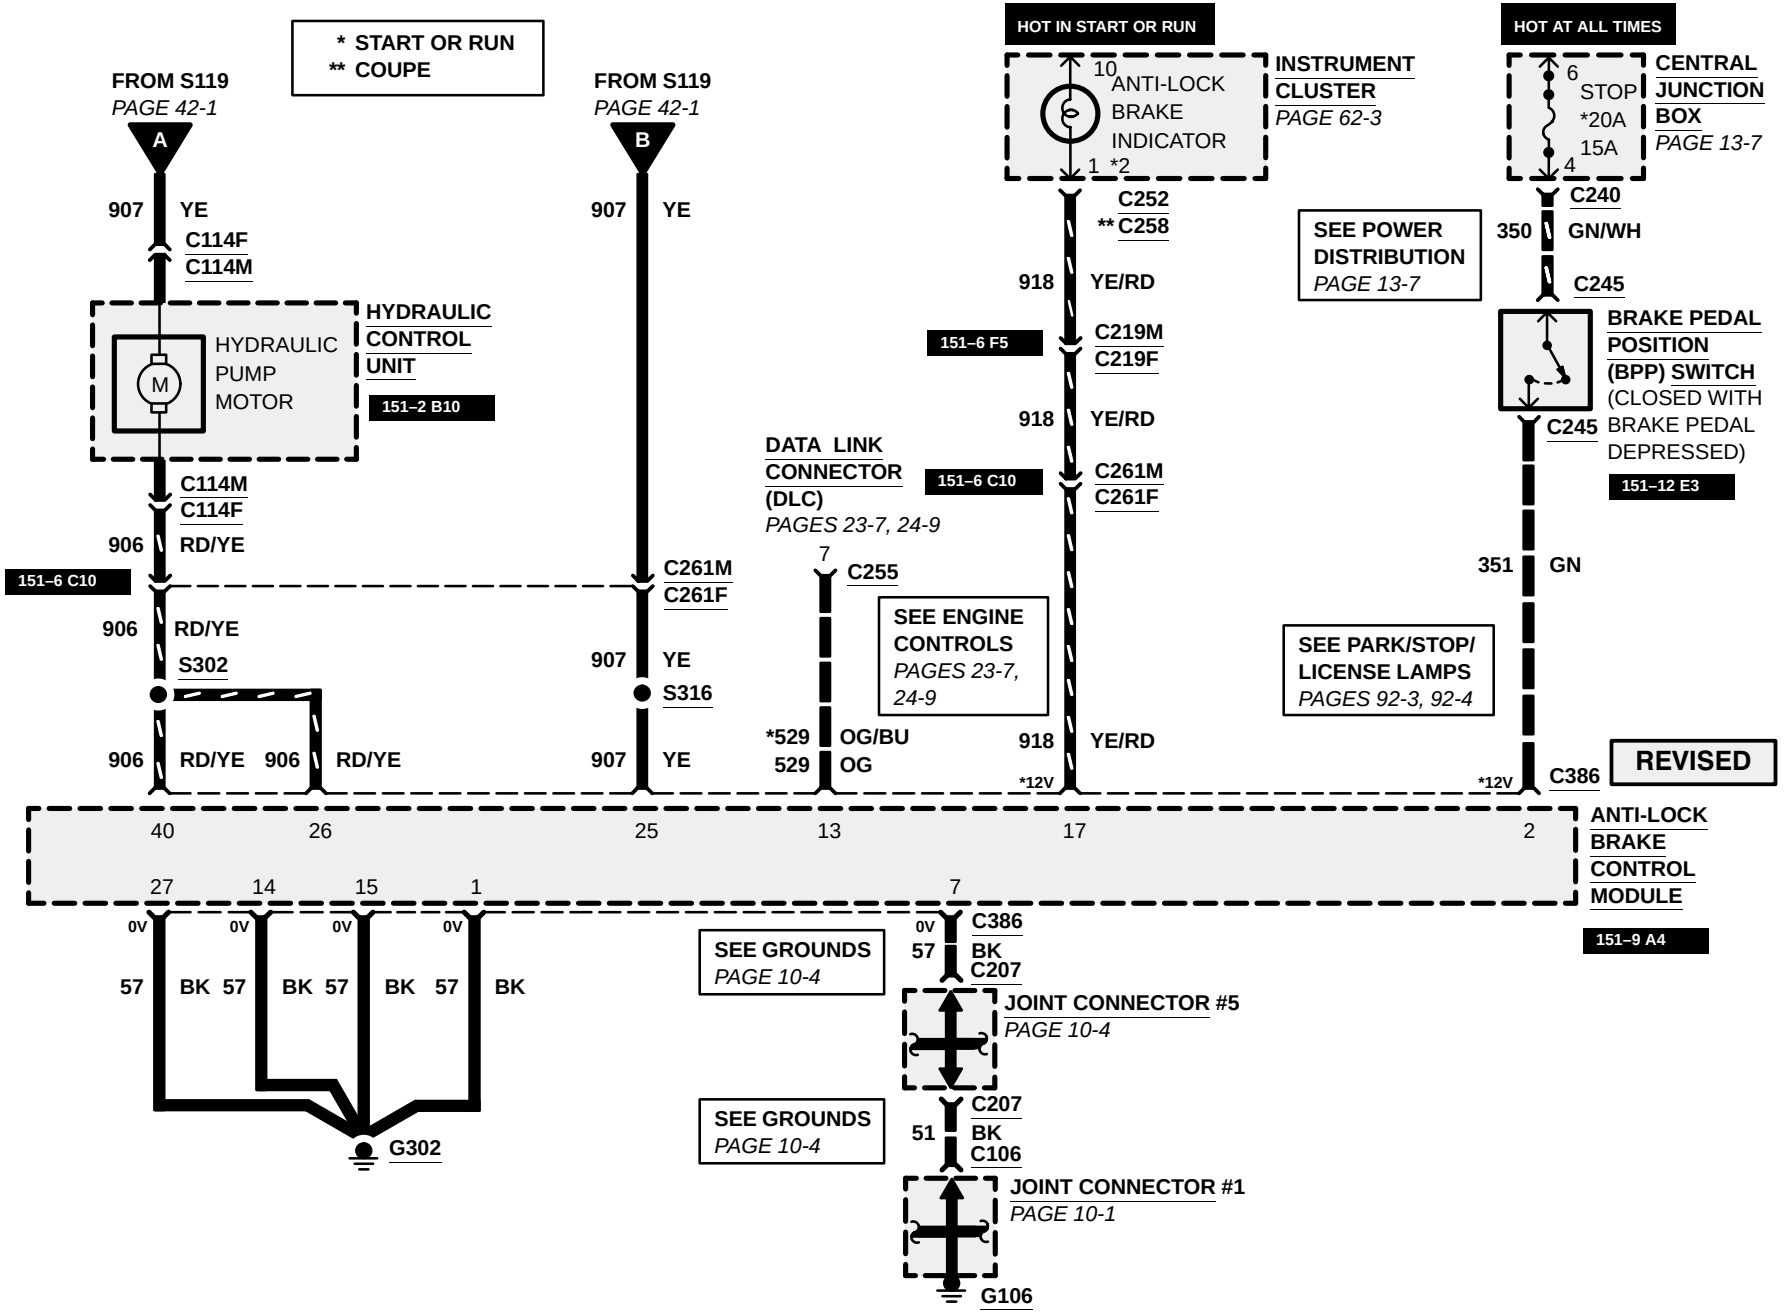
* START OR RUN
** COUPE
FROM S119
PAGE 42-1
A
907 YE
C114F
C114M
HYDRAULIC CONTROL UNIT
HYDRAULIC PUMP MOTOR
M
151–2 B10
C114M
C114F
906 RD/YE
151–6 C10
906 RD/YE
S302
906 RD/YE
906 RD/YE
FROM S119
PAGE 42-1
B
907 YE
C261M
C261F
907 YE
S316
907 YE
HOT IN START OR RUN
10
ANTI-LOCK BRAKE INDICATOR
1 *2
INSTRUMENT CLUSTER
PAGE 62-3
C252
** C258
SEE POWER DISTRIBUTION
PAGE 13-7
918 YE/RD
151–6 F5
C219M
C219F
918 YE/RD
DATA LINK CONNECTOR (DLC)
PAGES 23-7, 24-9
151–6 C10
C261M
C261F
7
C255
SEE ENGINE CONTROLS
PAGES 23-7, 24-9
*529 OG/BU
529 OG
918 YE/RD
*12V
HOT AT ALL TIMES
6
STOP
*20A
15A
4
CENTRAL JUNCTION BOX
PAGE 13-7
C240
350 GN/WH
C245
BRAKE PEDAL POSITION (BPP) SWITCH
(CLOSED WITH BRAKE PEDAL DEPRESSED)
151–12 E3
C245
351 GN
SEE PARK/STOP/ LICENSE LAMPS
PAGES 92-3, 92-4
*12V
C386
REVISED
ANTI-LOCK BRAKE CONTROL MODULE
151–9 A4
40 26 25 13 17 2
27 14 15 1 7
0V 0V 0V 0V 0V
57 BK 57 BK 57 BK 57 BK
G302
SEE GROUNDS
PAGE 10-4
C386
57 BK
C207
JOINT CONNECTOR #5
PAGE 10-4
SEE GROUNDS
PAGE 10-4
C207
51 BK
C106
JOINT CONNECTOR #1
PAGE 10-1
G106