Early build

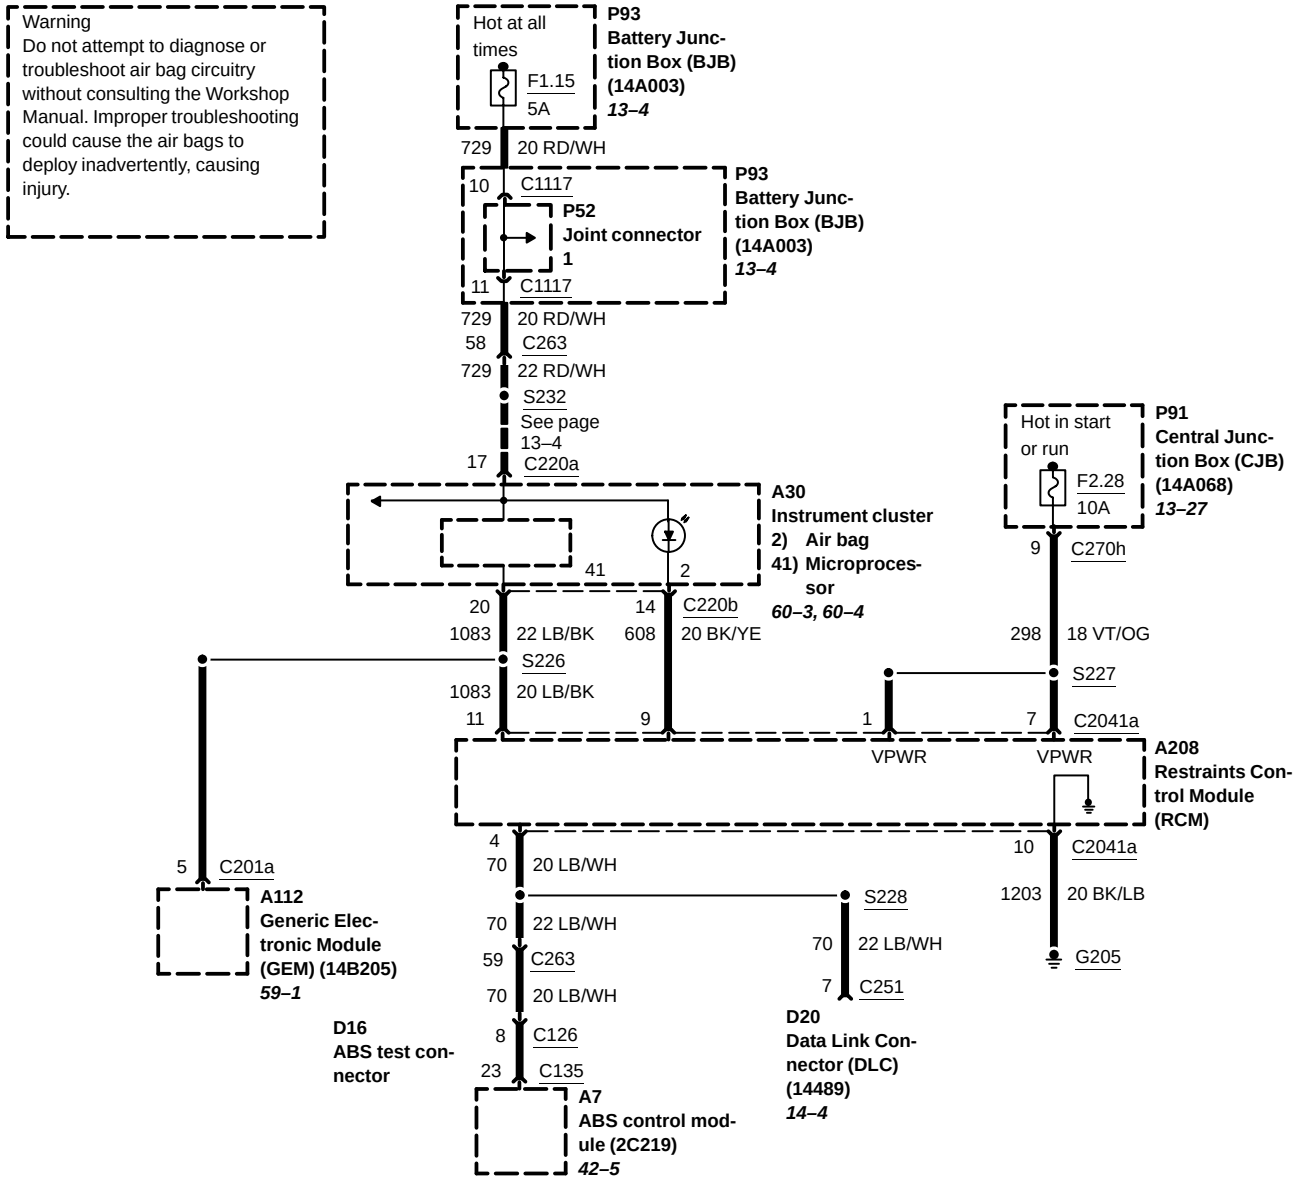
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
Hot at all times
F1.15
5A
P93 Battery Junction Box (BJB) (14A003) 13–4
729 20 RD/WH
10 C1117
P52 Joint connector 1
11 C1117
P93 Battery Junction Box (BJB) (14A003) 13–4
729 20 RD/WH
58 C263
729 22 RD/WH
S232
See page 13–4
17 C220a
A30 Instrument cluster 2) Air bag 41) Microprocessor 60–3, 60–4
41
2
20 1083 22 LB/BK
14 608 C220b 20 BK/YE
S226
1083 20 LB/BK
11
9
Hot in start or run
F2.28
10A
P91 Central Junction Box (CJB) (14A068) 13–27
9 C270h
298 18 VT/OG
S227
1
7 C2041a
VPWR
VPWR
A208 Restraints Control Module (RCM)
5 C201a
A112 Generic Electronic Module (GEM) (14B205) 59–1
4 70 20 LB/WH
10 C2041a
1203 20 BK/LB
G205
S228
70 22 LB/WH
70 22 LB/WH
59 C263
70 20 LB/WH
8 C126
23 C135
D16 ABS test connector
A7 ABS control module (2C219) 42–5
70 22 LB/WH
7 C251
D20 Data Link Connector (DLC) (14489) 14–4