C1274 (GY)

15525

4R100 transmission

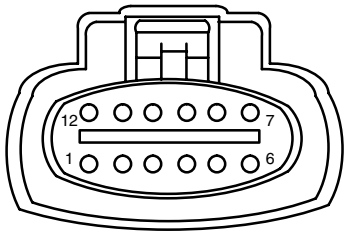

F12133

Pin	Circuit	Circuit function
1	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)
2	315 (VT/OG)	Shift solenoid B, control
3	237 (OG/YE)	Shift solenoid A, control
4	480 (VT/YE)	Torque Converter Clutch (TCC) solenoid, control
5	924 (BN/OG)	to transmission coast clutch solenoid, control
6	–	not used
7	923 (OG/BK)	Transmission Fluid Temperature (TFT) sensor, signal
8	359 (GY/RD)	Signal return
9	–	not used
10	–	not used
11	925 (WH/YE)	Electronic Pressure Control (EPC) solenoid, input, signal
12	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)

C1277

15525

Transfer case speed sensor

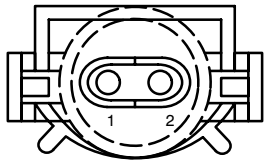

F02031

Pin	Circuit	Circuit function
1	1497 (PK/BK)	Signal return
2	1496 (PK)	Transfer case speed sensor, signal

C1286 (GY)

9D930

Intake Manifold Runner Control (IMRC) module

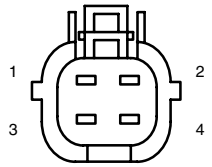

F04147

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	367 (BN)	Intake Manifold Runner Control (IMRC) module, signal
3	190 (WH/OG)	Intake Manifold Runner Control (IMRC) module, monitor
4	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)

C1287 (BK)

12B637

Intake Air Temperature (IAT) sensor 2

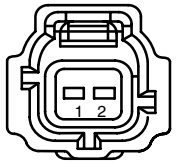

F02101

Pin	Circuit	Circuit function
1	1291 (RD/YE)	Intake Air Temperature (IAT) sensor 2, input
2	359 (GY/RD)	signal, return

C1289

A3–288

Low flow injector assembly

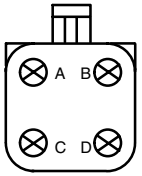

F04072

Pin	Circuit	Circuit function
A	G017 (WH)	Low flow injector 1, control
B	G019 (WH)	Low flow injector 2, control
C	G001 (WH)	Coolant solenoid, control
D	G074 (WH)	Voltage supplied in Start and Run (overload protected)