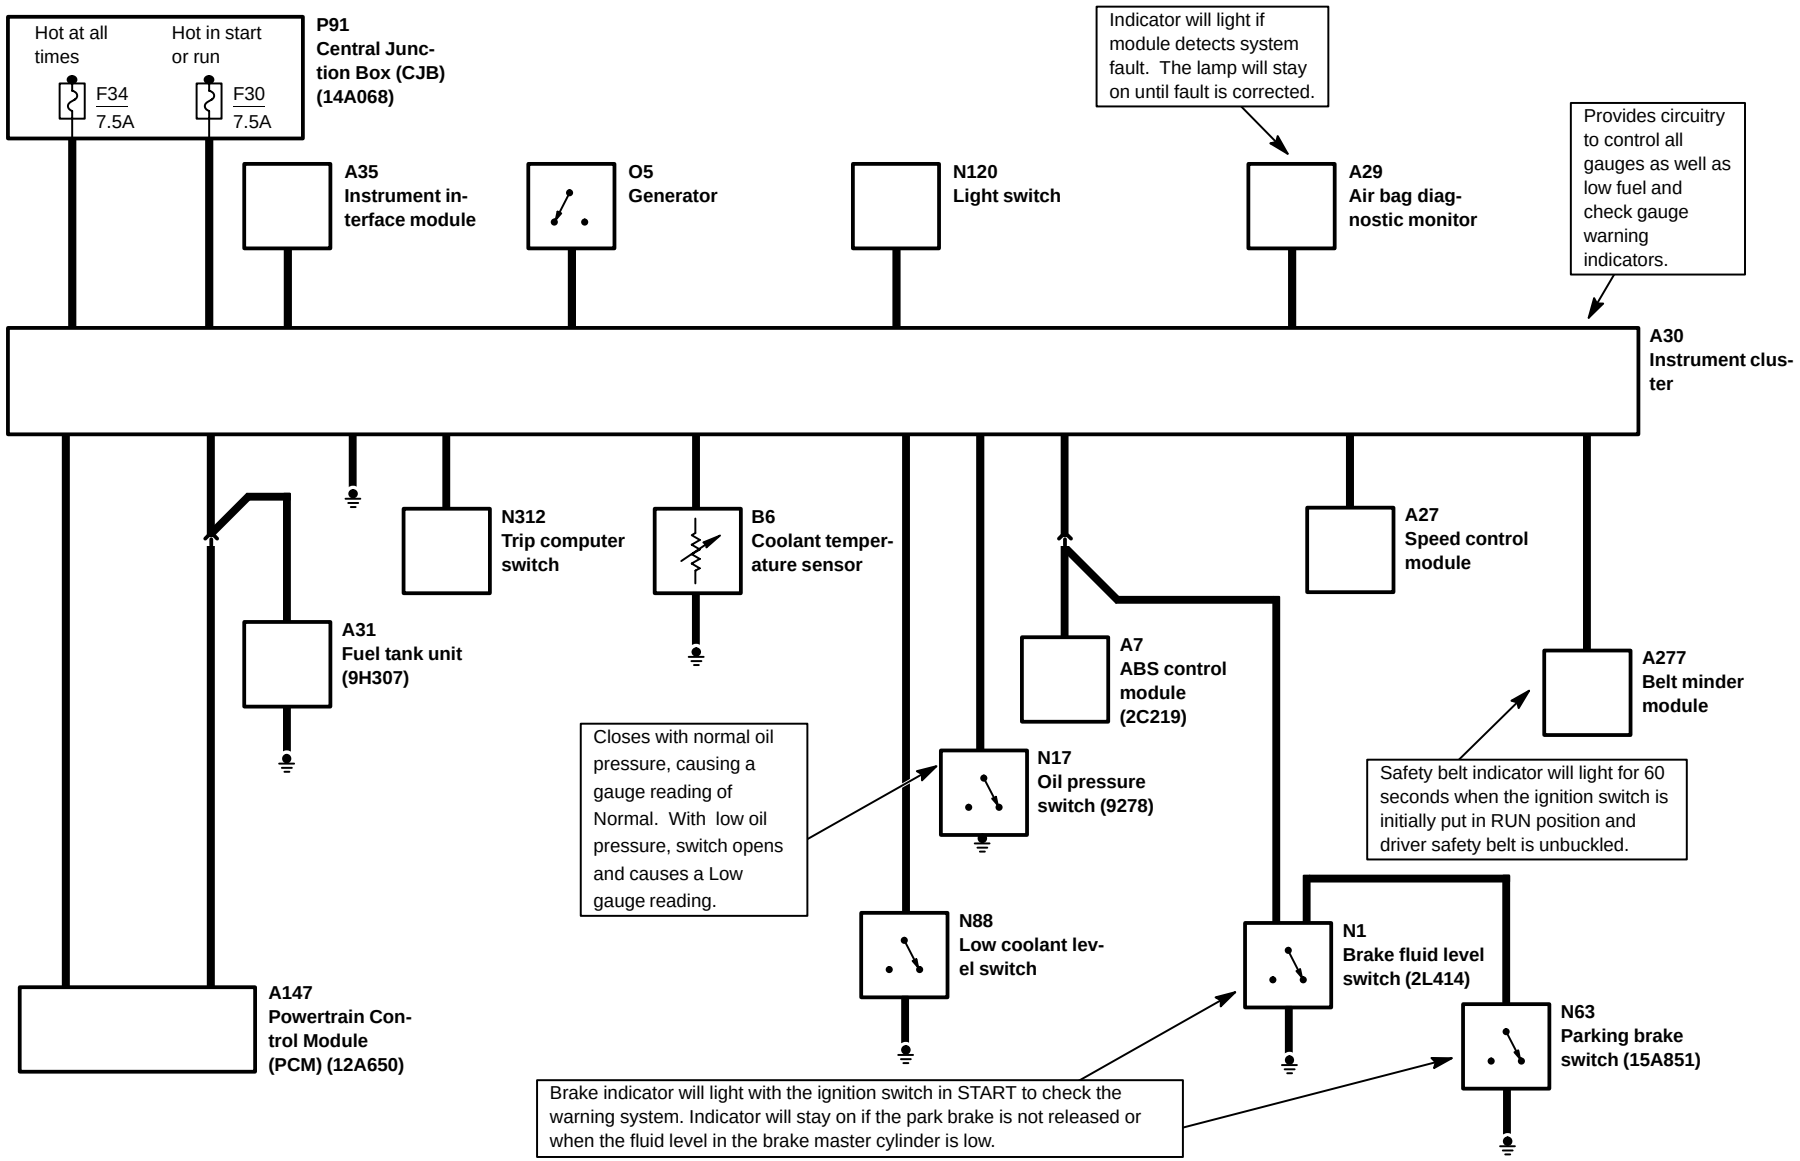
Hot at all times
Hot in start or run
F34 7.5A
F30 7.5A
P91 Central Junction Box (CJB) (14A068)
A35 Instrument interface module
O5 Generator
N120 Light switch
Indicator will light if module detects system fault. The lamp will stay on until fault is corrected.
A29 Air bag diagnostic monitor
Provides circuitry to control all gauges as well as low fuel and check gauge warning indicators.
A30 Instrument cluster
N312 Trip computer switch
B6 Coolant temperature sensor
A27 Speed control module
A31 Fuel tank unit (9H307)
A7 ABS control module (2C219)
A277 Belt minder module
Closes with normal oil pressure, causing a gauge reading of Normal. With low oil pressure, switch opens and causes a Low gauge reading.
N17 Oil pressure switch (9278)
Safety belt indicator will light for 60 seconds when the ignition switch is initially put in RUN position and driver safety belt is unbuckled.
N88 Low coolant level switch
N1 Brake fluid level switch (2L414)
N63 Parking brake switch (15A851)
A147 Powertrain Control Module (PCM) (12A650)
Brake indicator will light with the ignition switch in START to check the warning system. Indicator will stay on if the park brake is not released or when the fluid level in the brake master cylinder is low.