C692

8C290

N75
A/C compressor
cycling switch
(19E561)

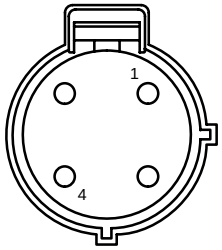

F04083

Pin	Circuit	Circuit function
1	15S-FA38 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), Switched
2	–	not used
3	–	not used
4	15S-FA17 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), Switched

C705

12A522

B40
Exhaust Pressure
Transducer (EPT)
sensor

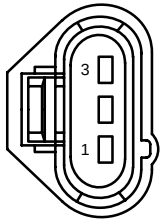

F03071

Pin	Circuit	Circuit function
1	7-RJ7 (YE/BU)	Voltage D.C. supplied at all times (sensor)
2	9-RJ7 (BN/BU)	Sensor signal return (reference/ground)
3	8-RJ7 (WH/BU)	Sensor signal

C703

9H589

B8
Throttle Position
Sensor (TPS)
(9B989)

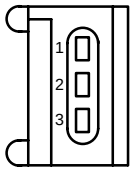

F03027

Pin	Circuit	Circuit function
1	7-RJ28 (YE)	Voltage D.C. supplied at all times (sensor)
2	8-RJ28 (WH)	Sensor signal
3	9-RJ28 (BN)	Sensor signal return (reference/ground)