# Seat adjust switch

## Schematic

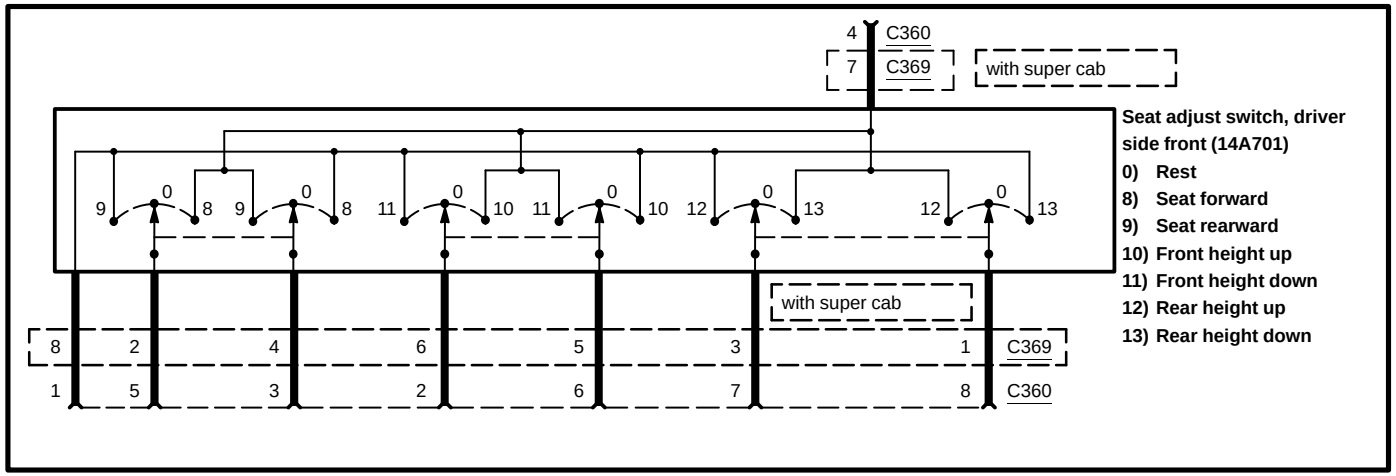


## Terminals

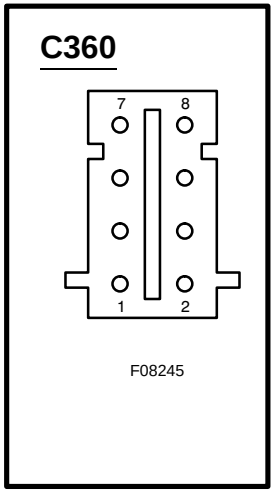


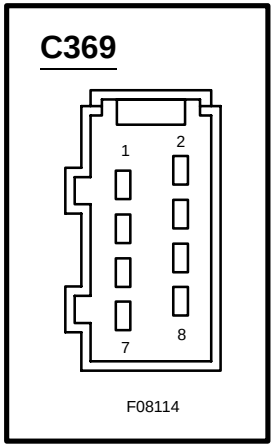


## Component testing procedure

| Circuit to test | Connect self–powered test light or ohm-meter to terminals | | Move switch to these positions | A good switch will indicate |
|---|---|---|---|---|
| | C360 | C369 | | |
| **Forward/Rearward circuit** | 4 and 6<br>7 and 8 | 4 and 6<br>7 and 8 | Forward | Closed circuit |
| | | | Rearward | Open circuit |
| | 4 and 7<br>6 and 8 | 4 and 7<br>6 and 8 | Forward | Open circuit |
| | | | Rearward | Closed circuit |
| **Front up/down circuit** | 4 and 5<br>1 and 8 | 4 and 5<br>1 and 8 | Up | Closed circuit |
| | | | Down | Open circuit |
| | 4 and 1<br>5 and 8 | 4 and 1<br>5 and 8 | Up | Open circuit |
| | | | Down | Closed circuit |
| **Rear up/down circuit** | 4 and 2<br>3 and 8 | 4 and 2<br>3 and 8 | Up | Closed circuit |
| | | | Down | Open circuit |
| | 4 and 3<br>2 and 8 | 4 and 3<br>2 and 8 | Up | Open circuit |
| | | | Down | Closed circuit |
| **Up/Down Circuit** | 4 and 2<br>4 and 5 | 7 and 6<br>7 and 2 | Up | Closed circuit |
| | 4 and 3<br>4 and 1 | 7 and 4<br>7 and 8 | Down | Closed circuit |