-1

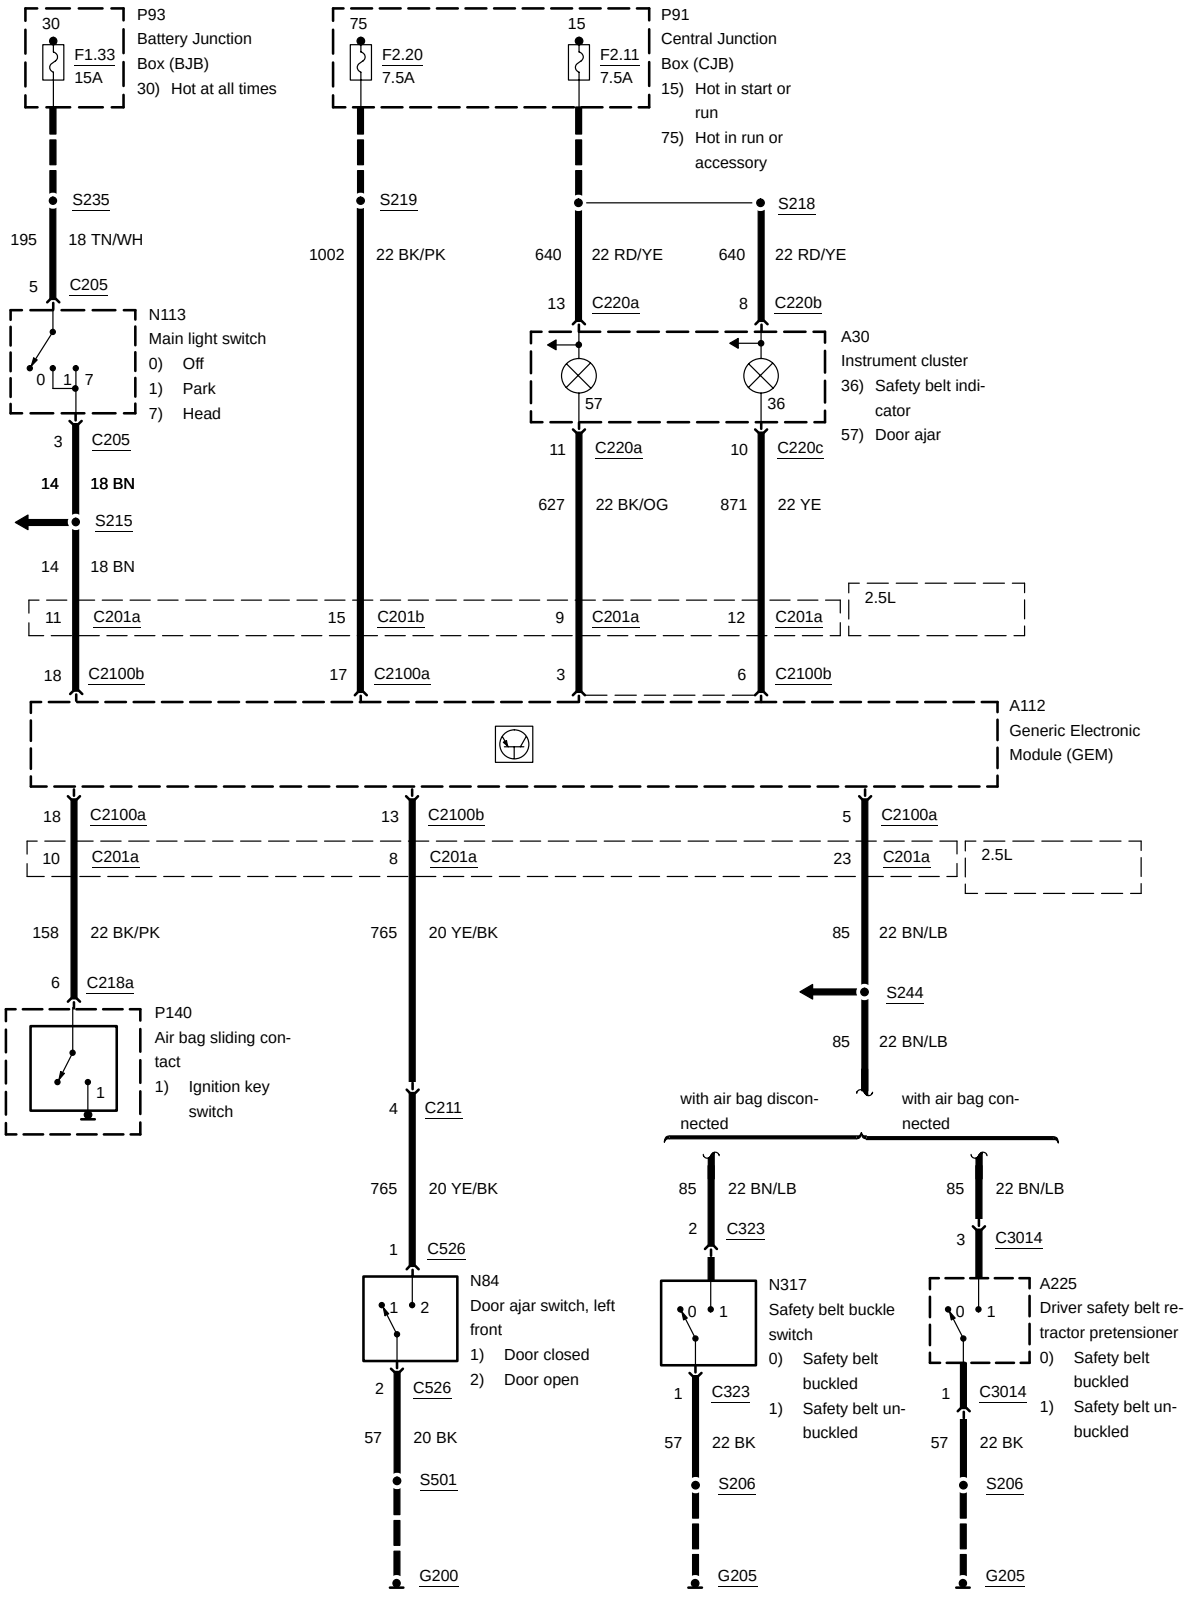
P93
Battery Junction Box (BJB)
30) Hot at all times
30
F1.33
15A
P91
Central Junction Box (CJB)
15) Hot in start or run
75) Hot in run or accessory
75
F2.20
7.5A
15
F2.11
7.5A
S235
S219
S218
195 18 TN/WH
1002 22 BK/PK
640 22 RD/YE
640 22 RD/YE
5 C205
13 C220a
8 C220b
N113
Main light switch
0) Off
1) Park
7) Head
A30
Instrument cluster
36) Safety belt indicator
57) Door ajar
57
36
3 C205
11 C220a
10 C220c
14 18 BN
627 22 BK/OG
871 22 YE
S215
14 18 BN
2.5L
11 C201a
15 C201b
9 C201a
12 C201a
18 C2100b
17 C2100a
3
6 C2100b
A112
Generic Electronic Module (GEM)
18 C2100a
13 C2100b
5 C2100a
10 C201a
8 C201a
23 C201a
2.5L
158 22 BK/PK
765 20 YE/BK
85 22 BN/LB
6 C218a
S244
85 22 BN/LB
P140
Air bag sliding contact
1) Ignition key switch
with air bag disconnected
with air bag connected
4 C211
765 20 YE/BK
85 22 BN/LB
85 22 BN/LB
2 C323
3 C3014
1 C526
N84
Door ajar switch, left front
1) Door closed
2) Door open
N317
Safety belt buckle switch
0) Safety belt buckled
1) Safety belt unbuckled
A225
Driver safety belt retractor pretensioner
0) Safety belt buckled
1) Safety belt unbuckled
2 C526
1 C323
1 C3014
57 20 BK
57 22 BK
57 22 BK
S501
S206
S206
G200
G205
G205