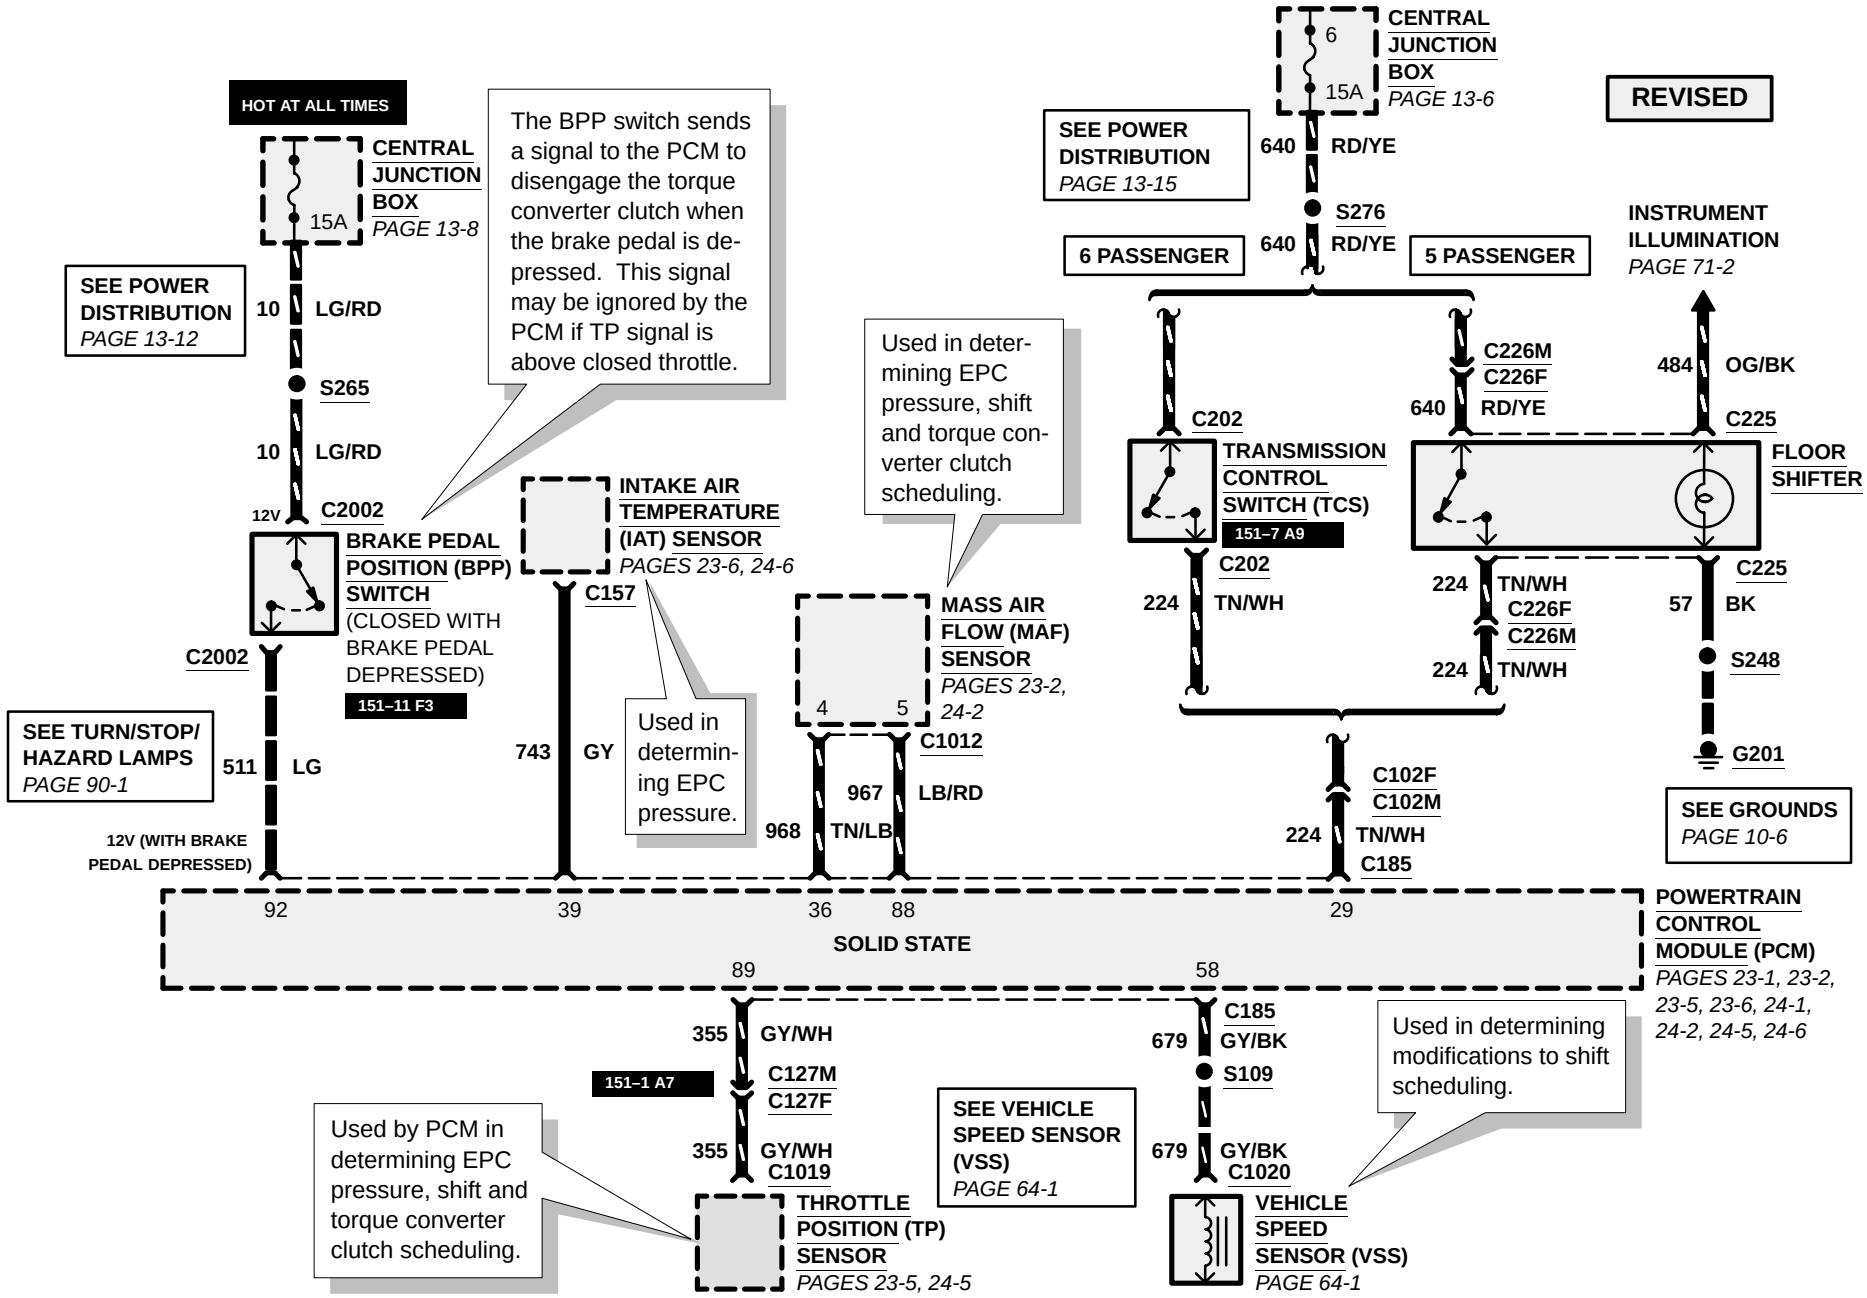
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
15A
PAGE 13-8
SEE POWER DISTRIBUTION
PAGE 13-12
10 LG/RD
S265
10 LG/RD
12V
C2002
BRAKE PEDAL POSITION (BPP) SWITCH
(CLOSED WITH BRAKE PEDAL DEPRESSED)
151–11 F3
C2002
SEE TURN/STOP/ HAZARD LAMPS
PAGE 90-1
511 LG
12V (WITH BRAKE PEDAL DEPRESSED)
The BPP switch sends a signal to the PCM to disengage the torque converter clutch when the brake pedal is depressed. This signal may be ignored by the PCM if TP signal is above closed throttle.
INTAKE AIR TEMPERATURE (IAT) SENSOR
PAGES 23-6, 24-6
C157
743 GY
Used in determining EPC pressure.
Used in determining EPC pressure, shift and torque converter clutch scheduling.
MASS AIR FLOW (MAF) SENSOR
PAGES 23-2, 24-2
4
5
C1012
967 LB/RD
968 TN/LB
CENTRAL JUNCTION BOX
6
15A
PAGE 13-6
REVISED
SEE POWER DISTRIBUTION
PAGE 13-15
640 RD/YE
S276
640 RD/YE
6 PASSENGER
5 PASSENGER
INSTRUMENT ILLUMINATION
PAGE 71-2
C202
C226M
C226F
640 RD/YE
484 OG/BK
C225
TRANSMISSION CONTROL SWITCH (TCS)
151–7 A9
FLOOR SHIFTER
C202
224 TN/WH
224 TN/WH
C226F
C226M
224 TN/WH
C225
57 BK
S248
G201
SEE GROUNDS
PAGE 10-6
C102F
C102M
224 TN/WH
C185
92
39
36
88
29
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
PAGES 23-1, 23-2, 23-5, 23-6, 24-1, 24-2, 24-5, 24-6
89
58
355 GY/WH
C127M
C127F
151–1 A7
355 GY/WH
C1019
THROTTLE POSITION (TP) SENSOR
PAGES 23-5, 24-5
Used by PCM in determining EPC pressure, shift and torque converter clutch scheduling.
SEE VEHICLE SPEED SENSOR (VSS)
PAGE 64-1
C185
679 GY/BK
S109
679 GY/BK
C1020
VEHICLE SPEED SENSOR (VSS)
PAGE 64-1
Used in determining modifications to shift scheduling.