C701

14A005

N111
Window adjust switch, left rear (14A412)

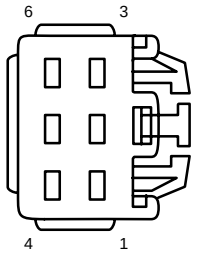

F06213

Pin	Circuit	Circuit function
1	317 (GY/OG)	Window switch, feed, left rear, Down
2	885 (YE/LB)	Window switch, to, Window motor, left rear
3	193 (YE/LG)	switched power
4	–	not used
5	884 (YE/BK)	Window switch, to, Window motor, left rear
6	316 (YE/LB)	Window switch, feed, left rear, Up

C702

14A005

Y17
Speaker, left rear (18808)

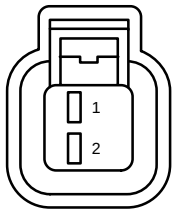

F02069

Pin	Circuit	Circuit function
1	800 (GY/LB)	Speaker, left rear (18808) +
2	801 (TN/YE)	Speaker, left rear (18808) –

C703

14A005

M116
Power window motor, left rear (23394)



F02457

Pin	Circuit	Circuit function
1	885 (YE/LB)	Window switch, to, Window motor, left rear
2	884 (YE/BK)	Window switch, to, Window motor, left rear

C704

14A005

M64
Door lock actuator, left rear (218A43)

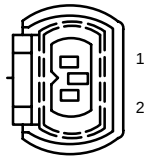

F02116

Pin	Circuit	Circuit function
1	117 (PK/BK)	Door lock, output
2	118 (PK/OG)	Door unlock, output

C712

14A005

Y269
Speaker, left middle

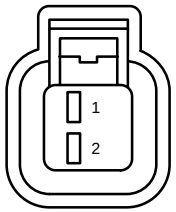

F02069

Pin	Circuit	Circuit function
1	827 (TN/WH)	Speaker, left rear (18808) +
2	801 (TN/YE)	Speaker, left rear (18808) –