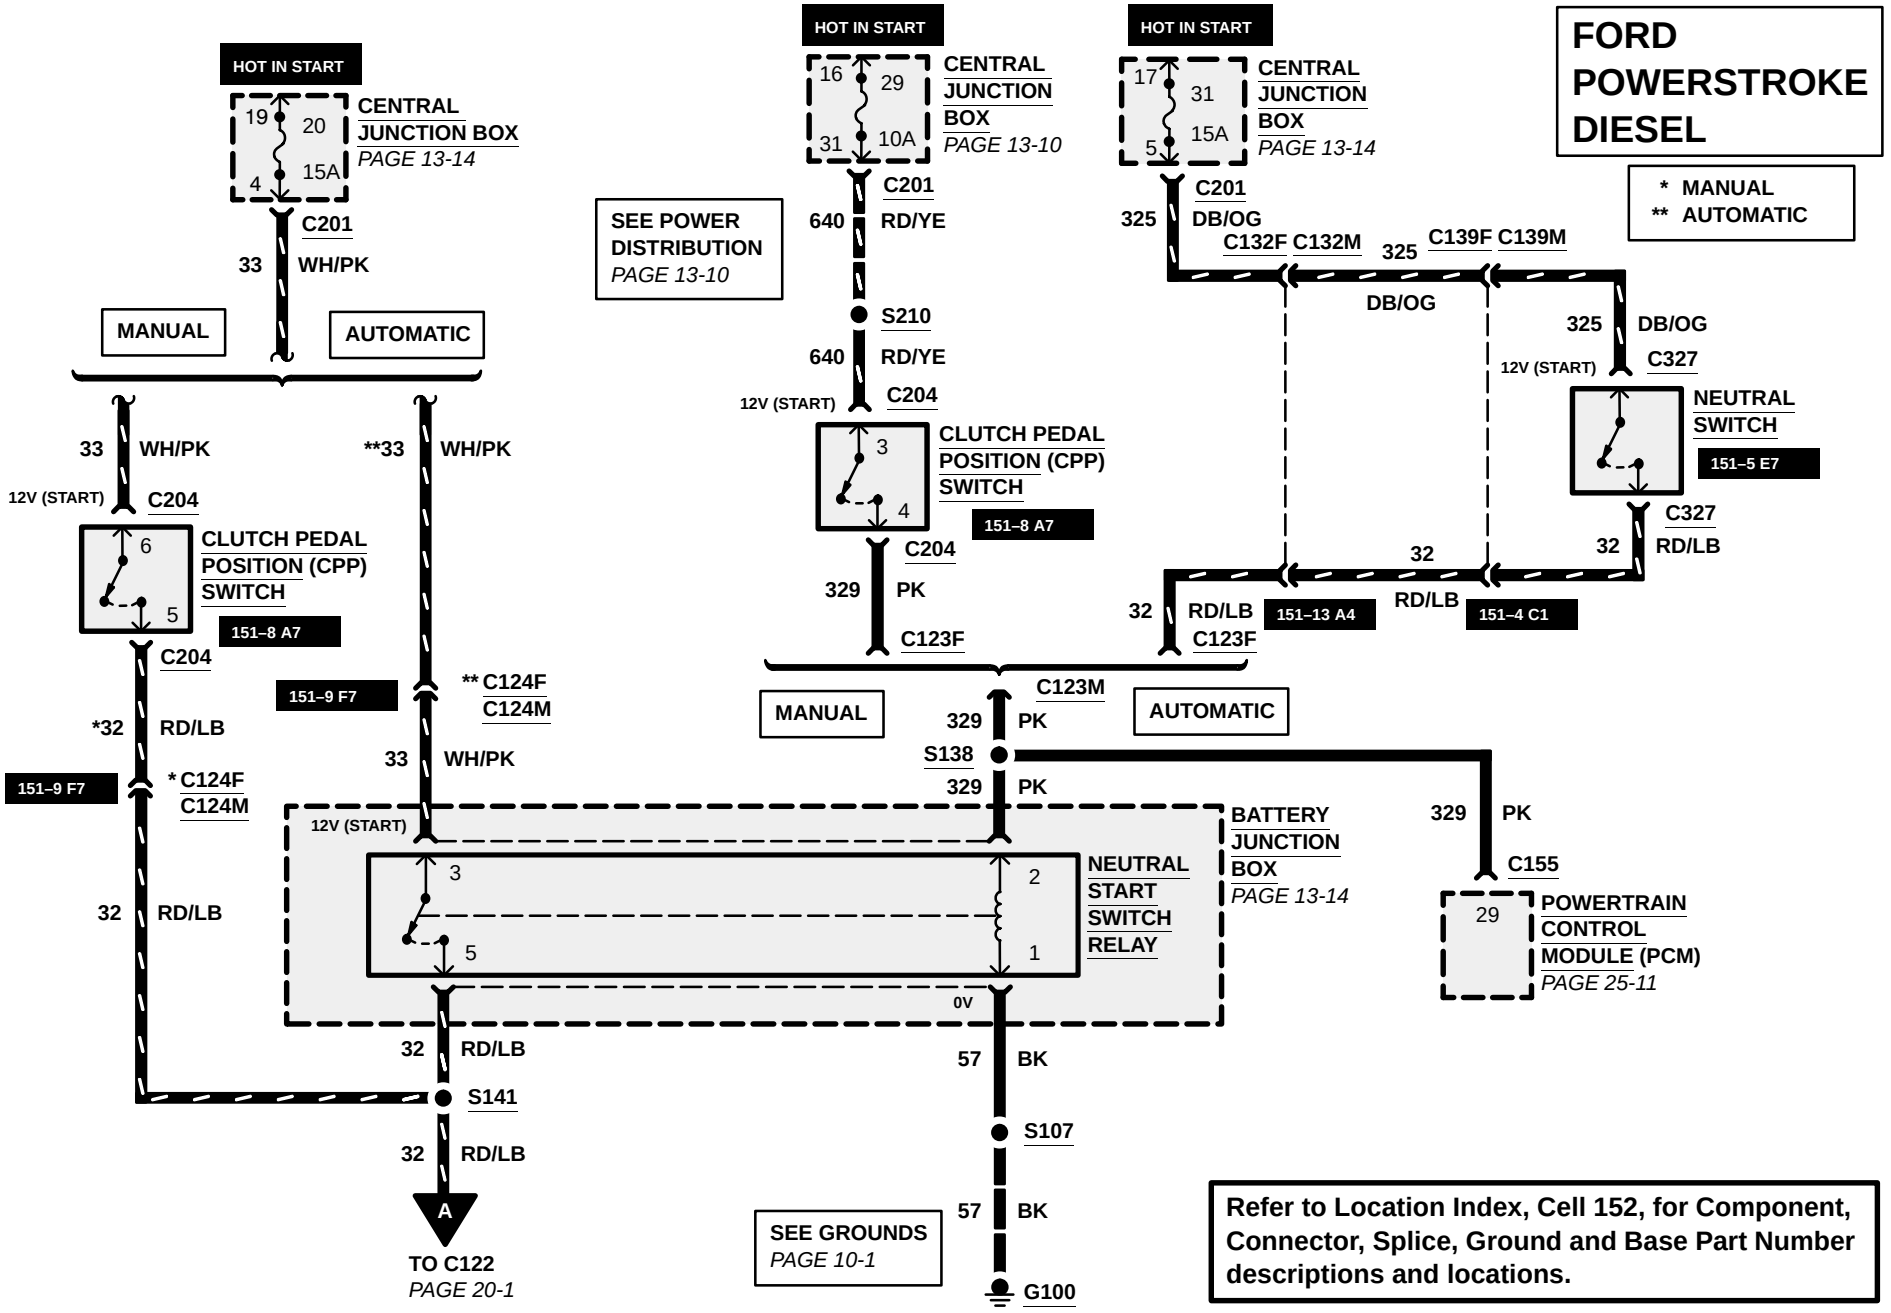
FORD POWERSTROKE DIESEL
* MANUAL
** AUTOMATIC
HOT IN START
CENTRAL JUNCTION BOX
PAGE 13-14
19
20
4
15A
C201
33 WH/PK
MANUAL
AUTOMATIC
33 WH/PK
12V (START)
C204
6
5
CLUTCH PEDAL POSITION (CPP) SWITCH
151–8 A7
C204
*32 RD/LB
151–9 F7
* C124F
C124M
32 RD/LB
**33 WH/PK
151–9 F7
** C124F
C124M
33 WH/PK
SEE POWER DISTRIBUTION
PAGE 13-10
HOT IN START
16
29
31
10A
CENTRAL JUNCTION BOX
PAGE 13-10
C201
640 RD/YE
S210
640 RD/YE
12V (START)
C204
3
4
CLUTCH PEDAL POSITION (CPP) SWITCH
151–8 A7
C204
329 PK
C123F
MANUAL
C123M
329 PK
S138
329 PK
12V (START)
3
2
5
1
NEUTRAL START SWITCH RELAY
0V
BATTERY JUNCTION BOX
PAGE 13-14
32 RD/LB
S141
32 RD/LB
A
TO C122
PAGE 20-1
57 BK
S107
57 BK
G100
SEE GROUNDS
PAGE 10-1
HOT IN START
17
31
5
15A
CENTRAL JUNCTION BOX
PAGE 13-14
C201
325 DB/OG
C132F C132M
325 DB/OG
C139F C139M
325 DB/OG
C327
12V (START)
NEUTRAL SWITCH
151–5 E7
C327
32 RD/LB
32 RD/LB
151–4 C1
32 RD/LB
C123F
AUTOMATIC
151–13 A4
329 PK
C155
29
POWERTRAIN CONTROL MODULE (PCM)
PAGE 25-11
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.