C252

IP Harness

Cruise control
set-resume switch

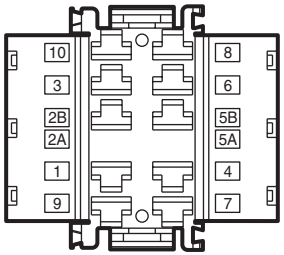

3577268C1

Pin	Circuit	Circuit Function
1	848 (DG/OG)	Speed control switch to ECM
2A	—	Not used
2B	21 (DG/LG)	Cruise control switch return to ECM
2B	23 (TN/LG)	V8 AVNT Engine, fused run power
3	154 (VT/LG)	Cruise control switch set
4	—	Not used
5A	—	Not used
5B	—	Not used
6	—	Not used
7	19 (LB/RD)	Instrument panel lamps feed
8	19 (LB/RD)	Instrument panel lamps feed
9	57 (BK)	Ground circuit
10	57 (BK)	Ground circuit

C253

IP Harness

Cruise control
on-off switch

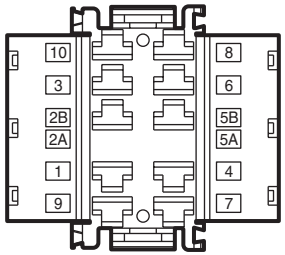

3577268C1

Pin	Circuit	Circuit Function
1	—	Not used
2A	—	Not used
2B	151 (LB/BK)	ECM to cruise control switch
3	21 (DG/LG)	Cruise control switch return to ECM
3	23 (TN/LG)	Fused run power to cruise control switch
4	—	Not used
5A	—	Not used
5B	—	Not used
6	—	Not used
7	19 (LB/RD)	Instrument panel lamps feed
8	19 (LB/RD)	Instrument panel lamps feed
9	57 (BK)	Ground circuit
10	57 (BK)	Ground circuit