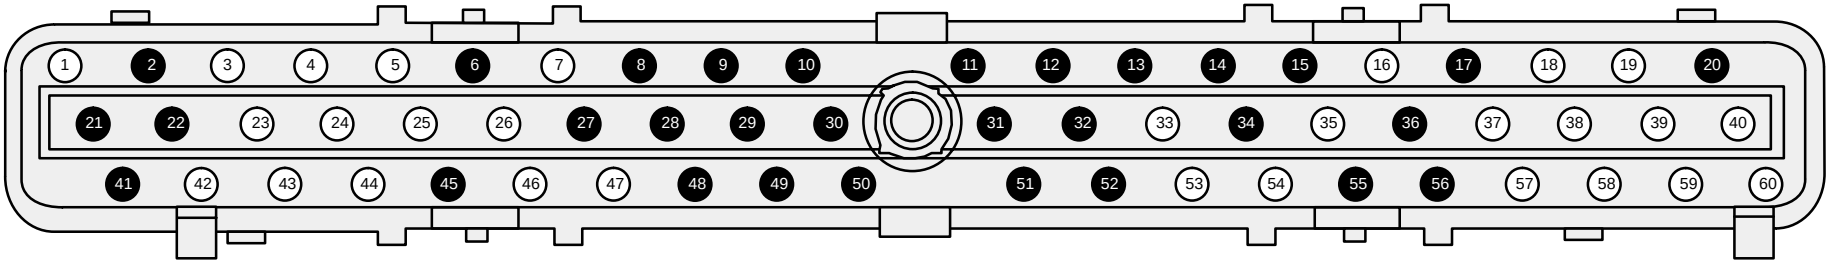

C197
NGV MODULE

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	729 (RD/WH)	Engine Fuse Module Feed	17	–	NOT USED
2	–	NOT USED	18	915 (PK/LB)	Bus –
3	1165 (WH/RD)	Injector Input #1	19	914 (TN/OG)	Bus +
4	1166 (YE/RD)	Injector Input #2	20	–	NOT USED
5	1167 (WH/BK)	Injector Input #3	21	–	NOT USED
6	–	NOT USED	22	–	NOT USED
7	1161 (DG/OG)	Fuel Tank Pressure Sensor Signal	23	1168 (YE/BK)	Injector Input #4
8	–	NOT USED	24	1169 (WH/LB)	Injector Input #5
9	–	NOT USED	25	1170 (YE/LB)	Injector Input #6
10	–	NOT USED	26	1160 (BN/WH)	Fuel Tank Pressure Sensor VREF
11	–	NOT USED	27	–	NOT USED
12	–	NOT USED	28	–	NOT USED
13	–	NOT USED	29	–	NOT USED
14	–	NOT USED	30	–	NOT USED
15	–	NOT USED	31	–	NOT USED
16	1503 (BK/LB)	NGV Timer	32	–	NOT USED

PIN	CIRCUIT	CIRCUIT FUNCTION
33	559 (TN/BK)	Fuel Injector #5
34	–	NOT USED
35	558 (BN/LB)	Fuel Injector #4
36	–	NOT USED
37	361 (RD)	Power Input
38	29 (YE/WH)	Fuel Gauge Signal
39	557 (BN/YE)	Fuel Injector #3
40	1502 (BK/YE)	Ground
41	–	NOT USED
42	560 (LG/OG)	Fuel Injector #6
43	1171 (WH)	Injector Input #7
44	1172 (YE)	Injector Input #8
45	–	NOT USED
46	1163 (BN)	Sensor Signal Return
47	1162 (LG/RD)	Fuel Tank Temperature Sensor Signal
48	–	NOT USED
49	–	NOT USED
50	–	NOT USED
51	–	NOT USED
52	–	NOT USED
53	561 (TN/RD)	Fuel Injector #7
54	562 (LB)	Fuel Injector #8
55	–	NOT USED
56	–	NOT USED
57	361 (RD)	Power Input
58	555 (TN)	Fuel Injector #1
59	556 (WH)	Fuel Injector #2
60	1501 (BK)	Ground

5.4L NGV

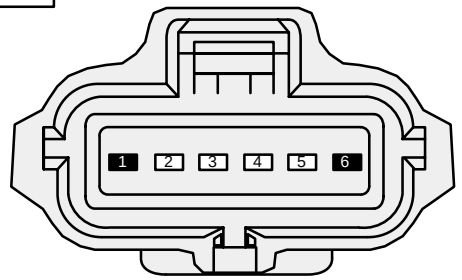

C141

MASS AIR FLOW (MAF) SENSOR

PIN	CIRCUIT	CIRCUIT FUNCTION
1	–	NOT USED
2	361 (RD)	Power (Hot in Start or Run)
3	570 (BK/WH)	Ground
4	968 (TN/LB)	MAF Sensor Signal Return
5	967 (LB/RD)	MAF Signal Out
6	–	NOT USED

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C157	31-4
C182	29-5, 30-5
C224	130-5
C236	62-6
C237	62-6
C267	59-6