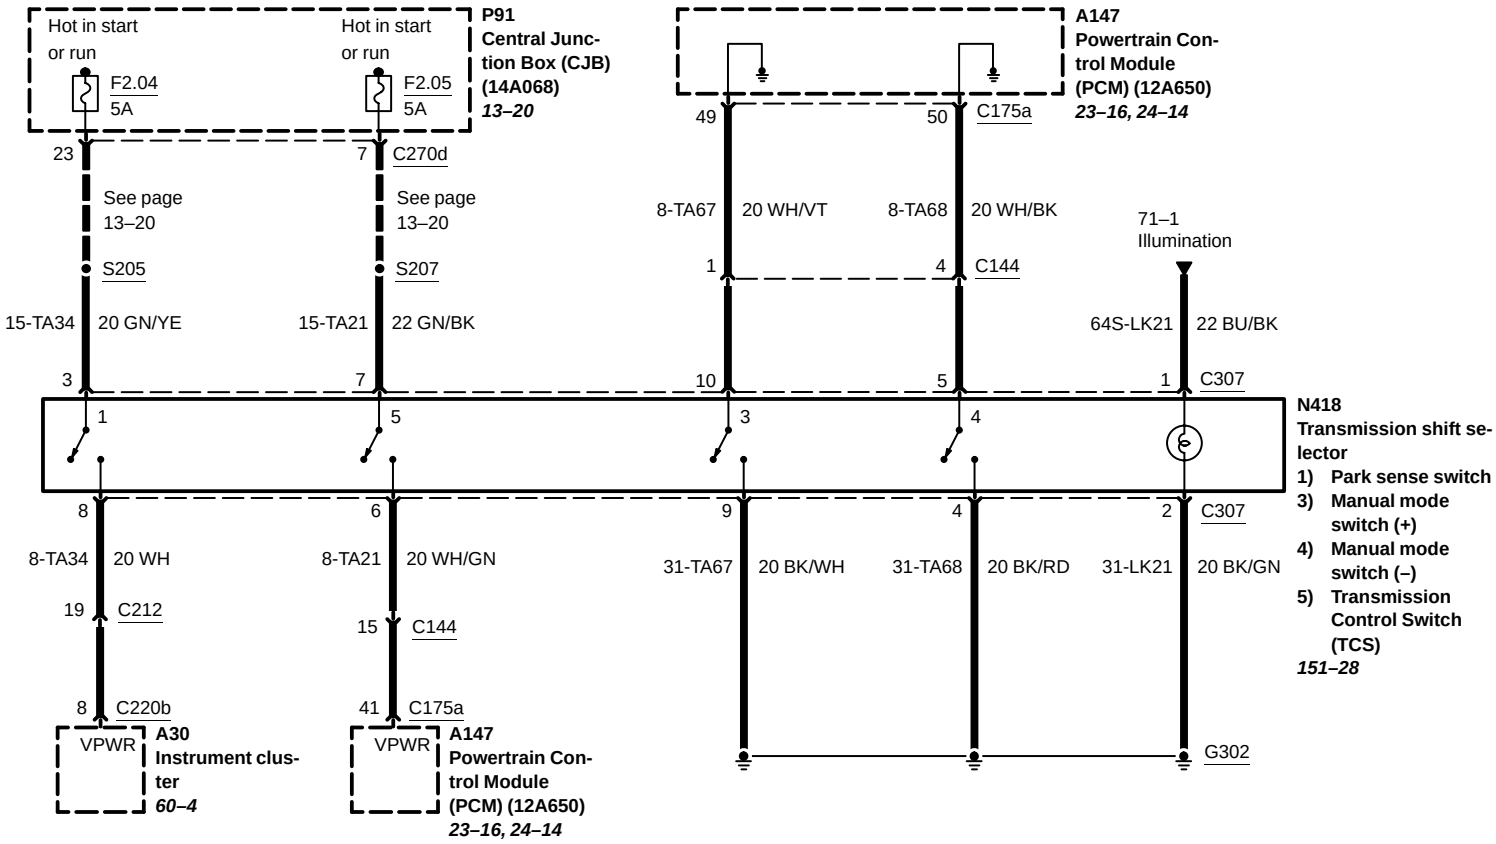
Hot in start or run
F2.04
5A
Hot in start or run
F2.05
5A
P91
Central Junction Box (CJB)
(14A068)
13–20
A147
Powertrain Control Module
(PCM) (12A650)
23–16, 24–14
23
7
C270d
49
50
C175a
See page 13–20
See page 13–20
8-TA67
20 WH/VT
8-TA68
20 WH/BK
71–1
Illumination
S205
S207
1
4
C144
15-TA34
20 GN/YE
15-TA21
22 GN/BK
64S-LK21
22 BU/BK
3
7
10
5
1
C307
N418
Transmission shift selector
1) Park sense switch
3) Manual mode switch (+)
4) Manual mode switch (–)
5) Transmission Control Switch (TCS)
151–28
1
5
3
4
8
6
9
4
2
C307
8-TA34
20 WH
8-TA21
20 WH/GN
31-TA67
20 BK/WH
31-TA68
20 BK/RD
31-LK21
20 BK/GN
19
C212
15
C144
8
C220b
41
C175a
G302
VPWR
A30
Instrument cluster
60–4
VPWR
A147
Powertrain Control Module
(PCM) (12A650)
23–16, 24–14