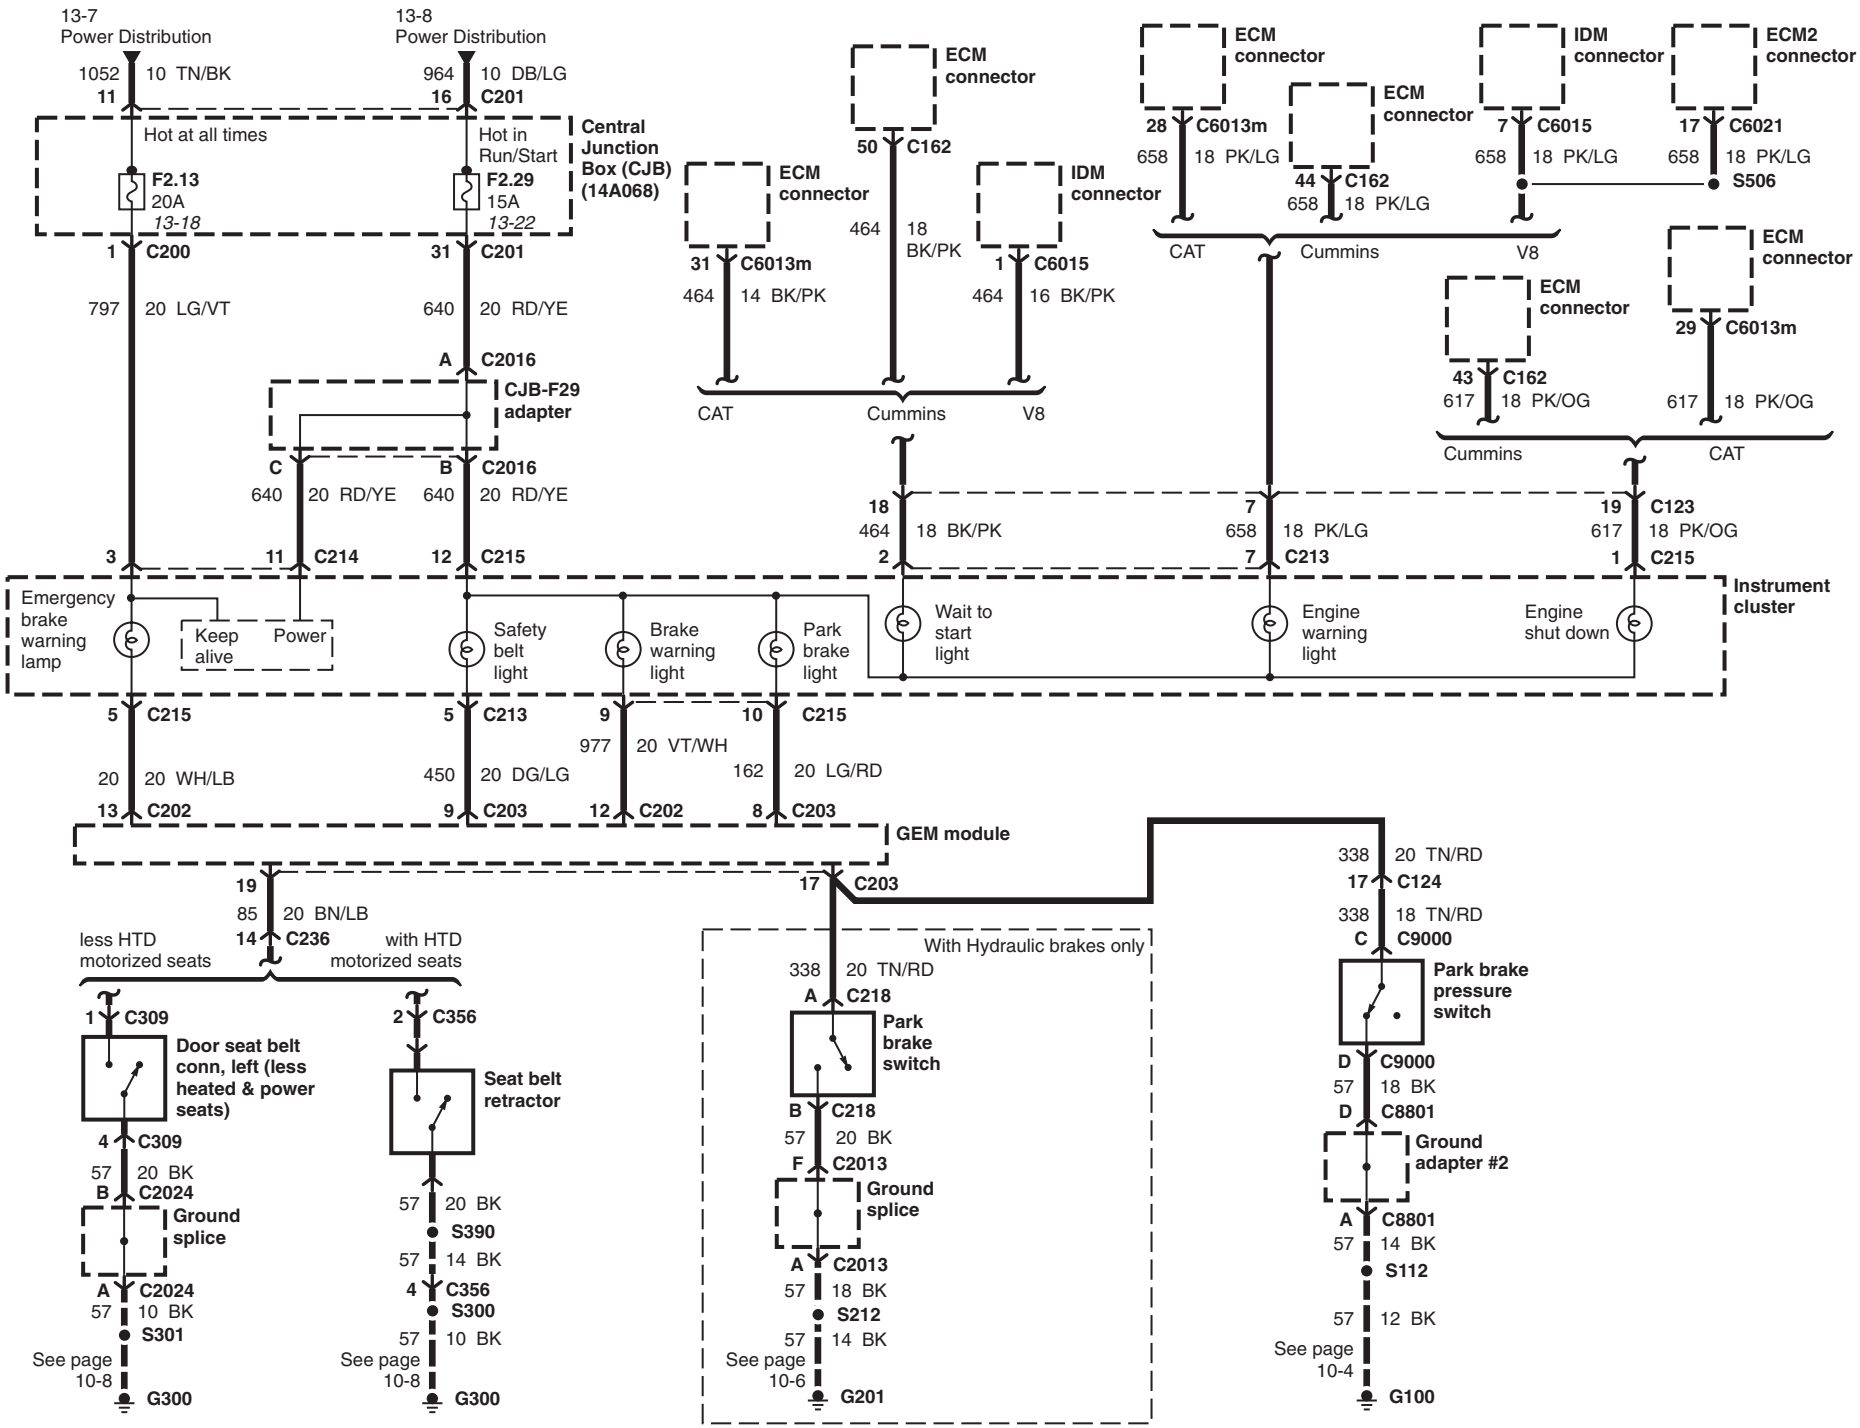
13-7 Power Distribution
13-8 Power Distribution
1052 10 TN/BK
11
964 10 DB/LG
16 C201
Hot at all times
Hot in Run/Start
F2.13 20A 13-18
F2.29 15A 13-22
Central Junction Box (CJB) (14A068)
1 C200
31 C201
797 20 LG/VT
640 20 RD/YE
A C2016
CJB-F29 adapter
C 640 20 RD/YE
B C2016 640 20 RD/YE
3
11 C214
12 C215
ECM connector
50 C162
464 18 BK/PK
ECM connector
31 C6013m
464 14 BK/PK
IDM connector
1 C6015
464 16 BK/PK
CAT
Cummins
V8
ECM connector
28 C6013m
658 18 PK/LG
ECM connector
44 C162
658 18 PK/LG
IDM connector
7 C6015
658 18 PK/LG
ECM2 connector
17 C6021
658 18 PK/LG
S506
CAT
Cummins
V8
ECM connector
43 C162
617 18 PK/OG
ECM connector
29 C6013m
617 18 PK/OG
Cummins
CAT
18 464 18 BK/PK
2
7 658 18 PK/LG
7 C213
19 C123 617 18 PK/OG
1 C215
Instrument cluster
Emergency brake warning lamp
Keep alive
Power
Safety belt light
Brake warning light
Park brake light
Wait to start light
Engine warning light
Engine shut down
5 C215
20 20 WH/LB
13 C202
5 C213 450 20 DG/LG
9 C203
9 977 20 VT/WH
12 C202
10 C215 162 20 LG/RD
8 C203
GEM module
19 85 20 BN/LB
14 C236
less HTD motorized seats
with HTD motorized seats
1 C309
Door seat belt conn, left (less heated & power seats)
4 C309
57 20 BK
B C2024
Ground splice
A C2024 57 10 BK
S301
See page 10-8
G300
2 C356
Seat belt retractor
57 20 BK
S390
57 14 BK
4 C356
S300
57 10 BK
See page 10-8
G300
17 C203
With Hydraulic brakes only
338 20 TN/RD
A C218
Park brake switch
B C218
57 20 BK
F C2013
Ground splice
A C2013
57 18 BK
S212
57 14 BK
See page 10-6
G201
338 20 TN/RD
17 C124
338 18 TN/RD
C C9000
Park brake pressure switch
D C9000
57 18 BK
D C8801
Ground adapter #2
A C8801
57 14 BK
S112
57 12 BK
See page 10-4
G100