C109 (BK)

12B637

Knock sensor
(12A699)

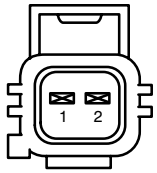

F02107

Pin	Circuit	Circuit function
1	1273 (YE)	Powertrain Control Module (PCM) (12A650), to knock sensor
2	310 (YE/RD)	Knock sensor (12A699)

C110 (BK)

13N052

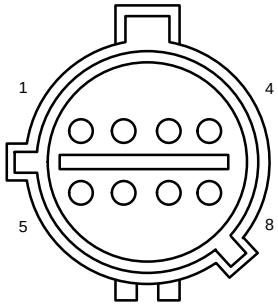

F08052

1) 14 (BN)
2) 12 (LG/BK)
3) 161 (DG/OG)
4) 13 (RD/BK)
5) 57 (BK)
6) 2 (WH/LB)
7) –
8) –

14290

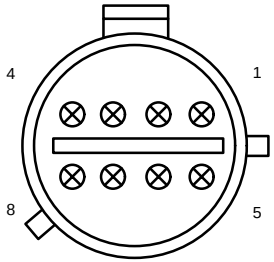

F08050

1) 14 (BN)
2) 12 (LG/BK)
3) 160 (DB/WH)
4) 13 (RD/BK)
5) 57 (BK)
6) 3 (LG/WH)
7) –
8) –

C122 (BK)

14290

Speed control servo
(9C735)

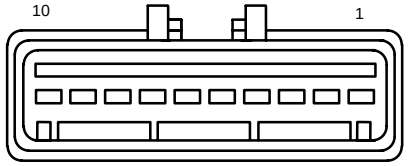

F10011

Pin	Circuit	Circuit function
1	203 (OG/LB)	Cruise set, indicator, control
2	–	not used
3	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
4	810 (RD/LG)	Brake pedal position switch (13480), input
5	916 (LG)	Speed control switch, input
6	848 (DG/OG)	Speed control switch, Ground
7	1087 (OG)	Voltage in Run (overload protected)
8	–	not used
9	248 (TN/OG)	Deactivator switch, input
10	57 (BK)	Ground

C123

14402

EVAP canister
purge valve

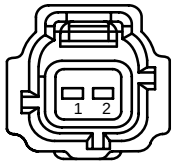

F02105

Pin	Circuit	Circuit function
1	361 (RD)	Voltage supplied in Start and Run (overload protected)
2	101 (GY/YE)	EVAP canister purge valve