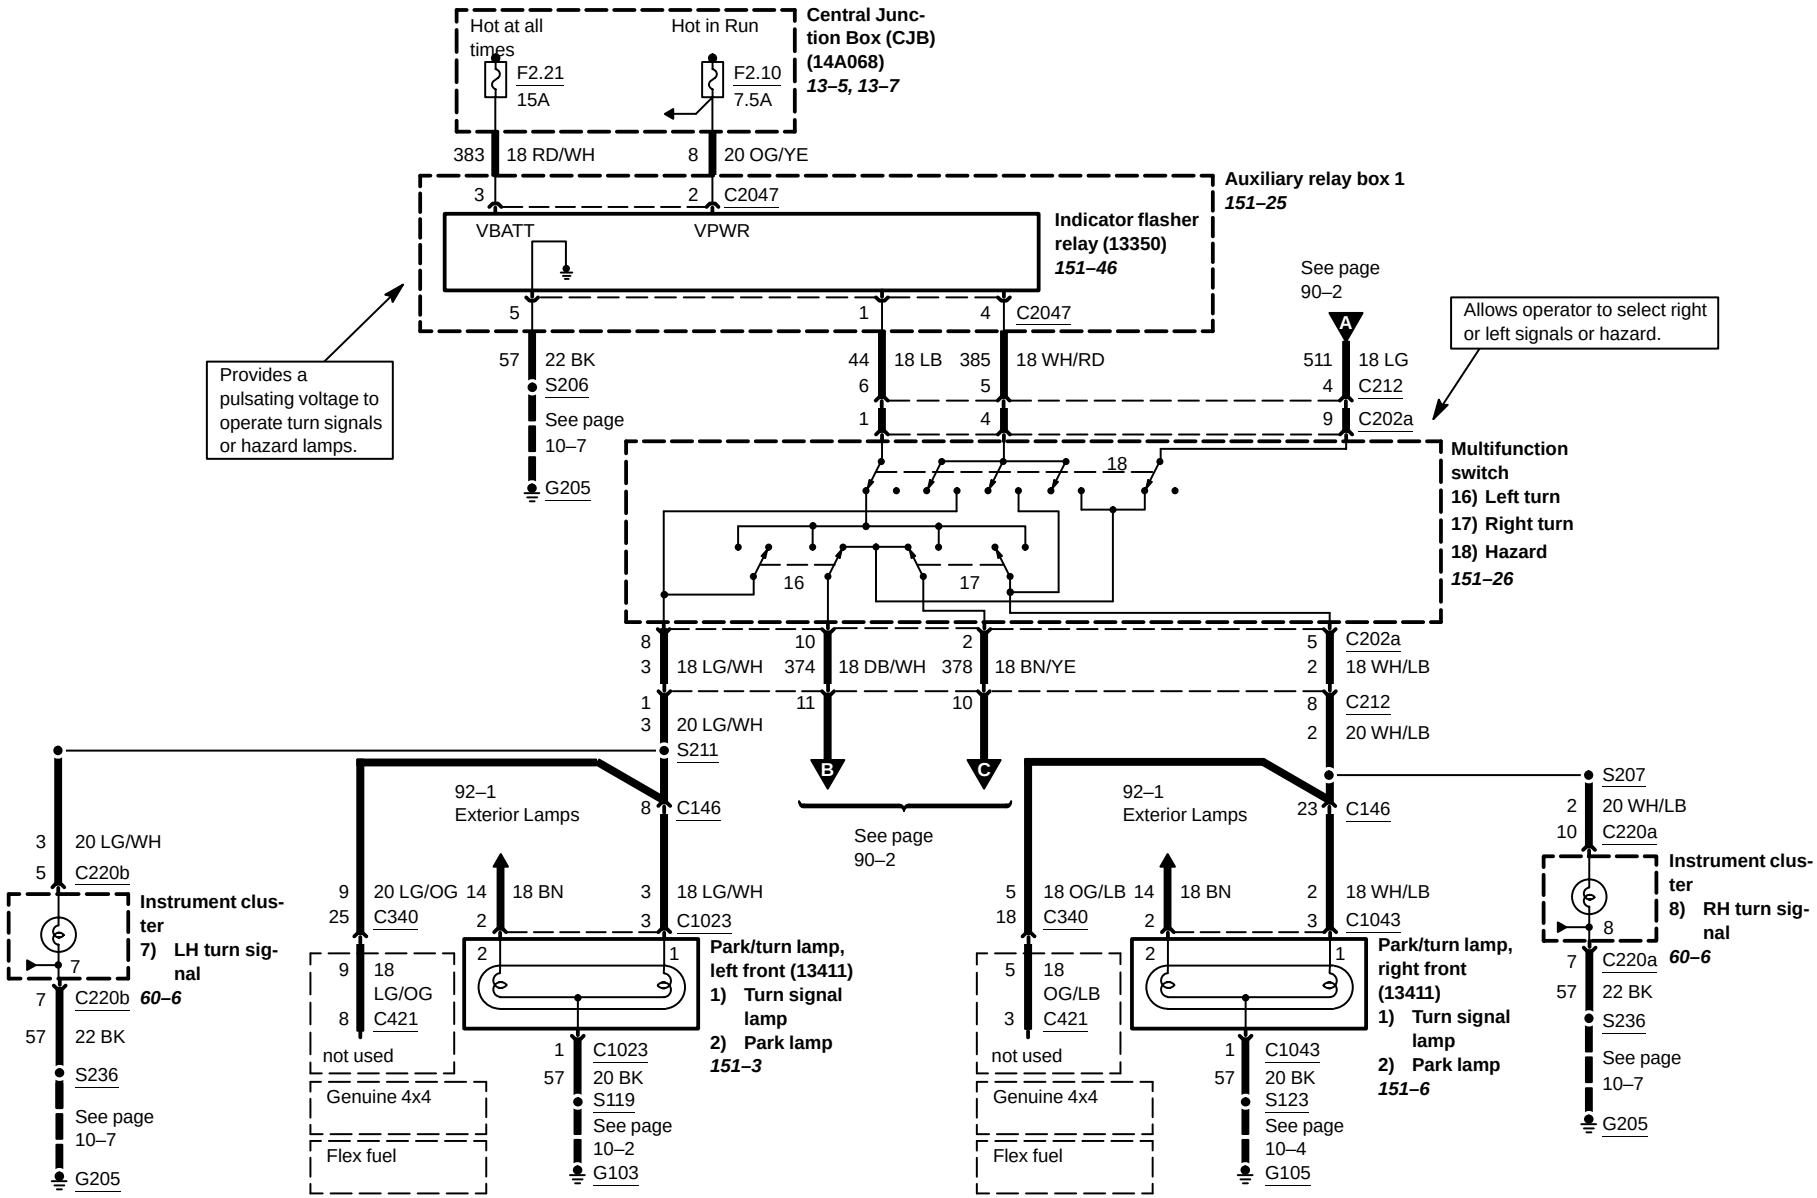
Hot at all times
Hot in Run
F2.21
15A
F2.10
7.5A
Central Junction Box (CJB) (14A068)
13–5, 13–7
383 18 RD/WH
8 20 OG/YE
3
2 C2047
Auxiliary relay box 1
151–25
VBATT
VPWR
Indicator flasher relay (13350)
151–46
5
1
4 C2047
See page 90–2
A
Allows operator to select right or left signals or hazard.
Provides a pulsating voltage to operate turn signals or hazard lamps.
57 22 BK
S206
See page 10–7
G205
44 18 LB
6
385 18 WH/RD
5
511 18 LG
4 C212
1
4
9 C202a
18
Multifunction switch
16) Left turn
17) Right turn
18) Hazard
151–26
16
17
8
3 18 LG/WH
10
374 18 DB/WH
2
378 18 BN/YE
5 C202a
2 18 WH/LB
1
3 20 LG/WH
S211
11
10
8 C212
2 20 WH/LB
B
C
See page 90–2
92–1 Exterior Lamps
8 C146
23 C146
3 20 LG/WH
5 C220b
7
7 C220b
57 22 BK
S236
See page 10–7
G205
Instrument cluster
7) LH turn signal
60–6
9 20 LG/OG
25 C340
14 18 BN
2
3 18 LG/WH
3 C1023
2
1
Park/turn lamp, left front (13411)
1) Turn signal lamp
2) Park lamp
151–3
9 18 LG/OG
8 C421
not used
Genuine 4x4
Flex fuel
1 C1023
57 20 BK
S119
See page 10–2
G103
5 18 OG/LB
18 C340
14 18 BN
2
2 18 WH/LB
3 C1043
2
1
Park/turn lamp, right front (13411)
1) Turn signal lamp
2) Park lamp
151–6
5 18 OG/LB
3 C421
not used
Genuine 4x4
Flex fuel
1 C1043
57 20 BK
S123
See page 10–4
G105
S207
2 20 WH/LB
10 C220a
8
7 C220a
57 22 BK
S236
See page 10–7
G205
Instrument cluster
8) RH turn signal
60–6