C523

14631

Y28
Speaker, left front
(18808)

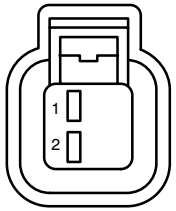

F02069

Pin	Circuit	Circuit function
1	8-MD10 (WH/BK)	Speaker, left front (18808), Audio signal positive
2	10-MD10 (GY/BK)	Speaker, left front (18808), Audio signal negative

C524

14631

M80
Power window motor, driver side front
(23395)

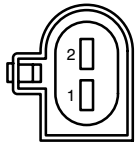

F02065

Pin	Circuit	Circuit function
1	33-AJ26 (YE)	Switched between: Battery voltage, Ground or Open
2	32-AJ26 (WH)	Switched between: Battery voltage, Ground or Open

C525

14631

A172
Door lock unit, driver side front
(5421813)

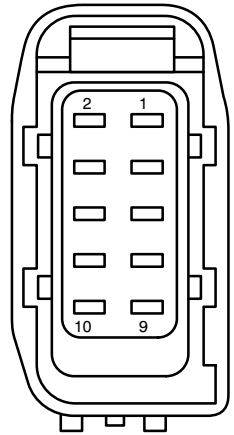

F16030

Pin	Circuit	Circuit function
1	–	not used
2	33-AA10 (YE/BK)	Switched between: Battery voltage, Ground or Open
3	–	not used
4	–	not used
5	31S-AA79 (BK/WH)	Ground, Switched
6	31-AA58B (BK)	Ground
7	31S-AA78 (BK/BU)	Ground, Switched
8	31S-GL46 (BK/YE)	Ground, Switched
9	–	not used
10	32-AA11 (WH/VT)	Switched between: Battery voltage, Ground or Open