C602

14A005

Door ajar switch, passenger side front (14018)

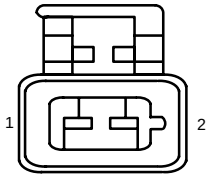

F02379

Pin	Circuit	Circuit function
1	31-AA58 (BK)	Ground
2	30S-GL47 (RD/BU)	Voltage supplied at all times (not overload protected), switch

C603

14A005

Door lock unit, passenger side front (5421812)

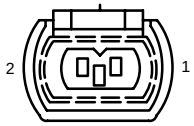

F02116

Pin	Circuit	Circuit function
1	33-AA20 (YE/BU)	Switched between: Battery voltage, Ground or Open
2	32-AA21 (WH/GN)	Switched between: Battery voltage, Ground or Open

C604

14A005

Window adjust switch, passenger side

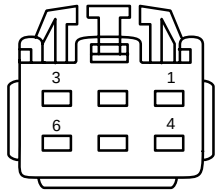

F06213

Pin	Circuit	Circuit function
1	7S-AJ48 (YE/VT)	Voltage DC supplied at all times (sensor), switch
2	10-AJ18 (GY/WH)	Signal 2 (Y–direction, reverse, downward)
3	7-AJ18 (YE/VT)	Voltage DC supplied at all times (sensor)
4	–	not used
5	8-AJ18 (WH/VT)	Sensor signal
6	7S-AJ47 (YE/BK)	Voltage DC supplied at all times (sensor), switch