C331

14A699

N446
Lumbar adjust
switch, right front

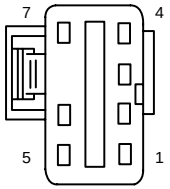

F07097

Pin	Circuit	Circuit function
1	1094 (PK)	Power lumbar switch, right, to, Front seat lumbar compressor motor
2	517 (BK/WH)	Voltage supplied at all times (overload protected)
3	1094 (PK)	Power lumbar switch, left, to, Front seat lumbar compressor motor
4	–	not used
5	–	not used
6	–	not used
7	1097 (BN)	Power lumbar switch, right, to, Front seat lumbar compressor motor

C336

14A699

M235
Passenger seat
lumbar compressor
motor (65500)

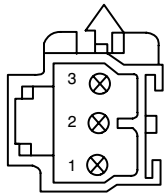

F03283

Pin	Circuit	Circuit function
1	1094 (PK)	Power lumbar switch, right, to, Front seat lumbar compressor motor
2	1097 (BN)	Power lumbar switch, right to, Front seat lumbar compressor motor
3	57 (BK)	Ground

C338

14A699

M234
Passenger seat
backrest motor



F02130

Pin	Circuit	Circuit function
1	918 (GY)	Passenger seat backrest motor, Up
2	919 (GY/BK)	Passenger seat backrest motor, Down

C352

14A699

N421
Power seat switch,
left

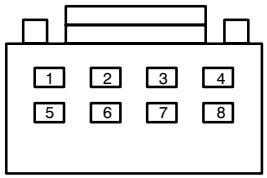

Pin	Circuit	Circuit function
1	979 (RD/LB)	Front height motor, Up
2	982 (YE/LG)	Rear height motor, Down
3	983 (RD/LG)	Rear height motor, Up
4	990 (YE/LB)	Front height motor, Down
5	57 (BK)	Ground
6	980 (YE/WH)	Fwd/Rwd motor, Rearward
7	981 (RD/WH)	Fwd/Rwd motor, Forward
8	517 (BK/WH)	Voltage supplied at all times (overload protected)