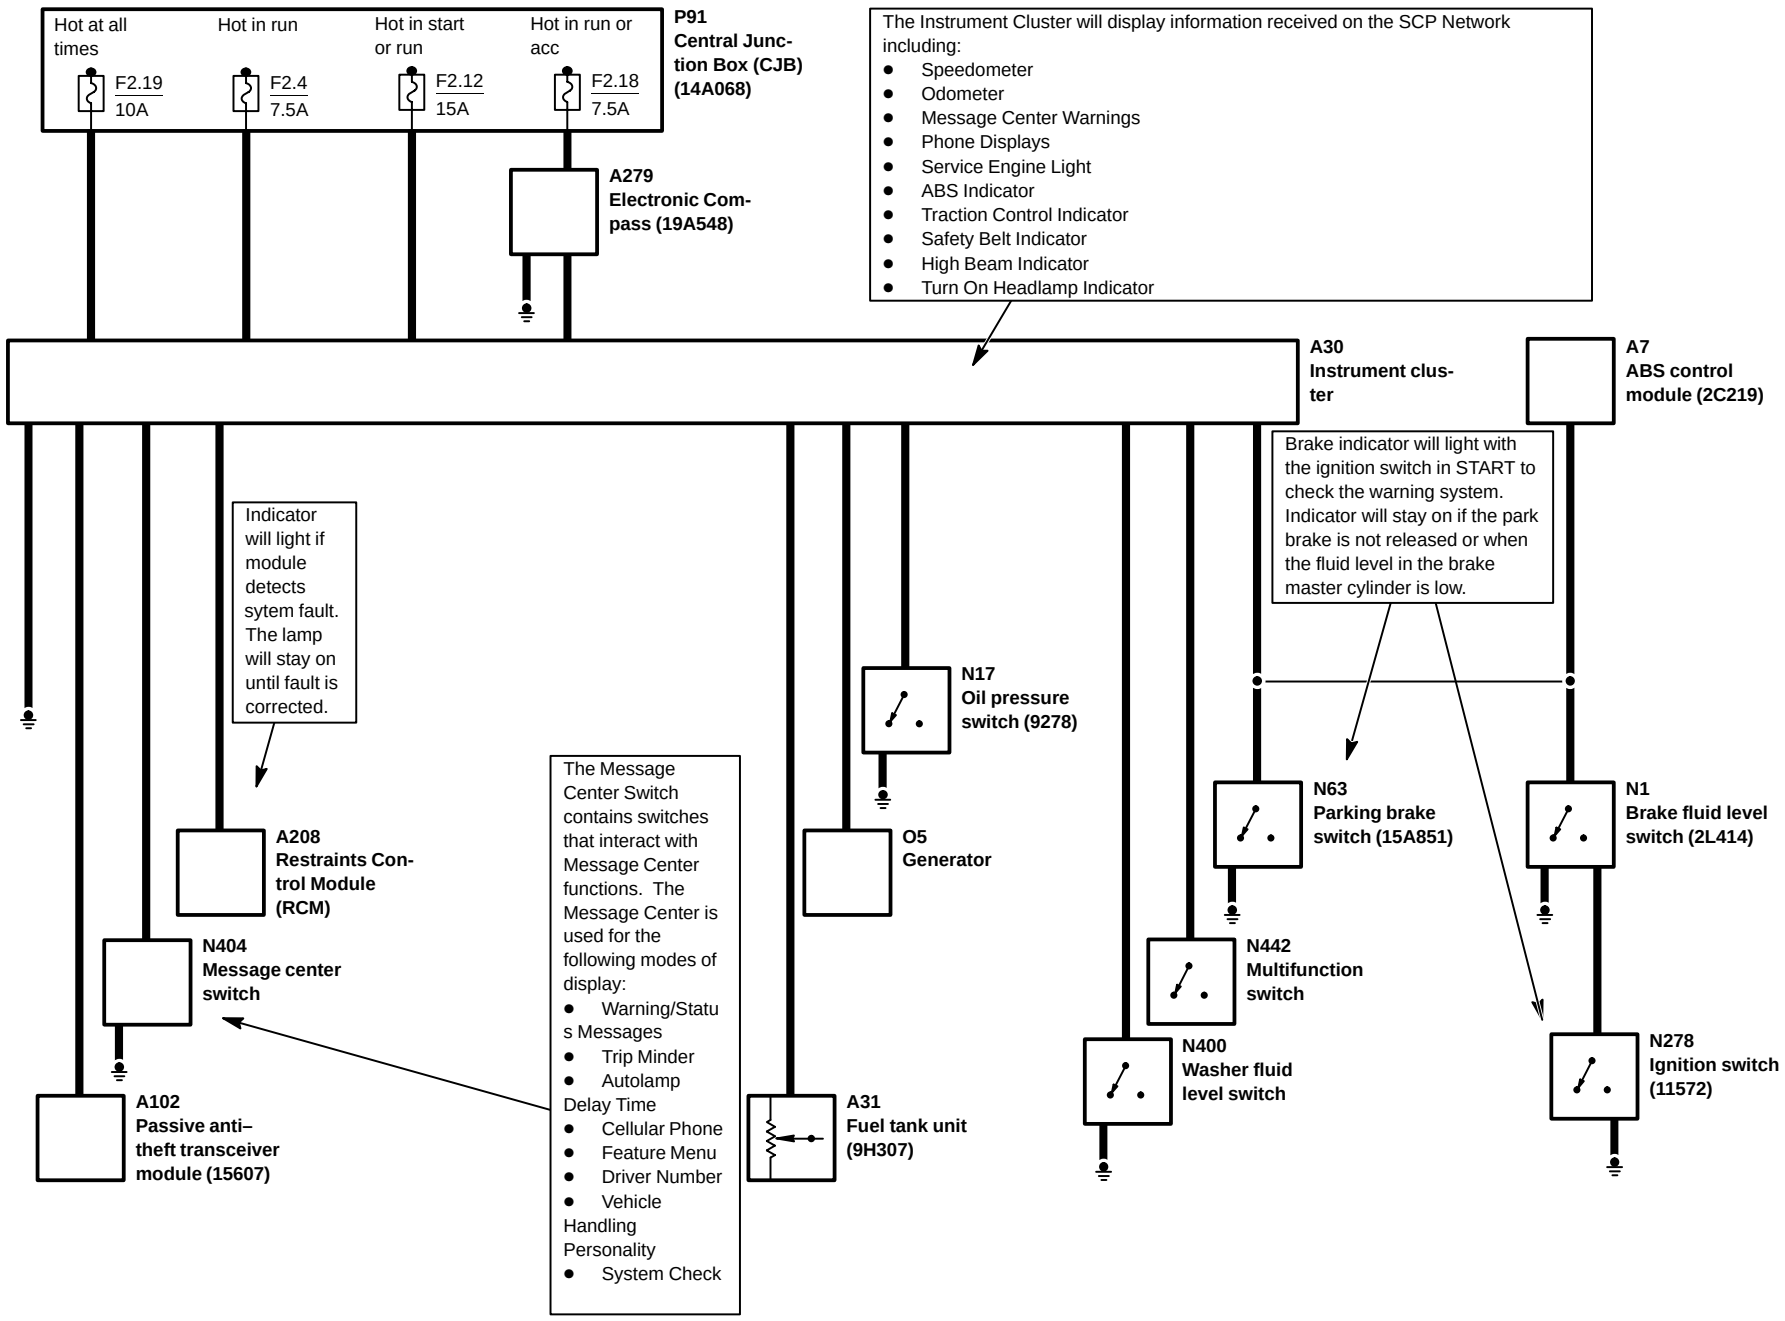
Hot at all times
Hot in run
Hot in start or run
Hot in run or acc
F2.19 10A
F2.4 7.5A
F2.12 15A
F2.18 7.5A
P91 Central Junction Box (CJB) (14A068)
A279 Electronic Compass (19A548)
The Instrument Cluster will display information received on the SCP Network including:
Speedometer
Odometer
Message Center Warnings
Phone Displays
Service Engine Light
ABS Indicator
Traction Control Indicator
Safety Belt Indicator
High Beam Indicator
Turn On Headlamp Indicator
A30 Instrument cluster
A7 ABS control module (2C219)
Brake indicator will light with the ignition switch in START to check the warning system. Indicator will stay on if the park brake is not released or when the fluid level in the brake master cylinder is low.
Indicator will light if module detects sytem fault. The lamp will stay on until fault is corrected.
N17 Oil pressure switch (9278)
A208 Restraints Control Module (RCM)
O5 Generator
N63 Parking brake switch (15A851)
N1 Brake fluid level switch (2L414)
N404 Message center switch
The Message Center Switch contains switches that interact with Message Center functions. The Message Center is used for the following modes of display:
Warning/Status Messages
Trip Minder
Autolamp Delay Time
Cellular Phone
Feature Menu
Driver Number
Vehicle Handling Personality
System Check
N442 Multifunction switch
N400 Washer fluid level switch
N278 Ignition switch (11572)
A102 Passive anti–theft transceiver module (15607)
A31 Fuel tank unit (9H307)