C1120

12B637

B43
Crankshaft position sensor

F02109

Pin	Circuit	Circuit Function
1	350 (GY)	Crankshaft position sensor +
2	349 (DB)	Crankshaft position sensor -

C1121

12B637

N96
Power steering pressure switch

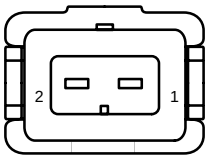

F02089

Pin	Circuit	Circuit Function
1	330 (YE/LG)	Power steering pressure switch, input
2	359 (GY/RD)	signal, return

C1126

14290

E32
Side lamp, right front

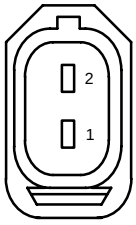

F02108

Pin	Circuit	Circuit Function
1	14 (BN)	Power, Exterior lamps
2	57 (BK)	Ground

C1127

14290

E40
Side lamp, left front

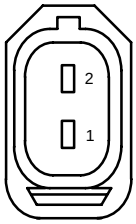

F02108

Pin	Circuit	Circuit Function
1	14 (BN)	Power, Exterior lamps
2	57 (BK)	Ground

C1132

12B637

T10
Ignition coil A

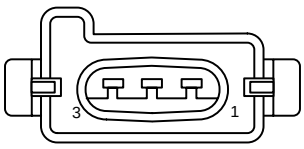

F03203

Pin	Circuit	Circuit Function
1	95 (TN/WH)	Ignition coil
2	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
3	96 (TN/OG)	Ignition coil

C1133

12B637

T11
Ignition coil B

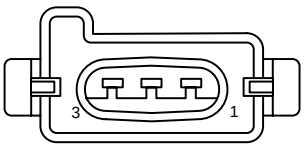

F03203

Pin	Circuit	Circuit Function
1	97 (TN/LG)	Ignition coil
2	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
3	98 (TN/LB)	Ignition coil

C1134

12B637

T1
Ignition coil

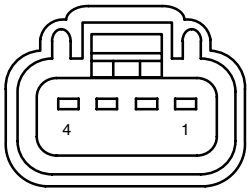

F04221

Pin	Circuit	Circuit Function
1	95 (TN/WH)	Ignition coil
2	97 (TN/LG)	Ignition coil
3	96 (TN/OG)	Ignition coil
4	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)